













ASSEMBLY INSTRUCTION




Model : V11 - 03


HARDWARE

<p>A</p>  <p>PLASTIC DOWEL M8 X 25MM 1 X 14</p>	<p>B</p>  <p>C/B SCREW M3.5 X 12MM 1 X 66</p>	<p>C</p>  <p>C/B SCREW M4 X 25MM 1 X 10</p>	<p>D</p>  <p>C/B SCREW M4 X 32MM 1 X 50</p>	<p>E</p>  <p>CSK CAP SCREW M6 X 40 1 X 2</p>	<p>F</p>  <p>ALLEN KEY M4 1 X 1</p>	<p>G</p>  <p>G1 G2 MINIFIX 1 X 22 SET</p>	<p>H</p>  <p>POWER PIN 1 X 165</p>	<p>i</p>  <p>U STUP 1 X 2</p>	
<p>J</p>  <p>L / R STUP 1 X 2 SET</p>		<p>K</p>  <p>DRAWER SLIDE 14" 1 X 5 SET</p>							


COMPLETE

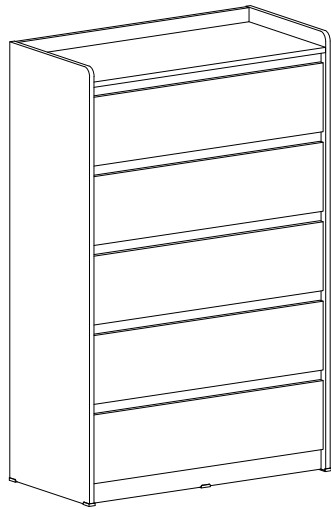


PART LIST

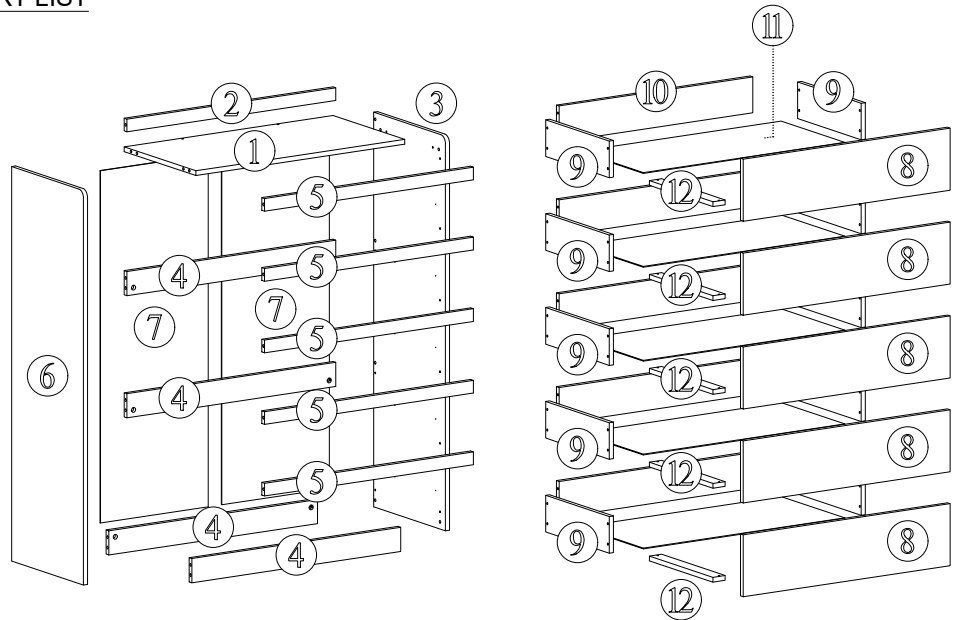


STEP 1

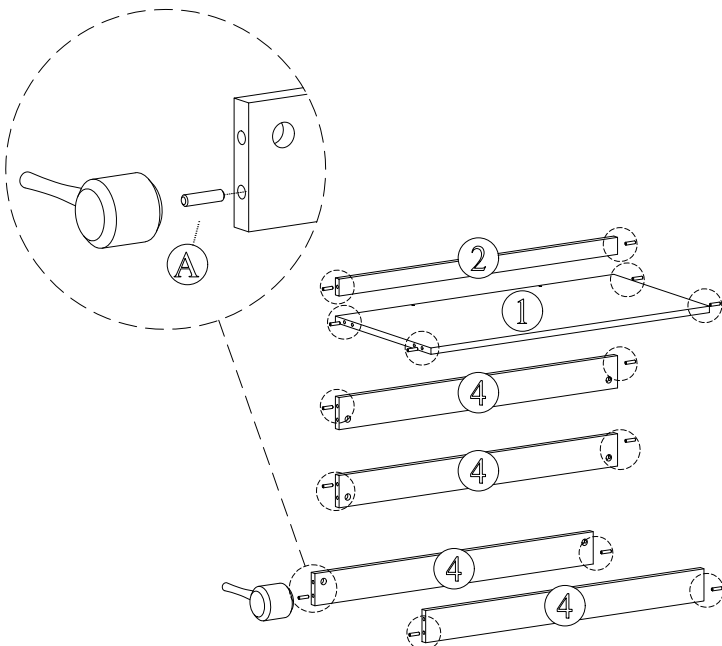

STEP 2

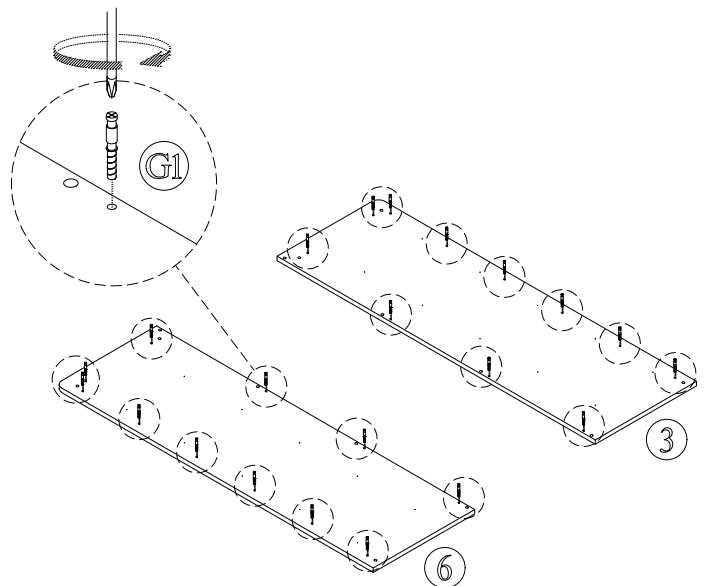


ASSEMBLY INSTRUCTION




Model : V11 - 03


STEP 3

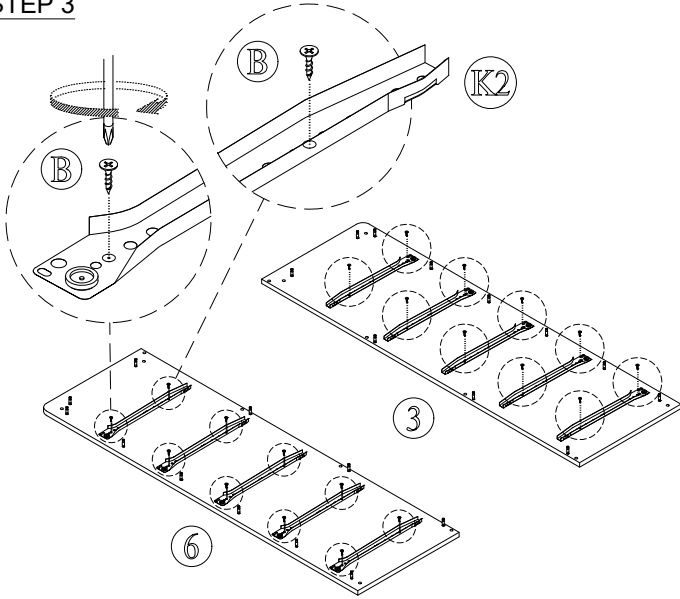


STEP 4

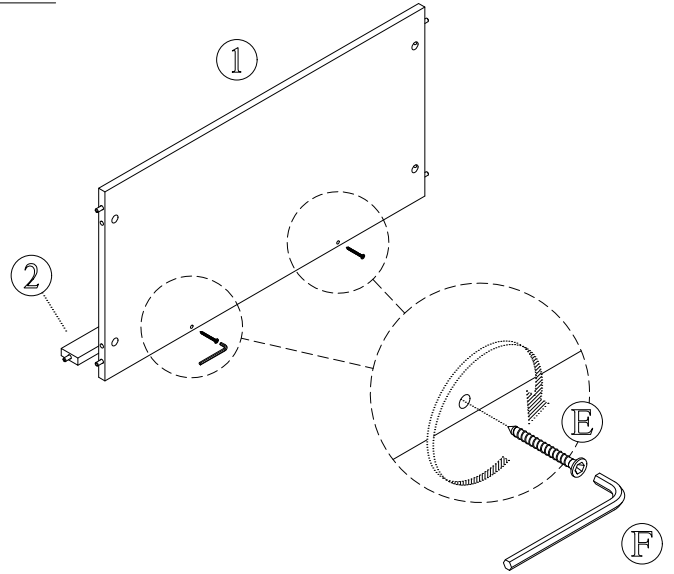


STEP 5

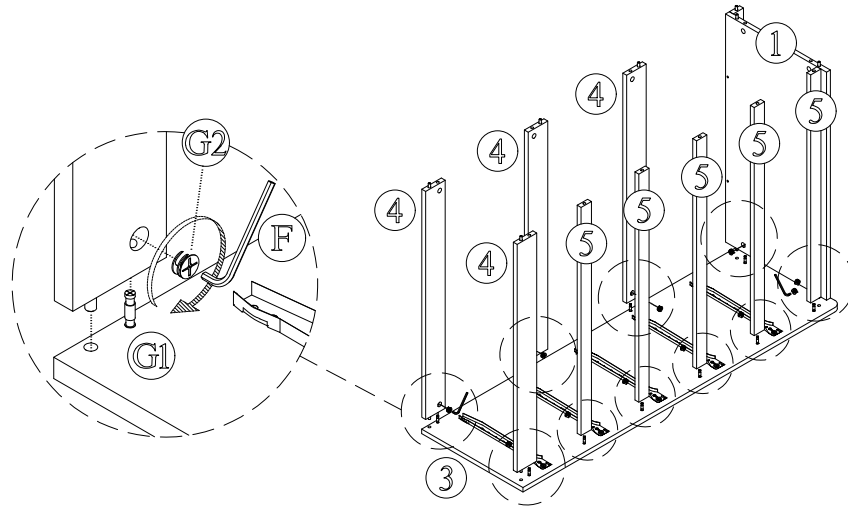

STEP 6


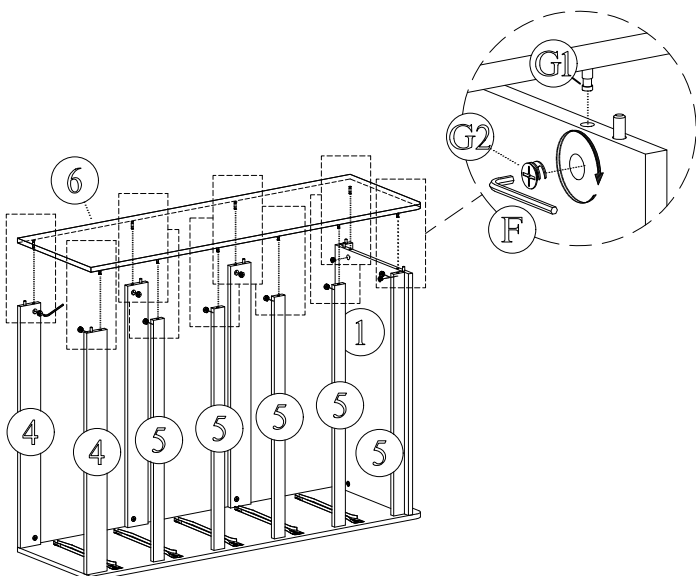


STEP 7

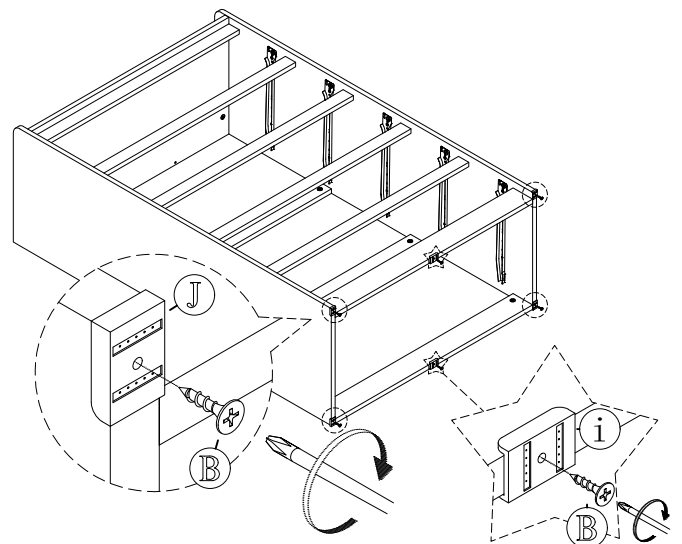


• We encourage our end-user to make good use of the anti-dipping set provided in the furniture.

ASSEMBLY INSTRUCTION




Model : V11 - 03

STEP 8

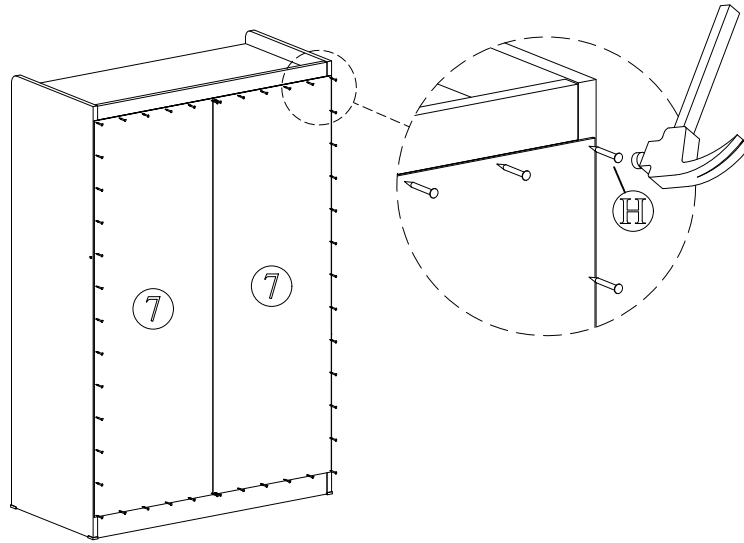


STEP 9

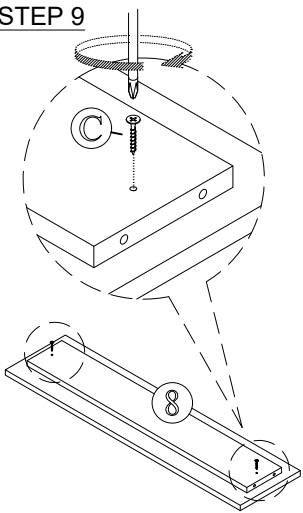


x 5

STEP 10

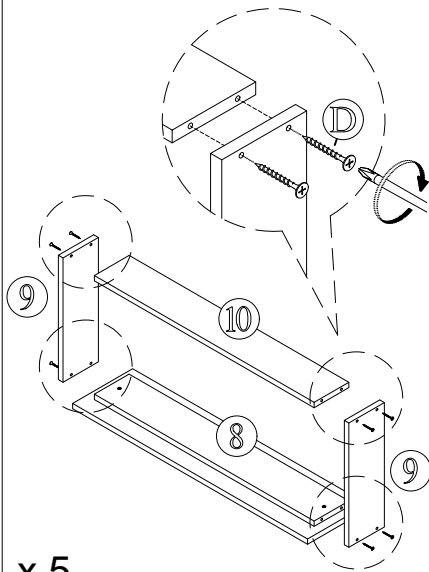


x 5

STEP 11

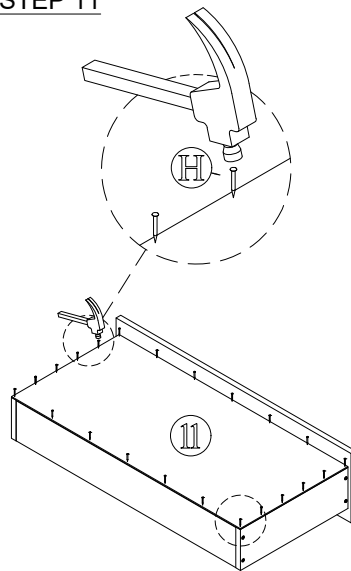


x 5

STEP 12

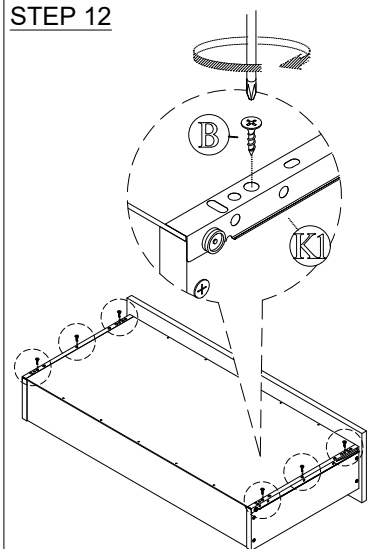


x 5

STEP 13

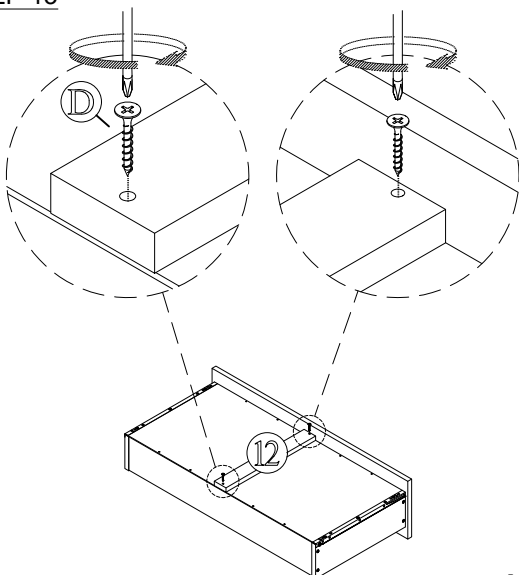

x 5

STEP 14

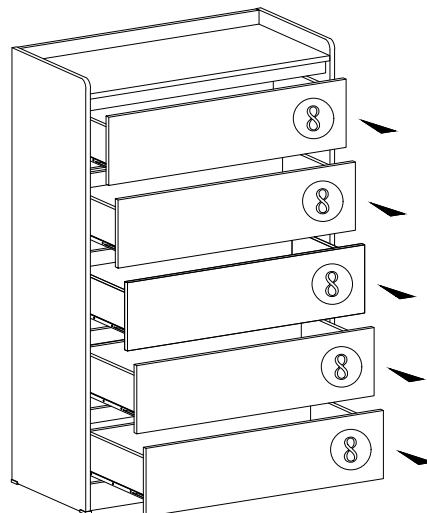

x 5

• We encourage our end-user to make good use of the anti-dipping set provided in the furniture.