



# ASSEMBLY INSTRUCTION




Model : V11-01( 7680 )

HARDWARE	A	B	C	D	E	F	G
	PLASTIC DOWEL M8 X 25MM 1 X 8	C/B SCREW M4 X 16MM 1 X 52	C/B SCREW M4 X 32MM 1 X 8	NAIL LEG 1 X 18	ALLEN KEY M5 1 X 1	L - BRACKET ( 45 MM ) 1 X 4	G1 BED BRACKET 1 X 2 SET


## COMPLETE

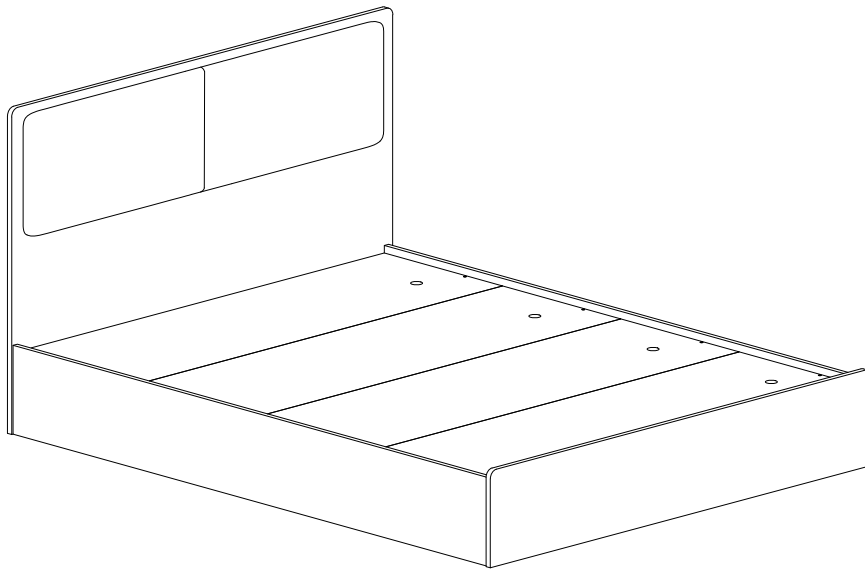

## PART LIST

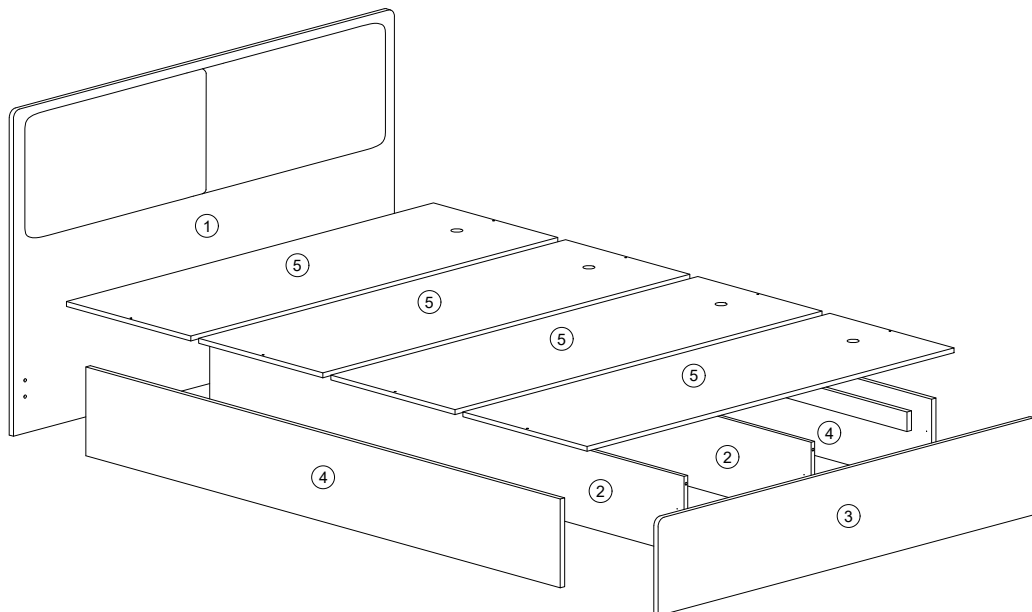


# ASSEMBLY INSTRUCTION




Model : V11-01( 7680 )


## STEP 1

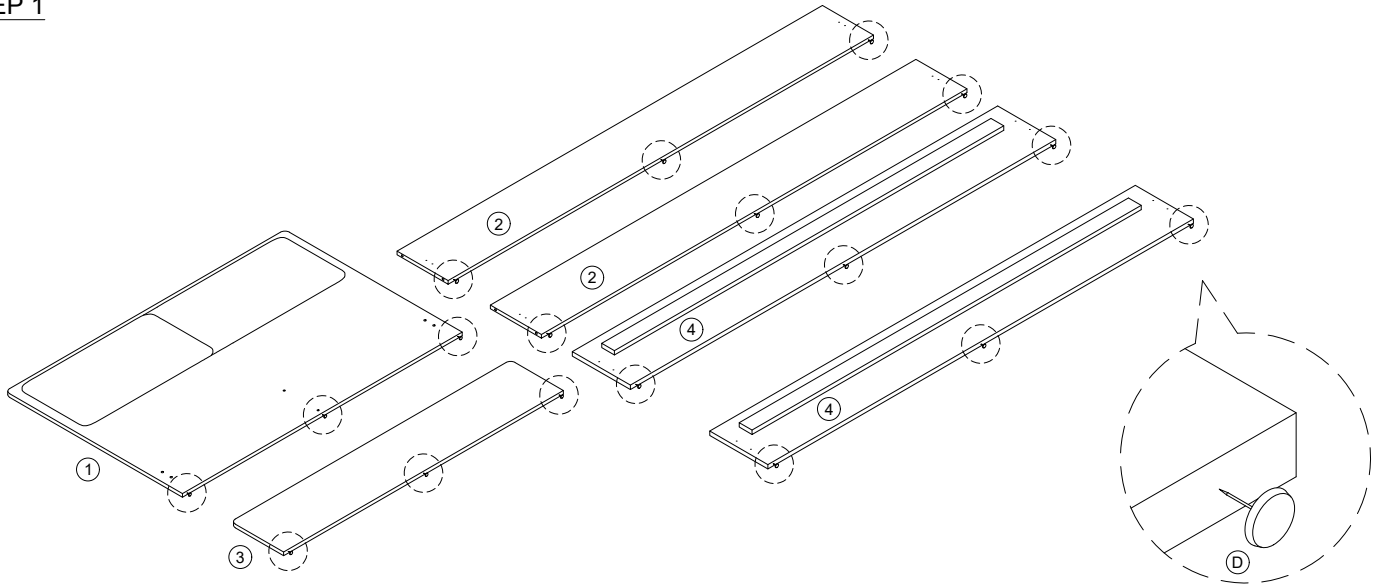


## STEP 2

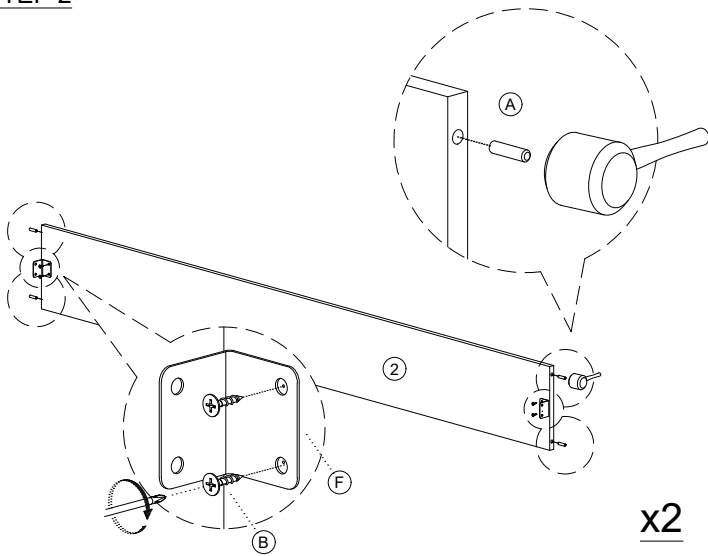


## STEP 3

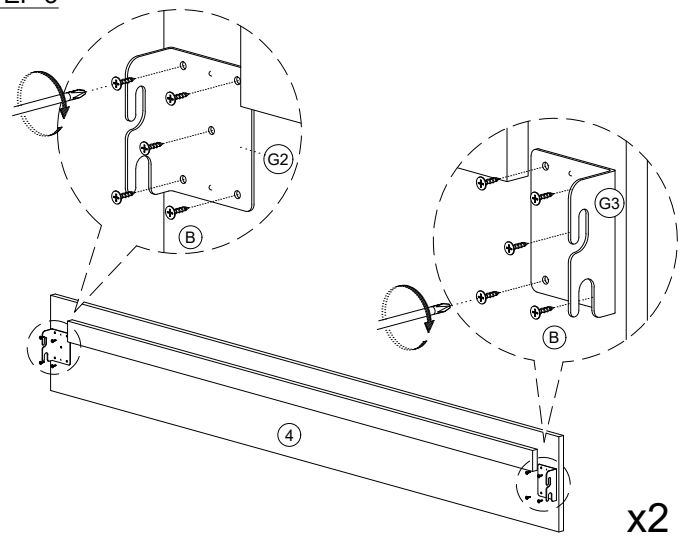

## STEP 4

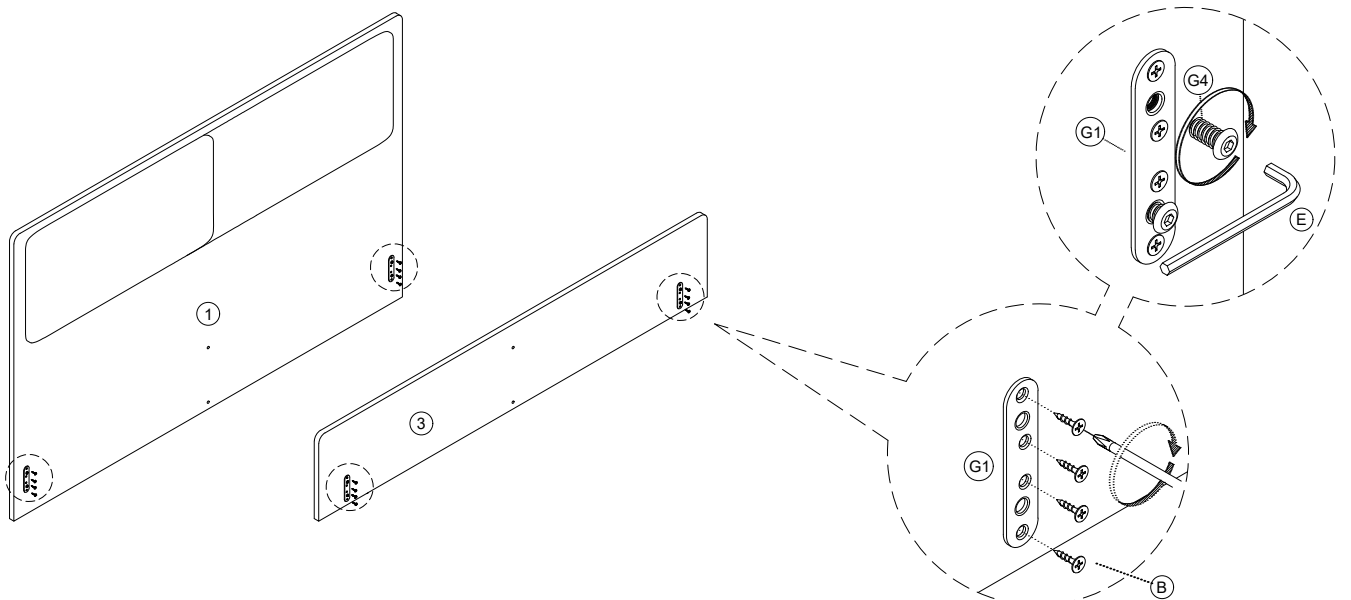


# ASSEMBLY INSTRUCTION




Model : V11-01( 7680 )

## STEP 5

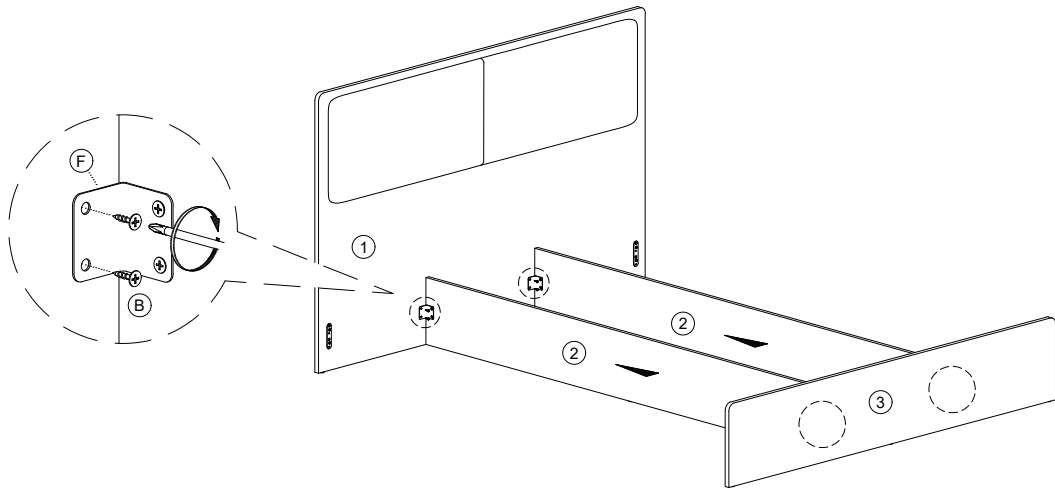

## STEP 6

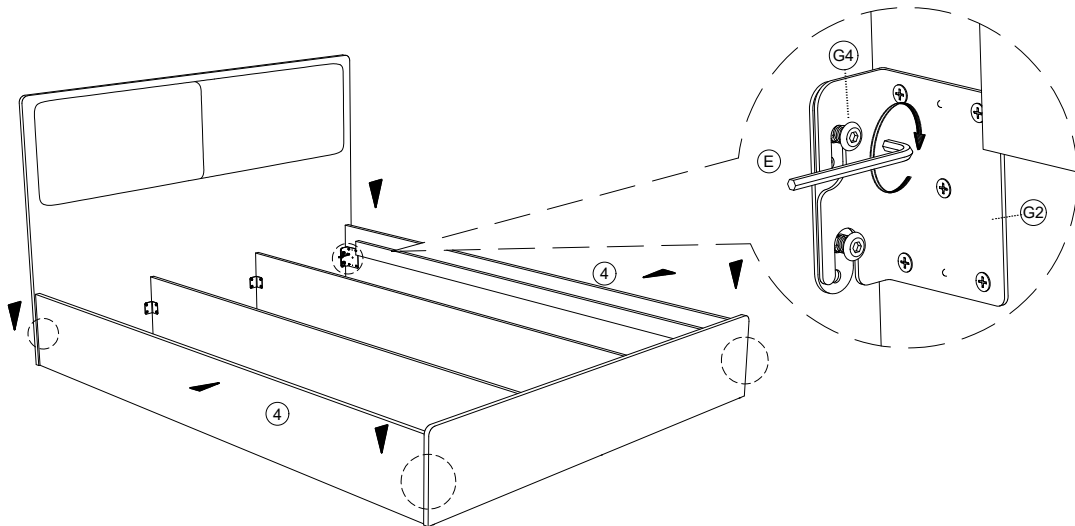

## STEP 7

