


S1 SWIVEL MOUNT QUICK INSTALL GUIDE



Items Included:

- Swivel Mounts - Qty 2
- 5/16-18 bolts - Qty-2
- Lock washer - Qty-2

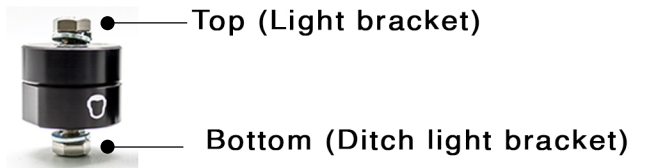

*****DO NOT USE THE SWIVEL MOUNTS WITHOUT THE LOCK WASHERS*****

LOCK WASHERS DISTRIBUTE THE LOAD AND PREVENT BOLTS FROM LOOSENING

- 1- To start installation: Remove Bolts and Lock Washers from the ends of the Swivel Mount.
- 2 - Locate your Light Pod Bracket and place on the top part of the Swivel Mount.



Top side.



Locate light bracket.



- 3 - Attach Light Pod Bracket to Swivel Mount with a 5/16-18 Bolt and a Lock Washer
**** DO NOT FULLY TIGHTEN THE LIGHT BACKET UNTIL STEP 5 ****

- 4 - Locate your Ditch Light Bracket mounting hole and place the bottom of the Swivel Mount on top of the *ditch light bracket*. The logo must be facing forward.



In this step:

***Bottom of swivel mount:* Fully tighten down swivel mount to the *ditch light brackets*.**

***Top of swivel mount:* The *light pod mounting bracket* is still not fully tighten down.**

- 5 - Position Light Pod Bracket to face forward and now fully tighten the top Bolt



To fully tighten the 5/16-18 top Bolt with the Lock Washer, hold the Light Pod Bracket in place. This will prevent misalignment when attaching to the Swivel Mount.

- 6 - Last step: Mount your light pod with the associated mounting light bracket.

