Fuel Pump Hardwire Installation Kit FPHWK






Get the most out of your DW high flow fuel pump by ensuring it gets the voltage it needs. Old, compromised OE wiring can limit the voltage your fuel pump receives. Our hardwire kit includes everything you need to safely, easily, and reliably wire your pump directly to your battery, ensuring no matter how hard you push your pump, your wiring will be up to the task. We especially recommend this kit for use in cars over 10 years old, cars making over 400whp, and cars which were originally not designed for high horsepower.

Relay Diagram

Specifications

Ground Wire Power Wire Relay Spec Fuse Spec Socket Spec 15' 12awg SLX Automotive Wire15' 12awg SLX Automotive Wire40-amp Bosch Automotive25-amp ATO Bladed Fuse4-lead (Color Coded)

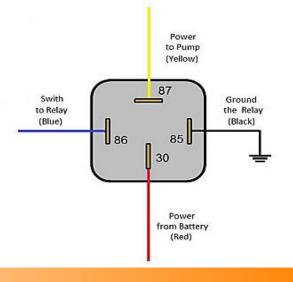

Connections

Relay Socket Wire	Purpose	Connects To
Black (85)	Ground to Relay	Chassis (GND)
Yellow (87)	Power to Pump	"Pump Side" (+) Lead
Blue (86)	Switch to Relay	"Harness Side" (+) Lead
Red (30)	Power from Battery	Battery Terminal (+)

THIS PRODUCT MAY BE USED SOLELY ON VEHICLES USED IN SANCTIONED COMPETITION WHICH MAY NEVER BE USED UPON A PUBLIC ROAD OR HIGHWAY, UNLESS PERMITTED BY SPECIFIC REGULATORY EXEMPTION

DeatschWerks, LLC 405-217-0701 techsupport@deatschwerks.com REV 10-31-16