




99-04 GM Truck Module w/ PTFE Lines

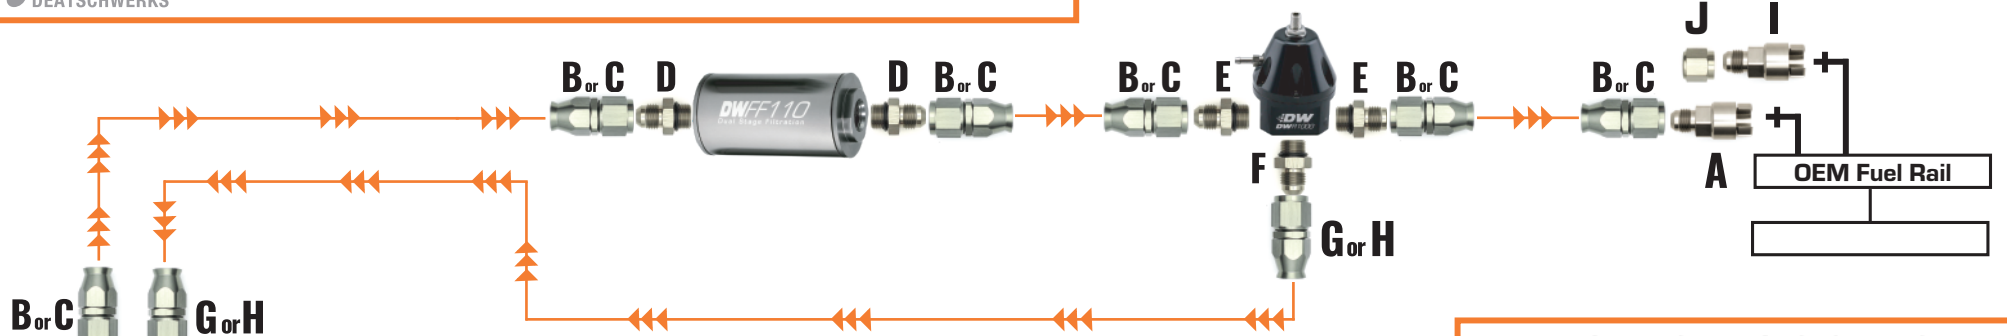


PN: 9-401-603-7011

- | | | | |
|--------------------|---|--------------------|--|
| A 6-02-0104 | 8AN Male Flare to 3/8" Female EFI Quick Connect Adapter | F 6-02-0404 | 6AN ORB Male to 6AN Male Flare Adapter (incl O-Ring) |
| B 6-02-0854 | 8AN Female Swivel Straight Hose End PTFE | G 6-02-0850 | 6AN Female Swivel STRAIGHT Hose End PTFE |
| C 6-02-0856 | 8AN Female Swivel 90-degree Hose End PTFE | H 6-02-0852 | 6AN Female Swivel 90-degree Hose End PTFE |
| D 6-02-0402 | 8AN ORB Male to 8AN Male Flare Adapter (incl O-Ring) | I 6-02-0121 | 6AN Male Flare to 5/16" Female EFI Quick Connect Adapter |
| E 6-02-0405 | 6AN ORB Male to 8AN Male Flare Adapter (incl O-Ring) | J 6-02-0714 | 6AN Female Flare Cap |

For installation assistance call 405 217 0701 or email techsupport@deatschwerks.com



99-04 GM Truck Module w/ CPE Lines

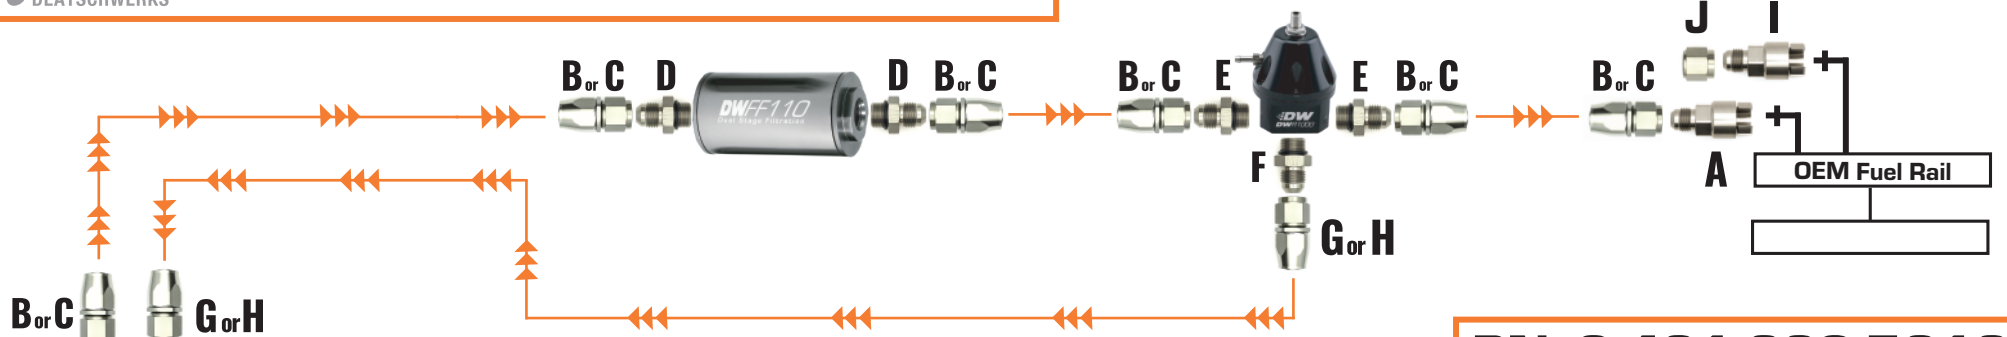

PN: 9-401-603-7010

- | | | | |
|--------------------|---|--------------------|--|
| A 6-02-0104 | 8AN Male Flare to 3/8" Female EFI Quick Connect Adapter | F 6-02-0404 | 6AN ORB Male to 6AN Male Flare Adapter (incl O-Ring) |
| B 6-02-0805 | 8AN Female Swivel Straight Hose End CPE | G 6-02-0801 | 6AN Female Swivel STRAIGHT Hose End CPE |
| C 6-02-0807 | 8AN Female Swivel 90-degree Hose End CPE | H 6-02-0803 | 6AN Female Swivel 90-degree Hose End CPE |
| D 6-02-0402 | 8AN ORB Male to 8AN Male Flare Adapter (incl O-Ring) | I 6-02-0121 | 6AN Male Flare to 5/16" Female EFI Quick Connect Adapter |
| E 6-02-0405 | 6AN ORB Male to 8AN Male Flare Adapter (incl O-Ring) | J 6-02-0714 | 6AN Female Flare Cap |

For installation assistance call 405 217 0701 or email techsupport@deatschwerks.com