


**LID-LOK® 100565 INSTALLATION INSTRUCTIONS**  
**AUTOMATIC CABLE LID-LOK® WITH TAB AND CAM LOCK**



**START**

Shown above is the Automatic **LID-LOK** 100565.

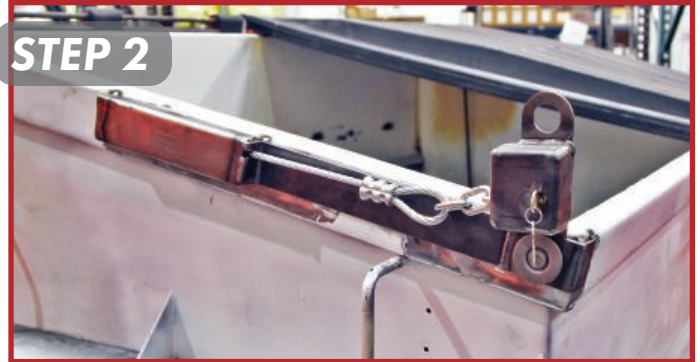

**STEP 2**

Tack weld the 100565 to the banding with the front tab flush to the front banding, as shown above.



**STEP 3**

Tack weld the right arm back plate to the edge of the container, as shown above.



**STEP 4**

On the left arm, turn the key to the right, releasing the chain. This will allow you to open the **LID-LOK**. Using the front of the container as your level, cut the 1" O.D. pipe the exact length you need, and tack the pipe to the left arm as shown above. Make sure that the arms are vertical, allowing the pipe to move up and down freely.



**STEP 5**

Tack weld the other side of the pipe to the right arm, as shown above.



**STEP 6**

Once you are happy with the movement of the container lock, weld firmly into place.

*For lids that overhang on the front or sides please call 1-800-778-2217 so we can go over alternative options with you*