



DID NOT FIT?

If your kit did not fit, please confirm the following measurements, and send this information to us at: Katherine@rpccomponents.com along with the year, make and model of your RV and what Air conditioner you have.

Thank you!

RV Airflow Team

Measurement Guide

Measurement A: From the top of the plenum to the top of the duct opening.


Measurement B: From the top of the duct opening to the bottom of the duct opening.

Measurement C: From the bottom of the duct opening to the top of the mounting bracket.

Measurement D: From the top of the plenum to the top of the mounting bracket (overall plenum depth.)

$$A+B+C=D$$

If the Metal Mounting bracket (4 Long Lag bolts) is removed when the measurements are taken please let us know. Either way is fine we just need to know if it was on or off.

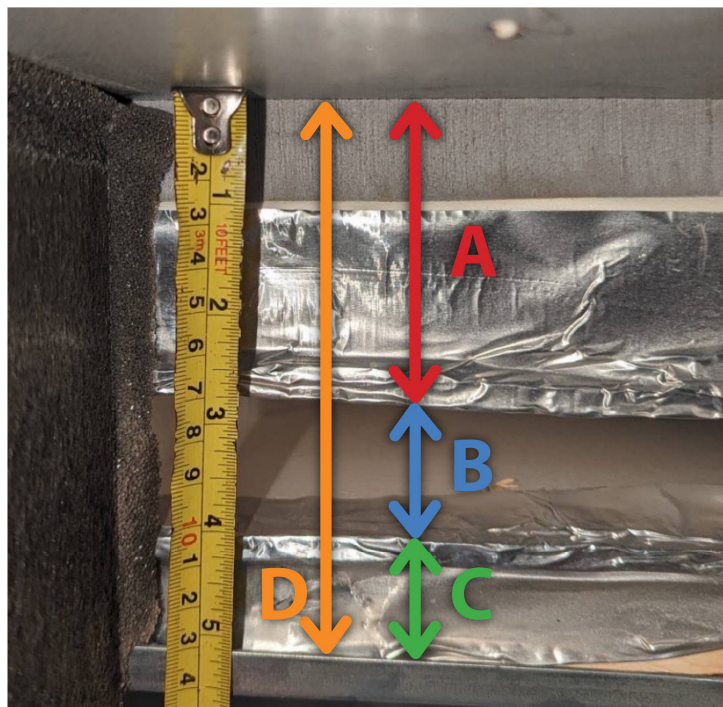

Cut here and use this ruler to measure your plenum



DID NOT FIT?

Duct Inserts

If your RV's ducting is smaller than 7.5 inches wide, a slight modification may need to be done to our standard size duct inserts. Proper fit can be achieved by trimming the width of our insert to match you ducting width.


Ⓐ



Ⓑ



Ⓒ

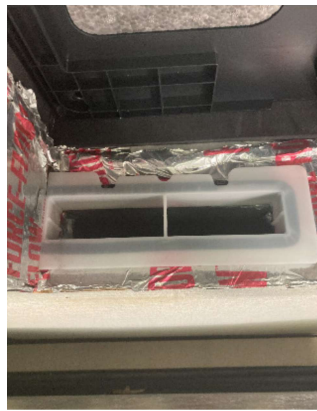

If you have any questions regarding trimming the duct insert please refer to the install video on our website at RVAirflow.com under the 'How it works tab'.

