

## Suggested Supplies




**Cutting Tools:** Utility knife or most power cutting tools



**Adhesives:** Fuze\*It by Liquid Nails construction adhesive or double sided mounting tape (not included)




**Primers (required):** Rust-Oleum® specialty plastic primer or equivalent



**Paints (Optional):** Compatible latex or oil-based paints


**Additional Tools (Optional):** Metal Ruler, Level, Paint Sprayer, Paint Brush, Masking Tape

1

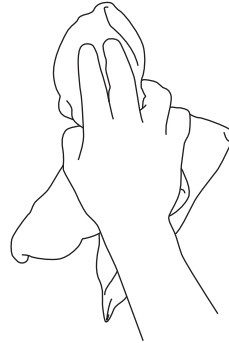

Prepare the installation surface by cleaning it thoroughly.


2

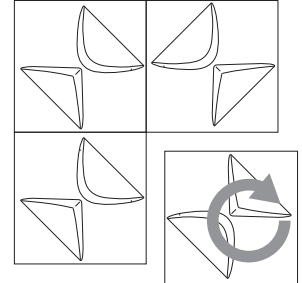

Select a pattern for installation. Arrange it on the floor by rotating the tiles to preview or print out a pattern guide.


## PERMANENT INSTALLATION

3




Apply a 1/4 inch adhesive bead to tile perimeter. Apply 1/4 in away from edge to prevent adhesive squeeze-out. Carefully remove and clean excess adhesive.

4

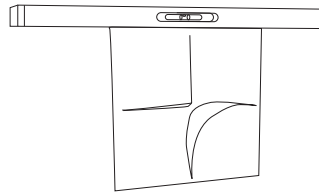


Use a level and a ruler to ensure tiles are properly aligned.

5

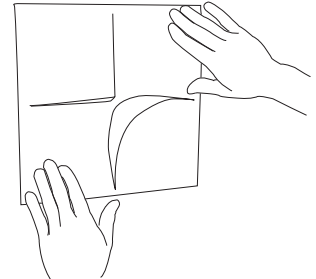


Apply tiles to surface, pressing each firmly, making sure that all corners are in contact with the surface.

6

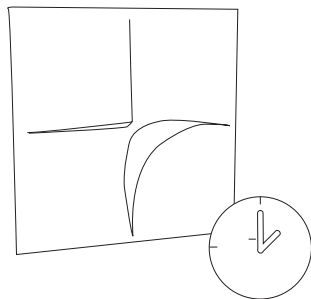


Allow adhesive to dry (following adhesive manufacturers instructions).

7 (optional)







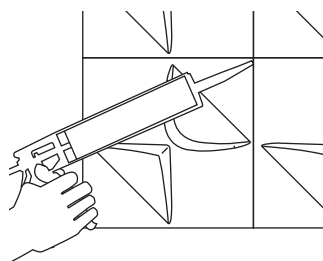


Use Fuze\*It to seal the seams. Clean up and smooth as you go along before it sets. Tiles should not be sanded.

8 (required for painting tiles)

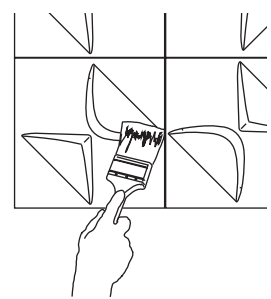

Coat tiles once with plastic primer first and then with the finish of your choice.
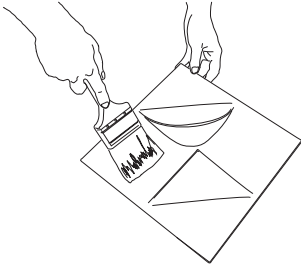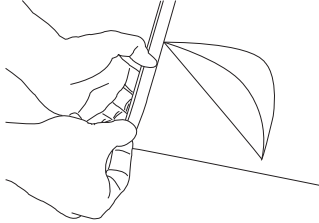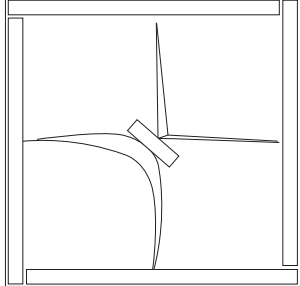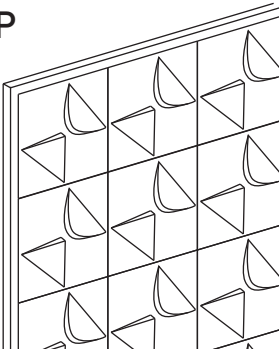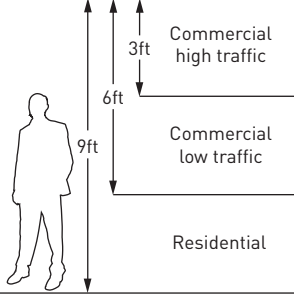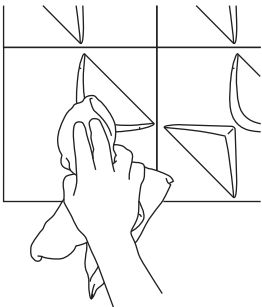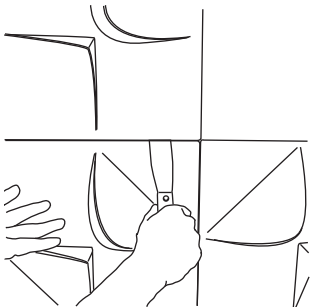
<p><b>TEMPORARY INSTALLATION</b></p>	<p><b>3</b></p>  <p>Coat each tile with plastic primer first and then the finish of your choice.</p>	<p><b>4</b></p>  <p>Apply the selected adhesion method to the perimeter and the center of tile when possible. We recommend 3M mounting tape.</p>	<p><b>5</b></p>  <p>Apply tiles to surface pressing each tile firmly. Make sure that all edges are in contact with the surface and that tiles are securely adhered.</p>
<p><b>TIP</b></p>  <p>PlasticForms can be installed on a canvas or a thin plywood frame for ease of installation, transportation and finishing.</p>	<p><b>GENERAL</b></p>  <p>Make your installation last by applying tiles at a height that makes sense for the environment. Prevent tile damage and keep your PlasticForms looking beautiful.</p>	 <p>Tiles should be dusted or vacuumed regularly. Use a damp cloth or sponge to clean tiles.</p>	 <p>Follow the manufacturers recommended removal directions for each adhesive material. Remove tiles gently to minimize damage to surfaces.</p>

Still have questions?  
Drop us a line or give us a call:

Email: [info@mioculture.com](mailto:info@mioculture.com)  
US Toll Free: 1-888-563-3916  
International: +1 (215) 925-9359

[MIOCULTURE.COM](http://MIOCULTURE.COM)

