


VelociRAX Damper Swap Instruction

TOOLS REQUIRED FOR ASSEMBLY




Wrench
or socket
• 1 X 13mm

Alternate
• 2 X

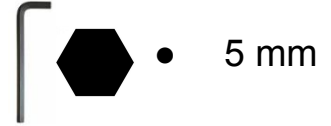


ASSEMBLY INSTRUCTIONS


Latest instructions and videos: www.velocirax.com/pages/velocirax-dampers

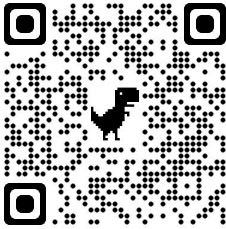


1. Remove lower bolt

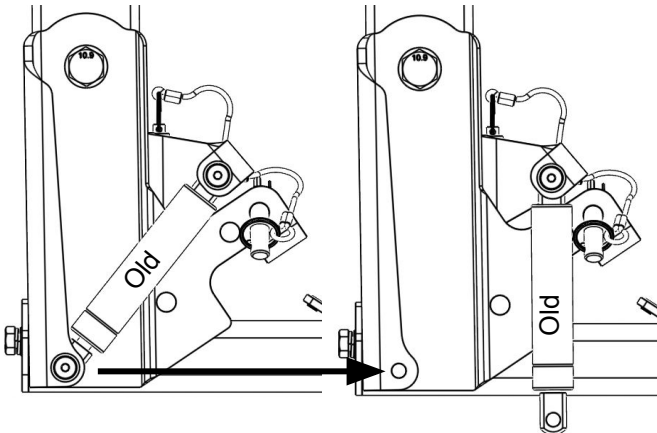


2. Install damper with existing bolt/bushings

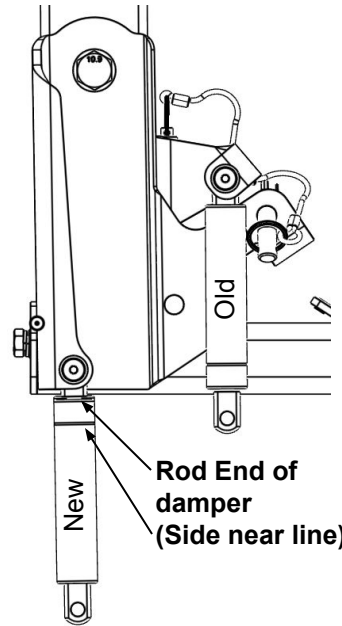


Bottom View

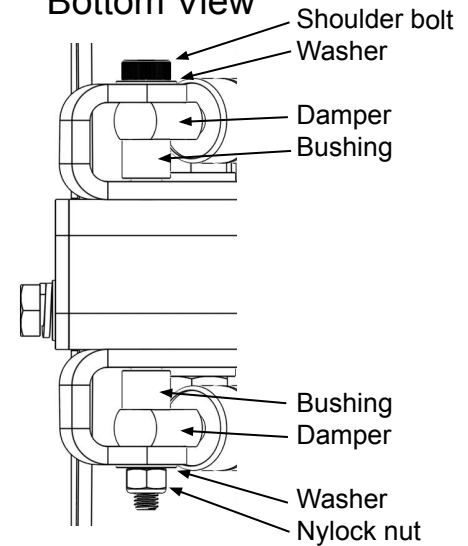



3. Remove upper bolt and old dampers

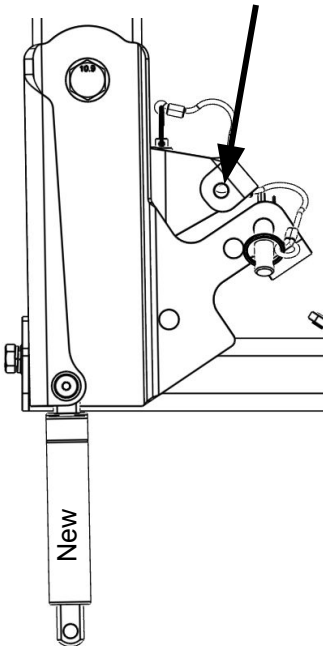

4. Rotate damper, reinstall bolt/bushing and lanyards

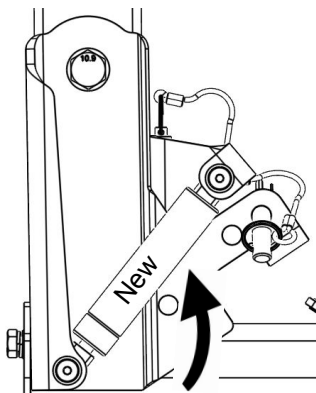

Top View

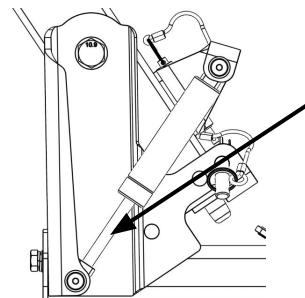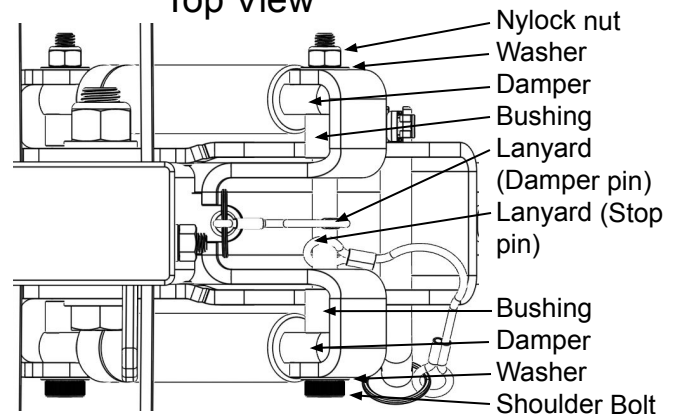

Final Check

Extending rod of
damper should
be down