
EISEN HOME

Phone: (213) 425-3035 Email: cs@eisenhome.com www.eisenhome.com

INSTALLATION GUIDE

3-HOLE WIDESPREAD BATHROOM SINK FAUCET WITH DRAIN

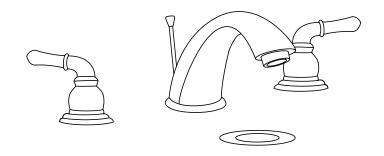


Solid Brass Construction Ceramic Cartridge Easy Installation






ASSEMBLY INSTRUCTIONS

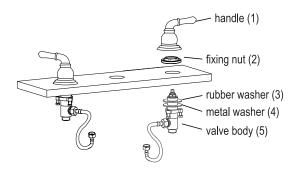

STEP 1

Handle Installation


- 1. Disassemble the cold water handle (1).
- 2. From beneath the deck, insert the cold water valve (5), rubber washer (3), metal washer (4) and lock nut. Above the deck, install the handle (1) and fixing nut (2).
- 3. Screw the nut to secure the valve.
- Repeat above steps to install the hot water handle and hot water valve.

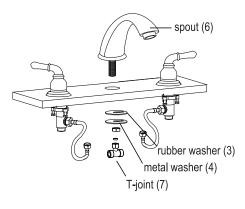


STEP 2


Spout Installation


- 1. Disassemble the spout (6).
- Place the rubber washer (3), metal washer (4) and nut in that order beneath the deck, then secure the nut.
- 3. Connect and tighten the T-joint (7) to the shank.

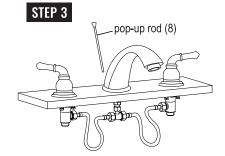

- 1. Connect the hoses from the valve body to the T-joint.
- 2. Place the pop-up rod (8) through the hole.

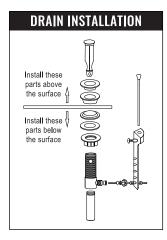

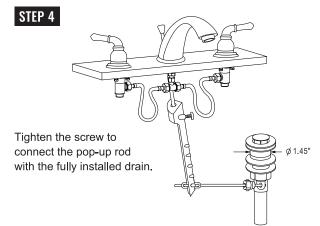

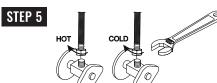

Connect the flexible hose (not included) to the water supply valve (not included) and tighten it with an adjustable wrench.

DO NOT OVERTIGHTEN!

CAUTION: Make sure to connect the hot and cold flexible hoses correctly to the supply valves. Supply valves and flexible hoses are not included. Purchase separately.