





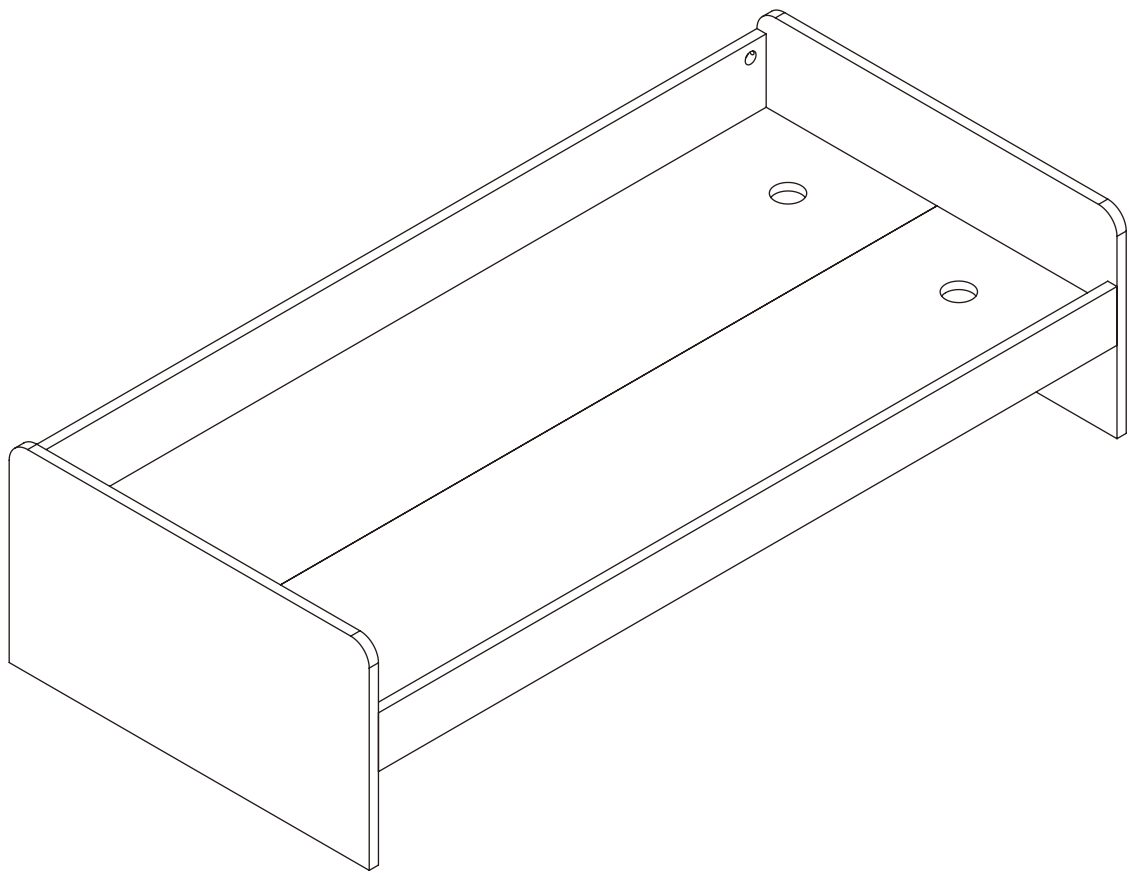

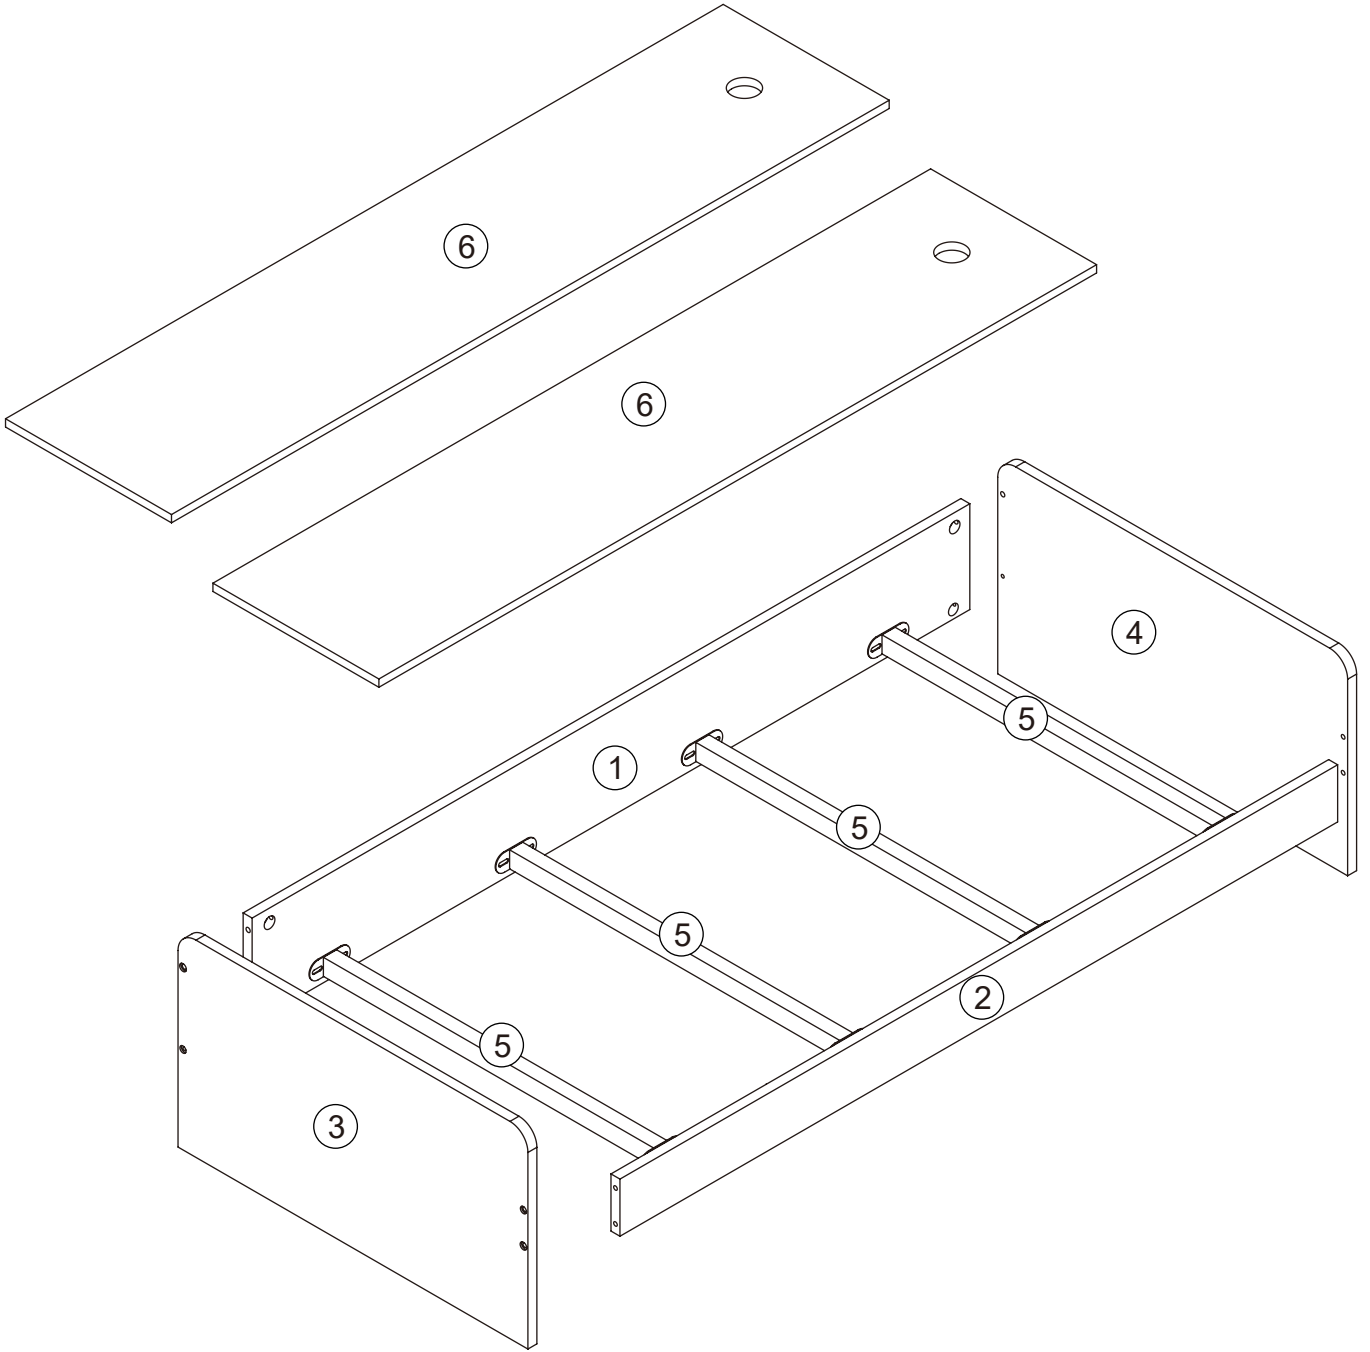


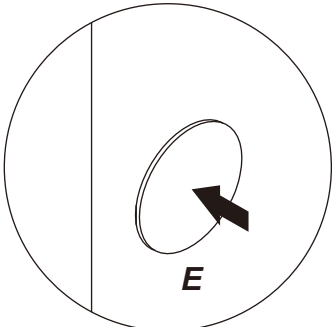
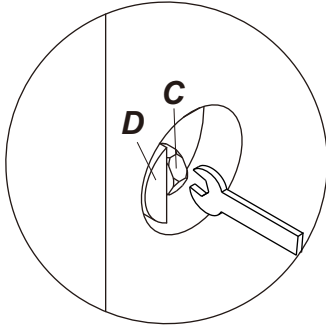
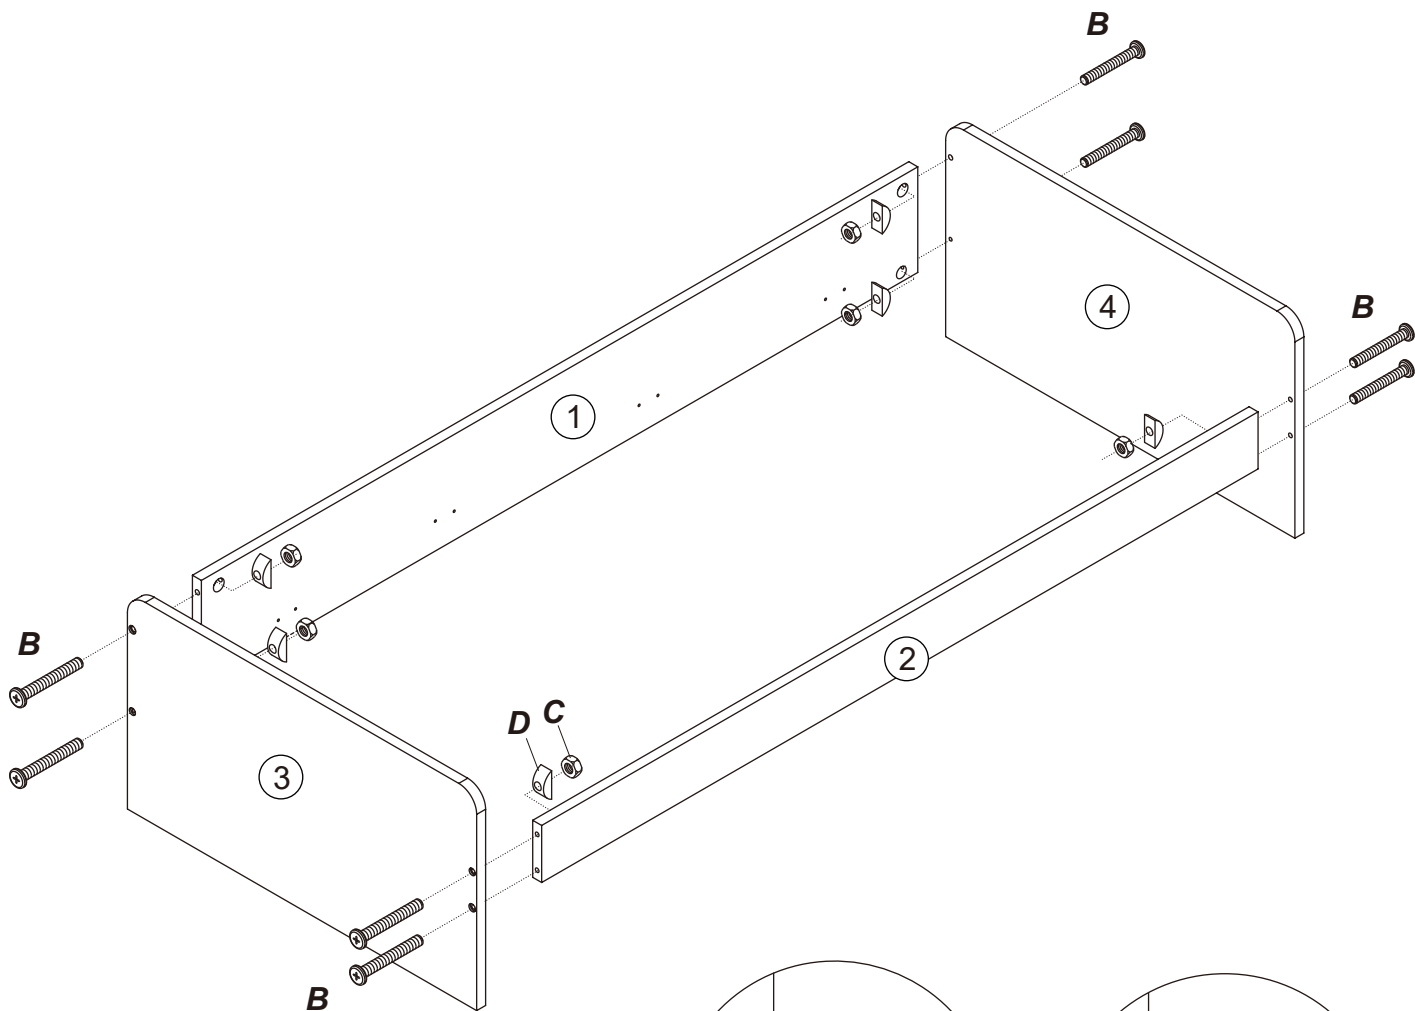
MO Loft Bed Installation Manual- Bottom Bed










| | |
|---|--|
| | A  M6*15 x16 |
| B  M8*80 x8 | |
| C  M8 x8 | |
| D  x8 | |
| E  x8 | |
| F  x1 | |
| G  x4 | |

1.



| | | | |
|---|---|---|---|
|  |  |  |  |
| M8*80 | | | |
| Bx8 | Cx8 | Dx8 | Ex8 |

2.

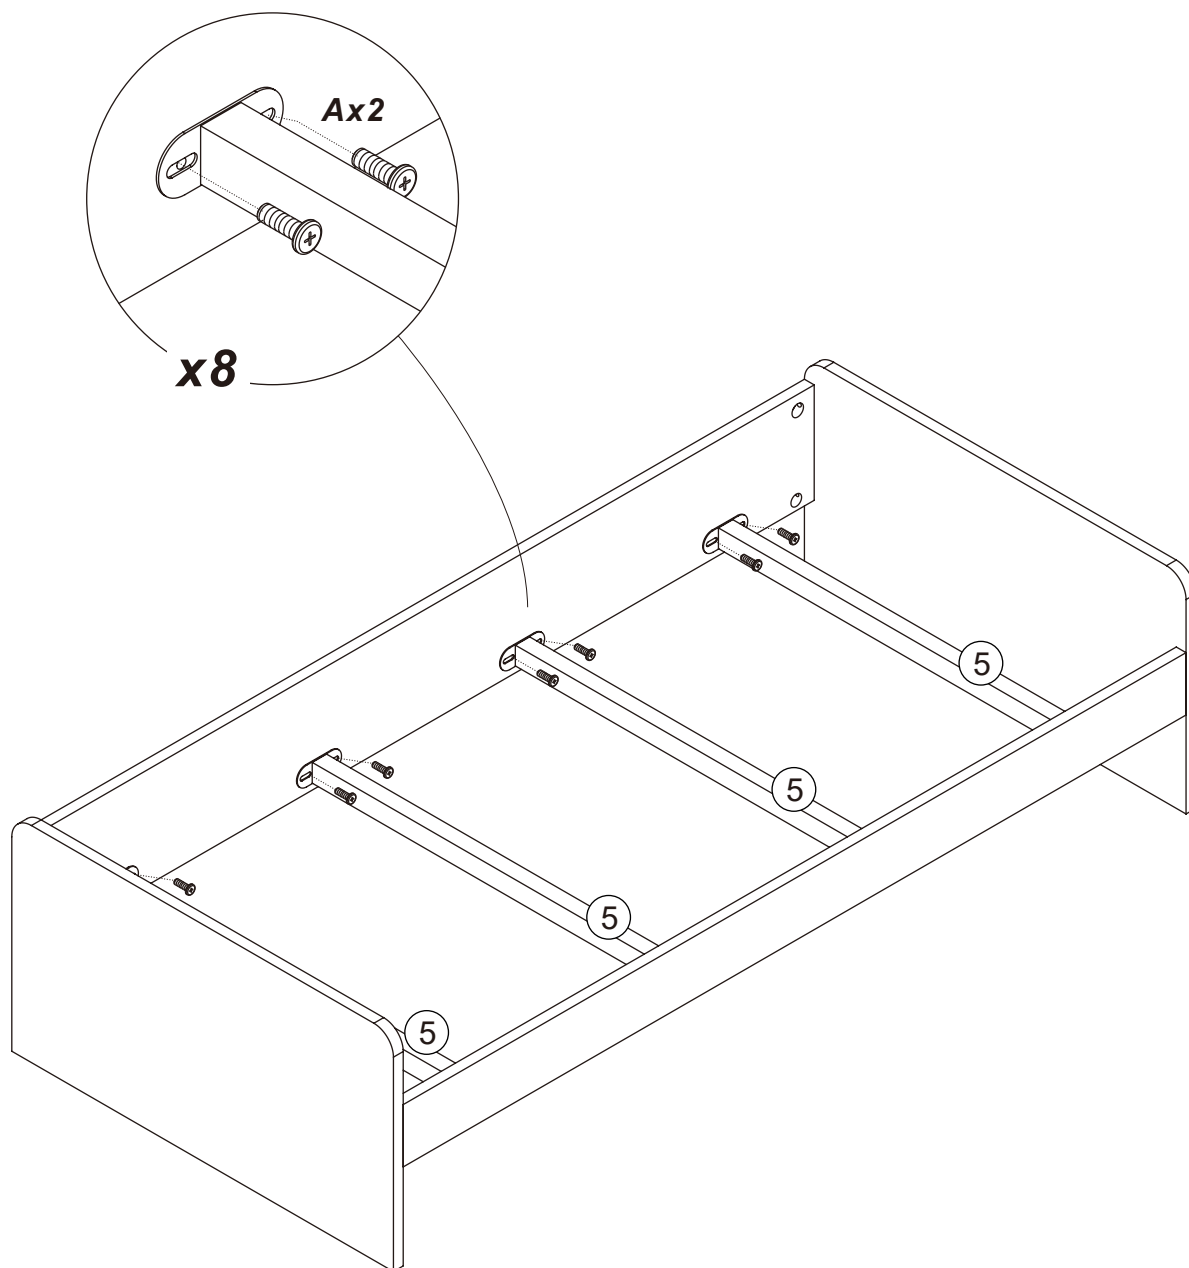

M6*15

Ax16

3.

