





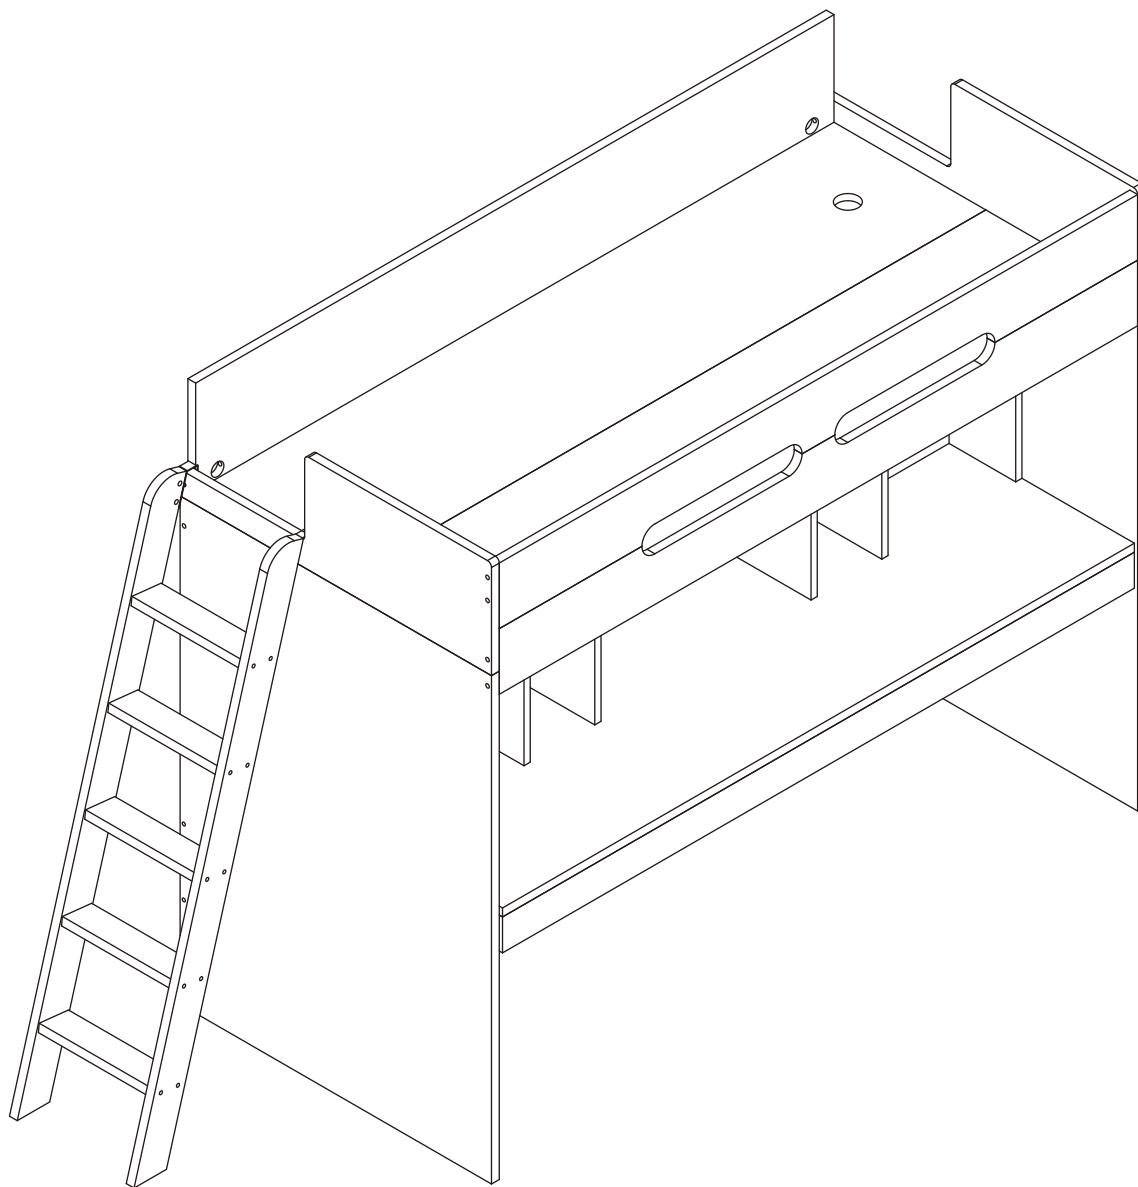



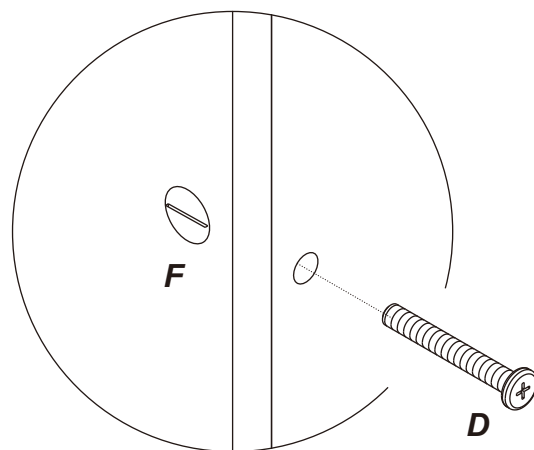
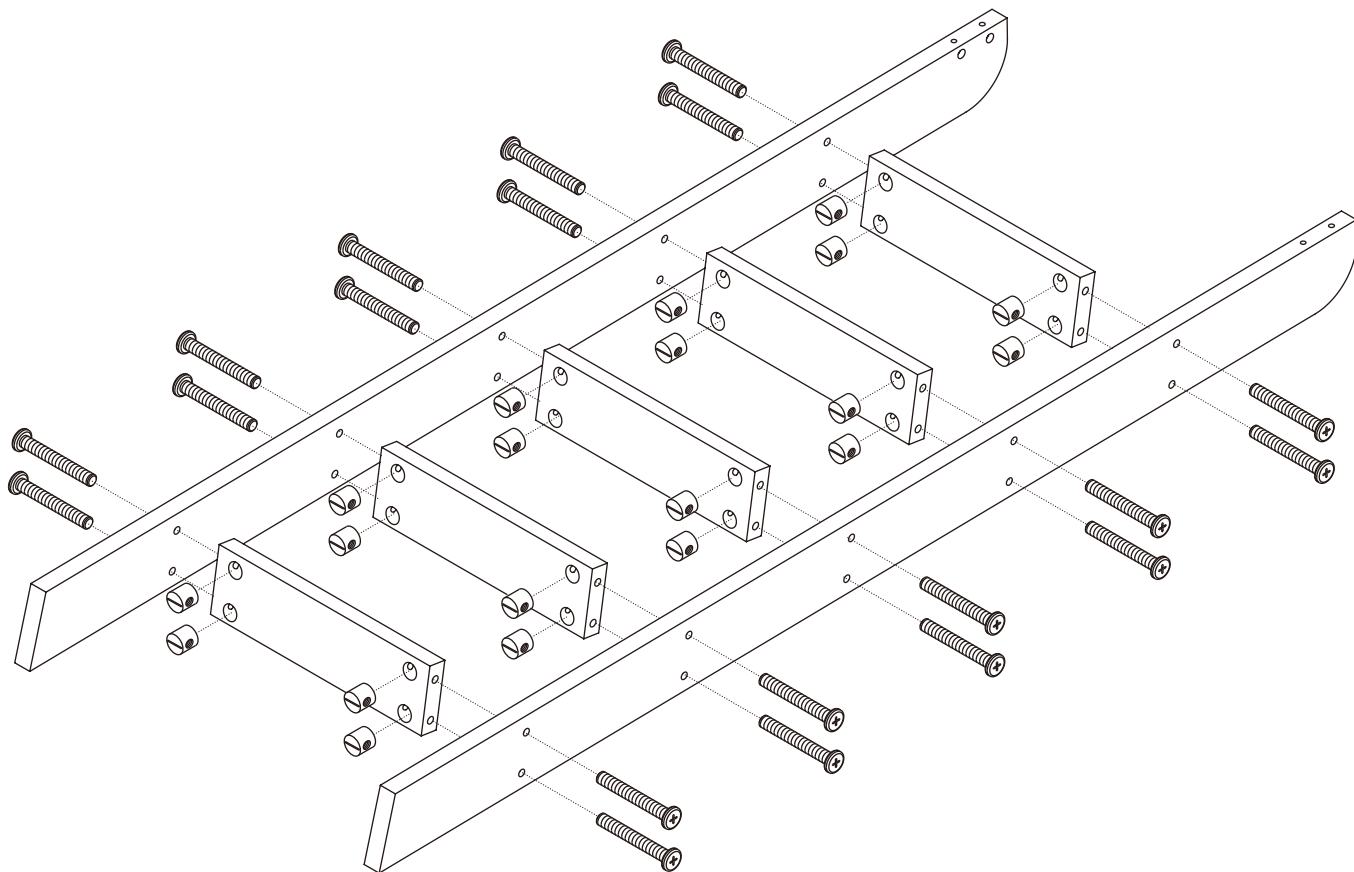
# MO Loft Bed Installation Manual- Ladder

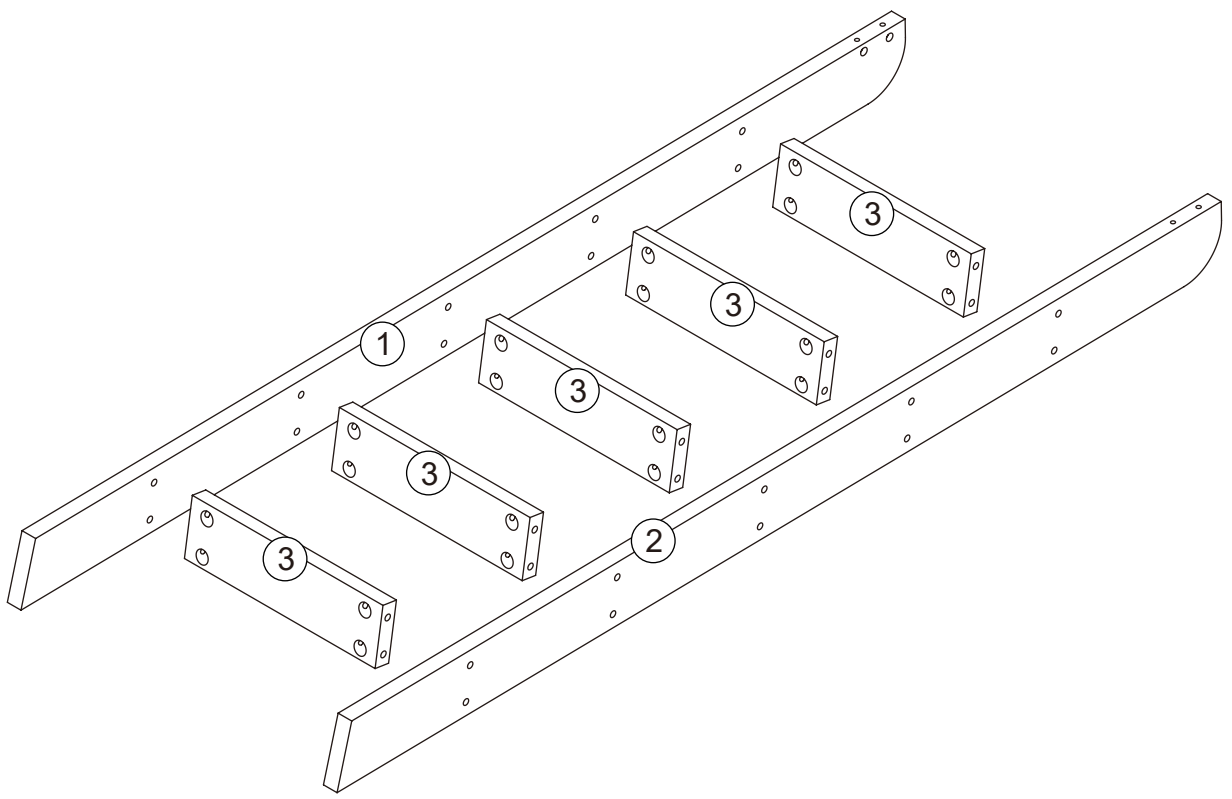



<b>A</b>		M6*35	x4	
<b>B</b>		M6*11	x4	
<b>C</b>		M8*15	x20	
<b>D</b>		M8*55	x20	
<b>E</b>			x2	
<b>F</b>			x4	

# 1.







M8\*55  
Dx20




M8\*15  
Fx20
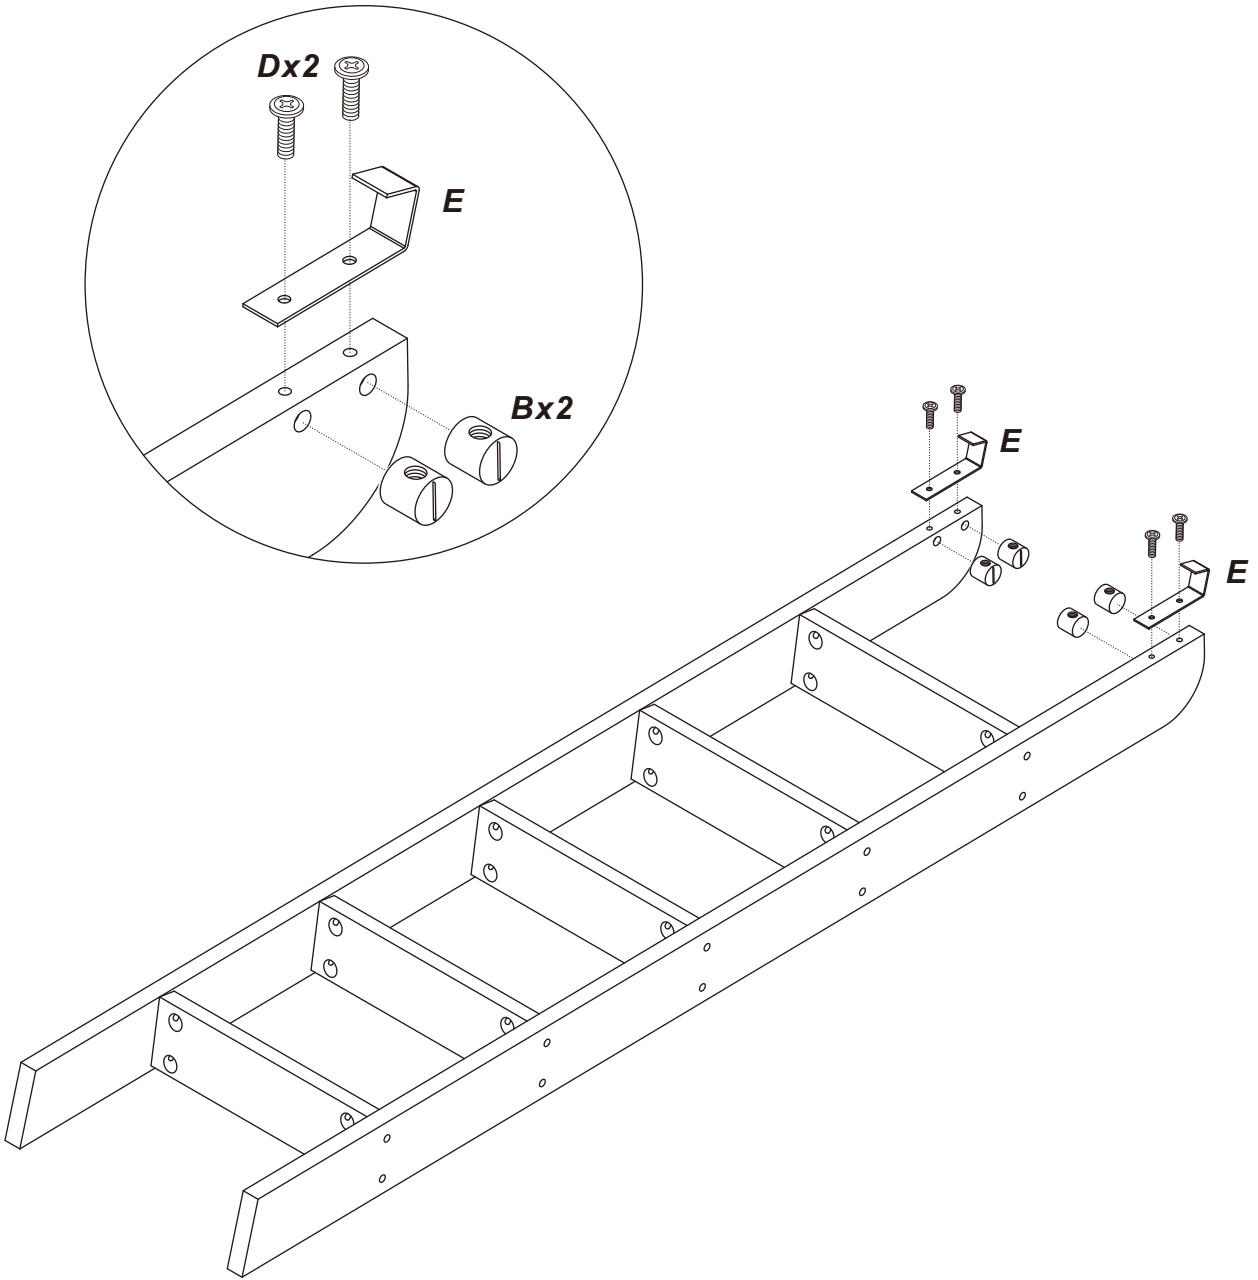
# 2.



		
M6*35	M6*11	
<b>Dx4</b>	<b>Bx4</b>	<b>Ex2</b>

**3.**

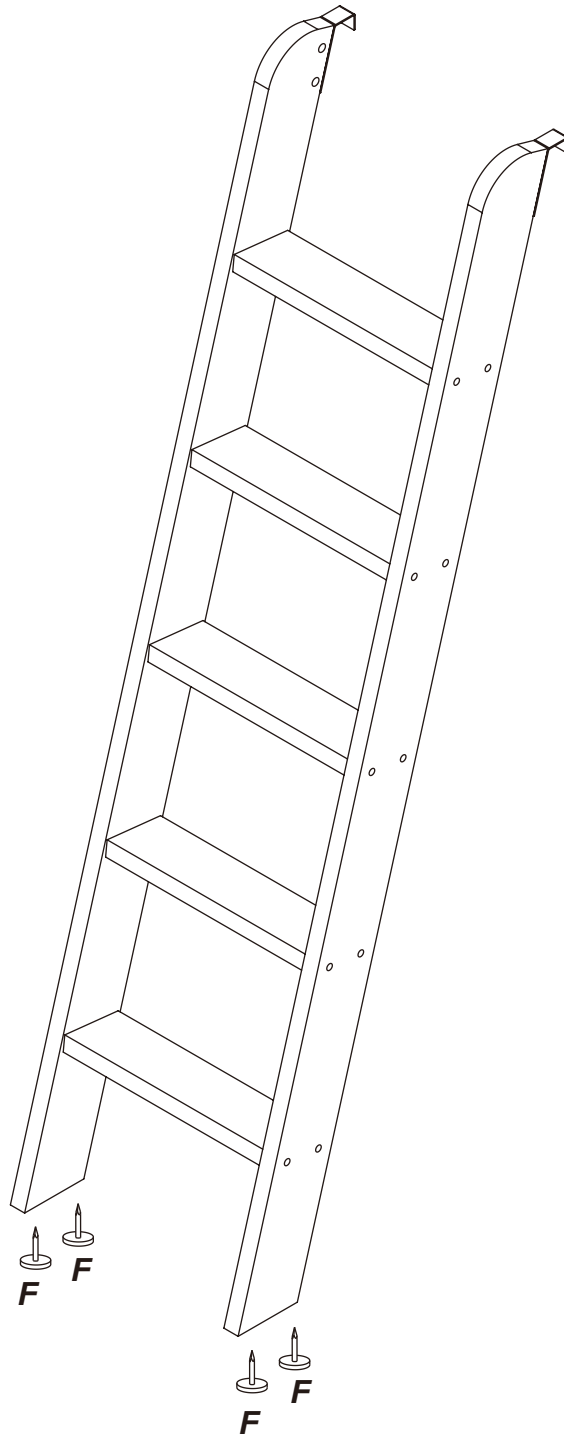

**Fx4**

4.

