








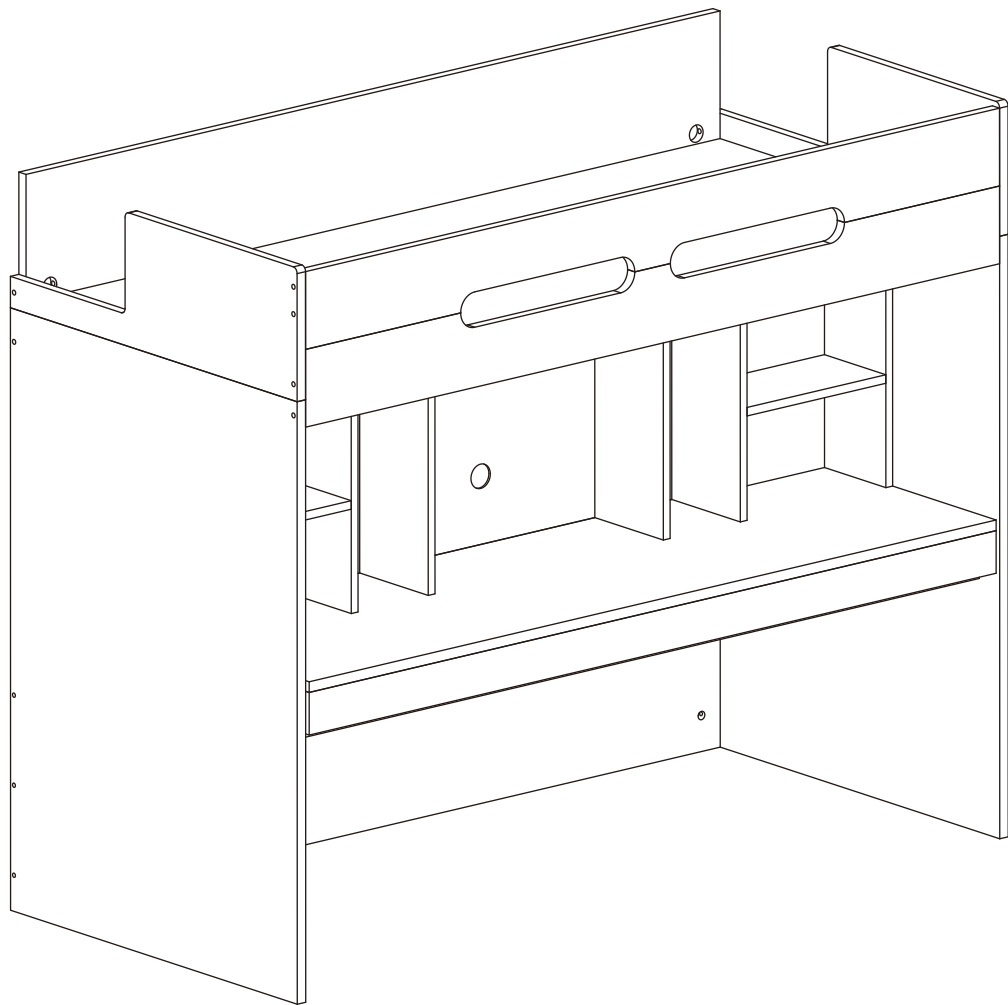

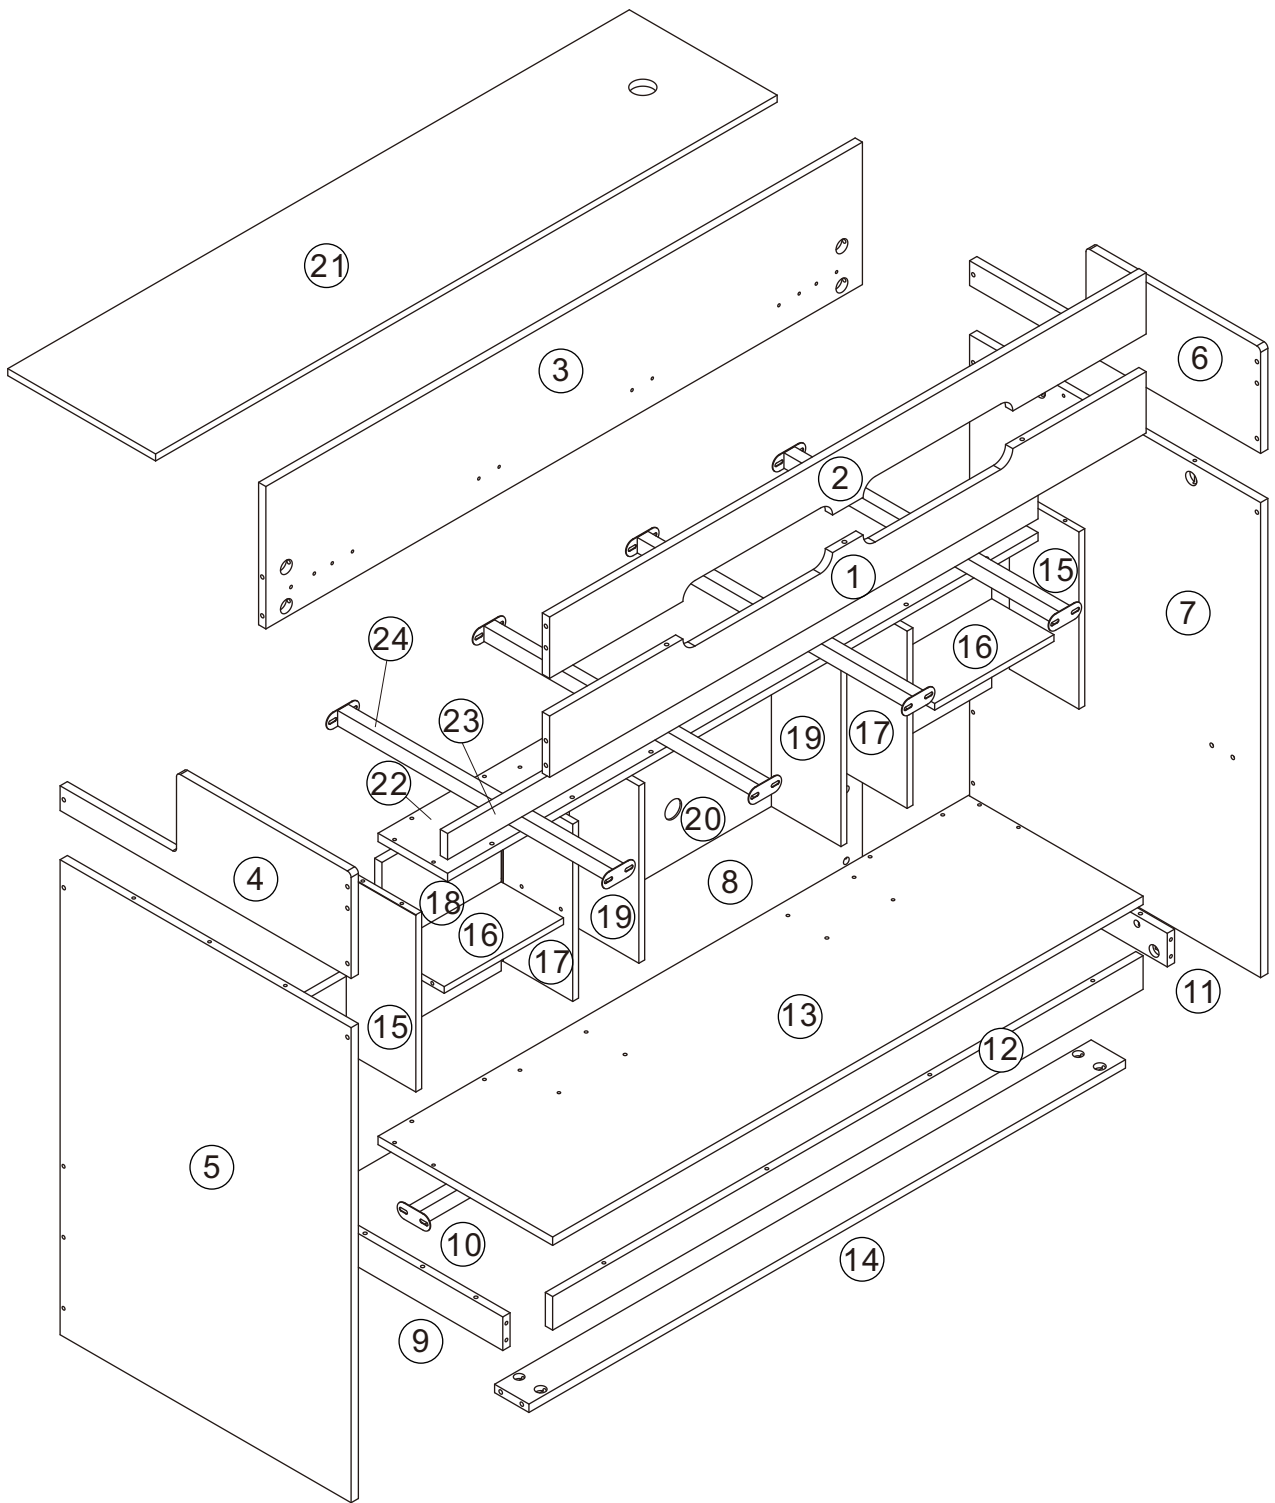

















MO Loft Bed Installation Manual- Upper bunk + Desk





A			x38	K			x23
B		8*30	x4	L			x23
C		7*38	x24	M		38	x23
D		M6*15	x48	N		14#	x1
E		M6*18	x12	O			x6
F		M6*12	x6	P		3.5*13	x20
G		M8*15	x9	Q			x12
H		M6*55	x6	R			x2
I		M8*80	x12	S			
J		8*80	x11	T			

1.

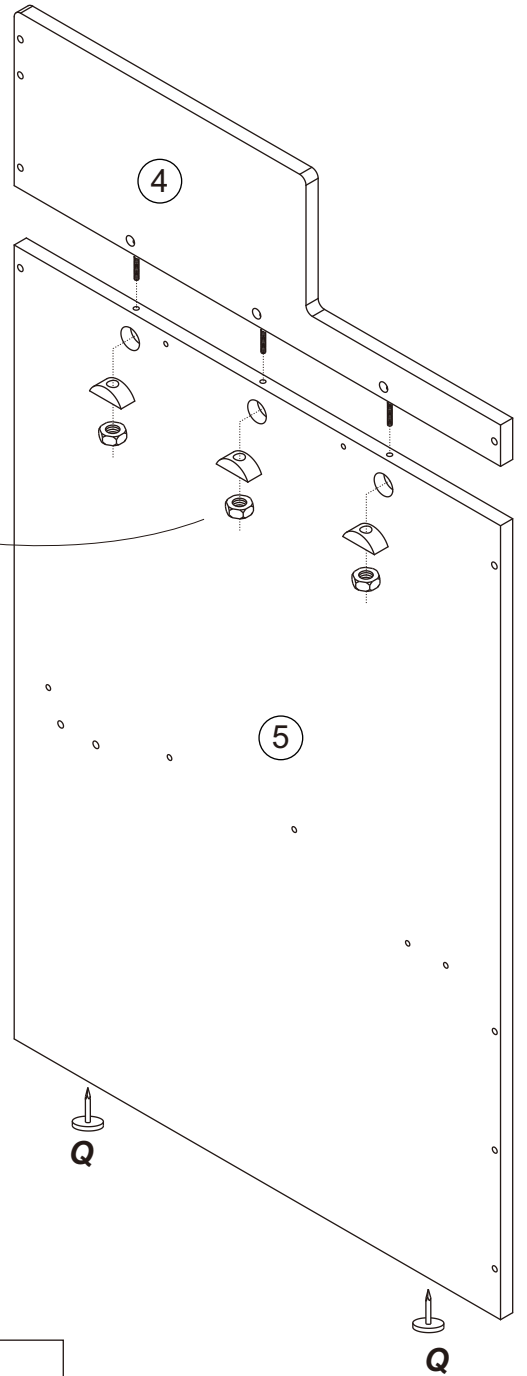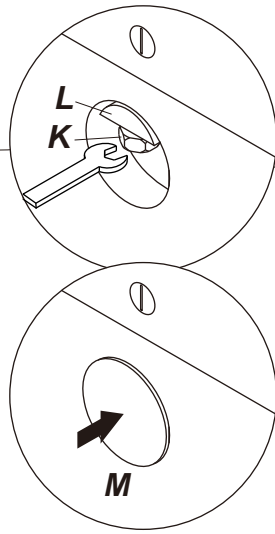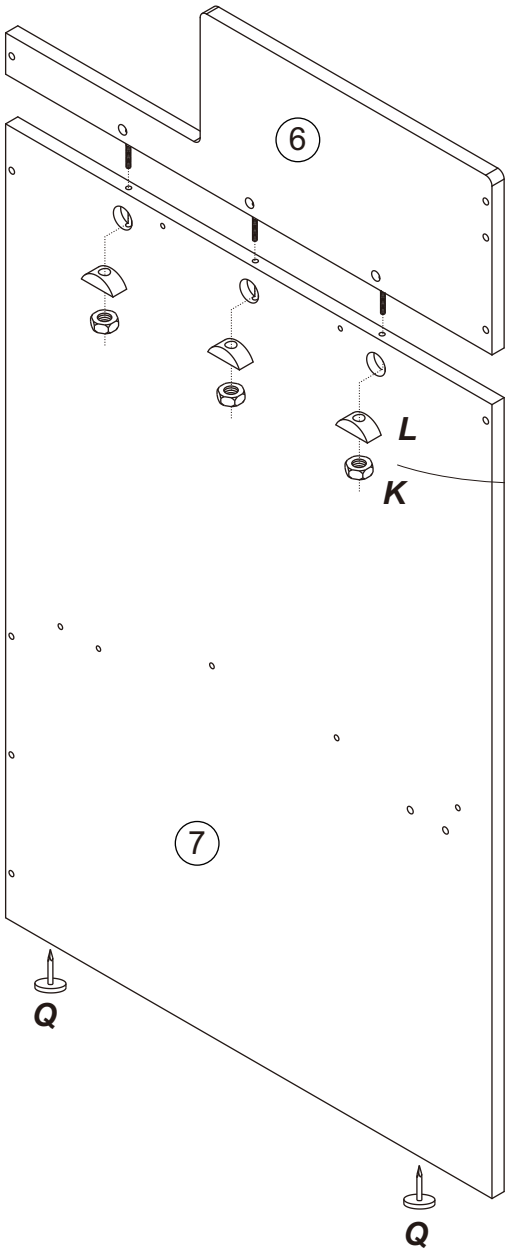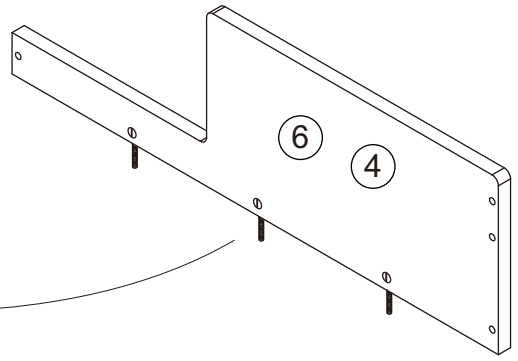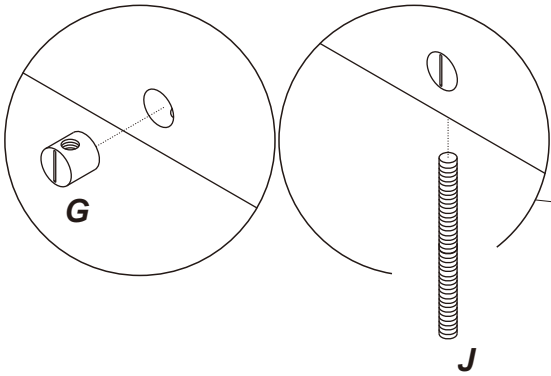

Jx6



M8*15

Gx6



Kx6



Lx6






Mx6




Qx4

2.

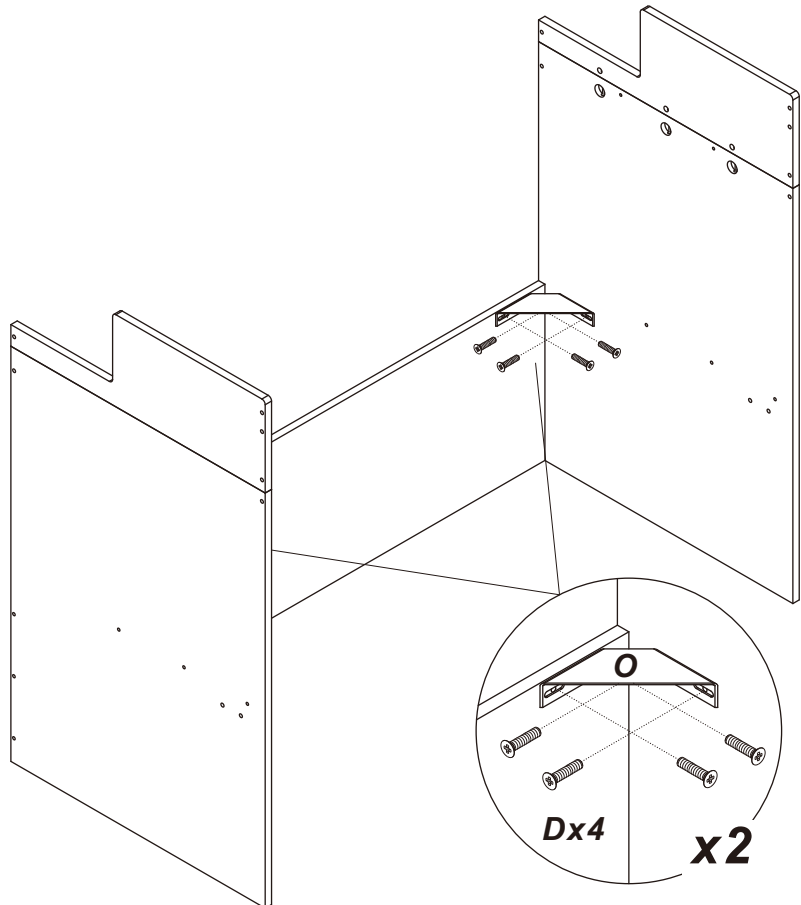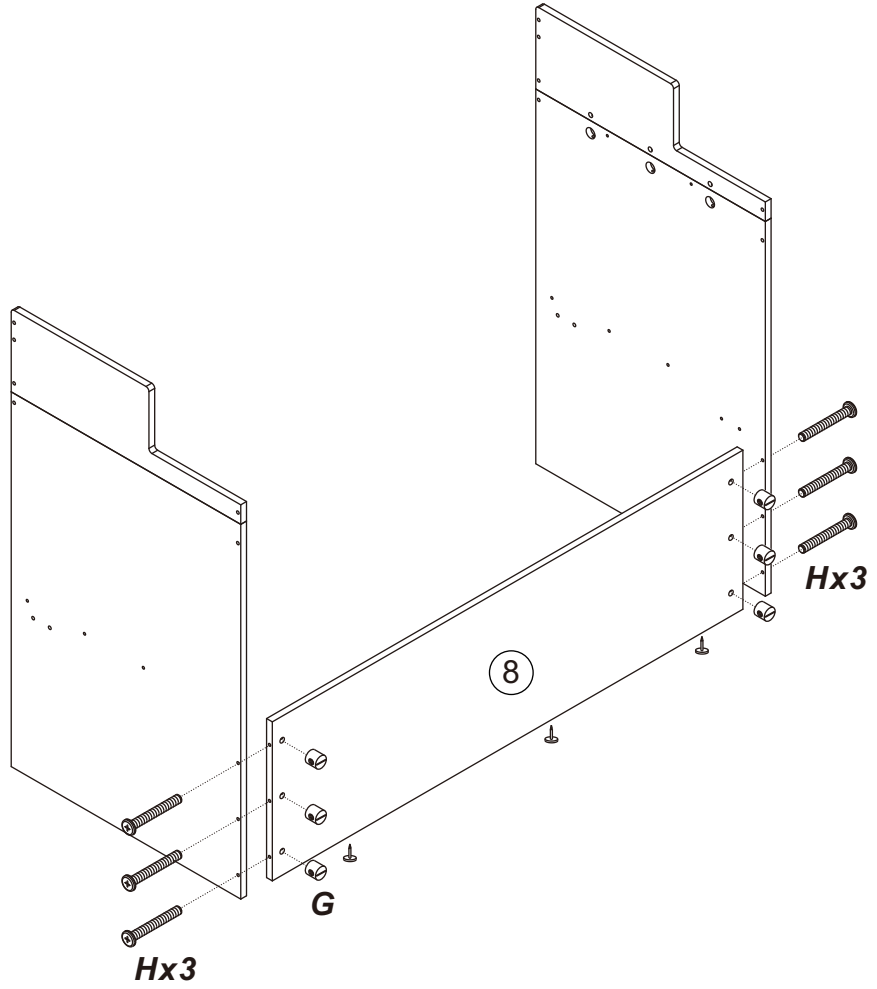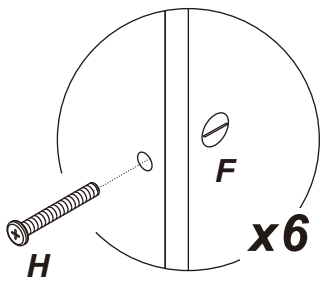

3.

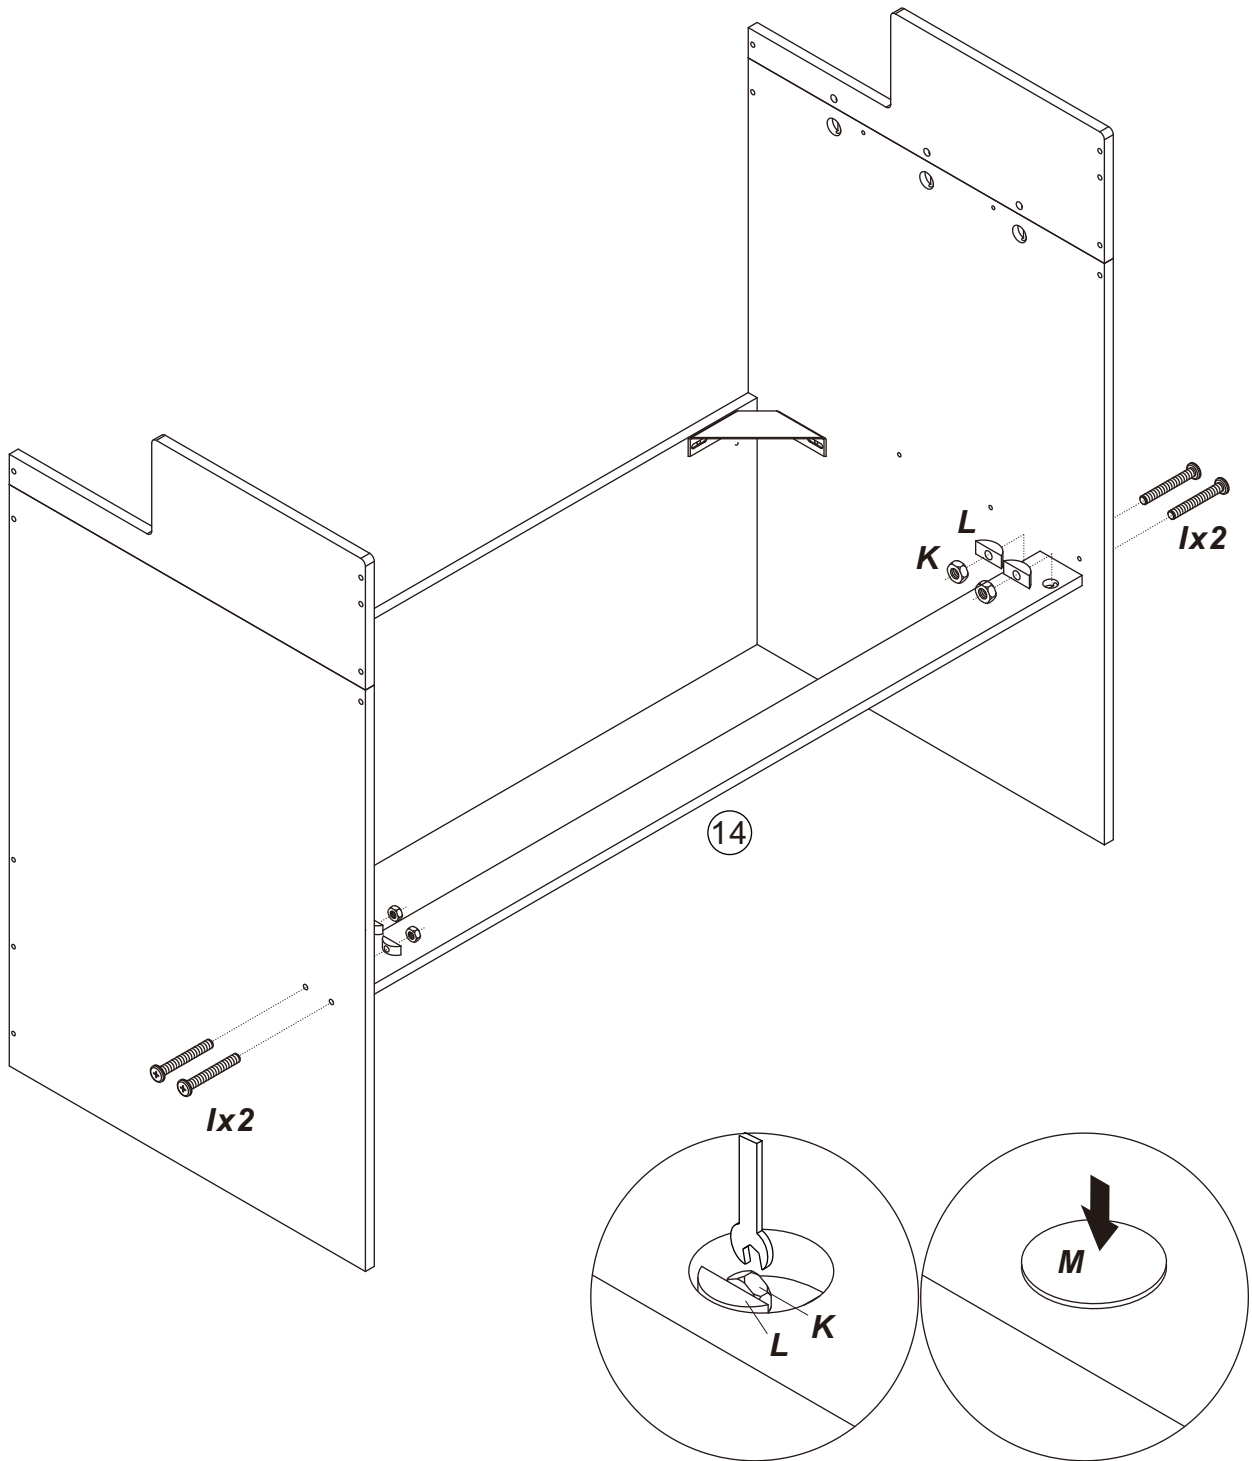

M8*80

Ix4



Kx4






Lx4



Mx4

4.

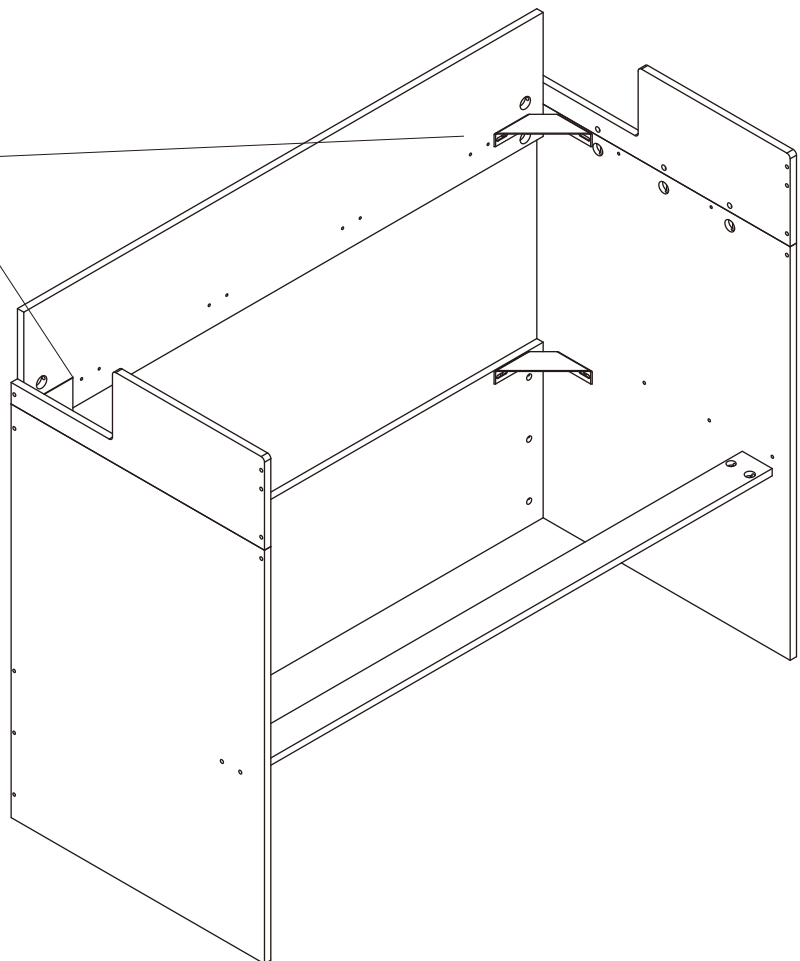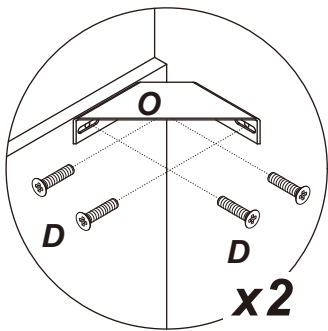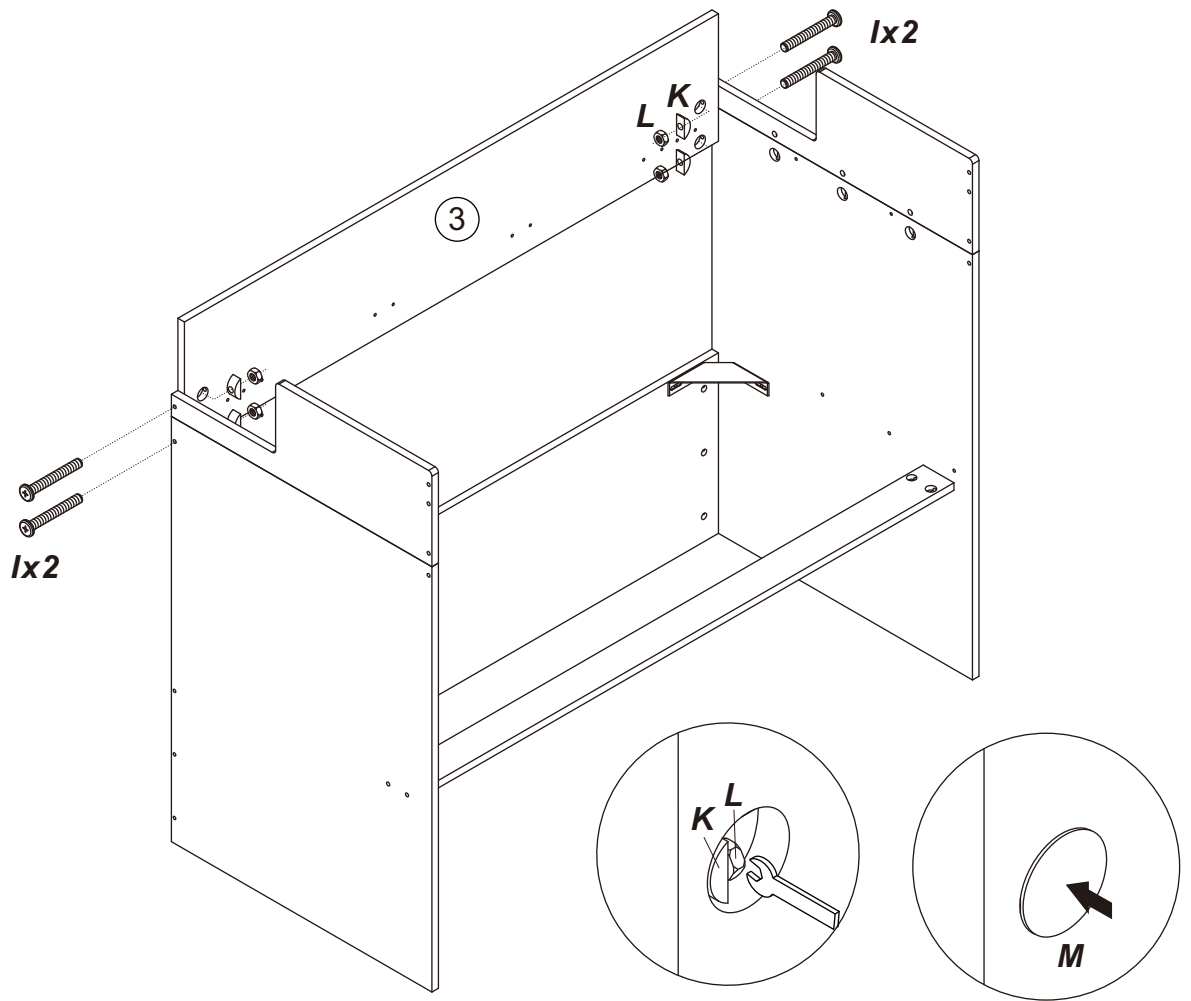

M8*80

Lx6



Kx4



Lx4





M6*15

Dx8










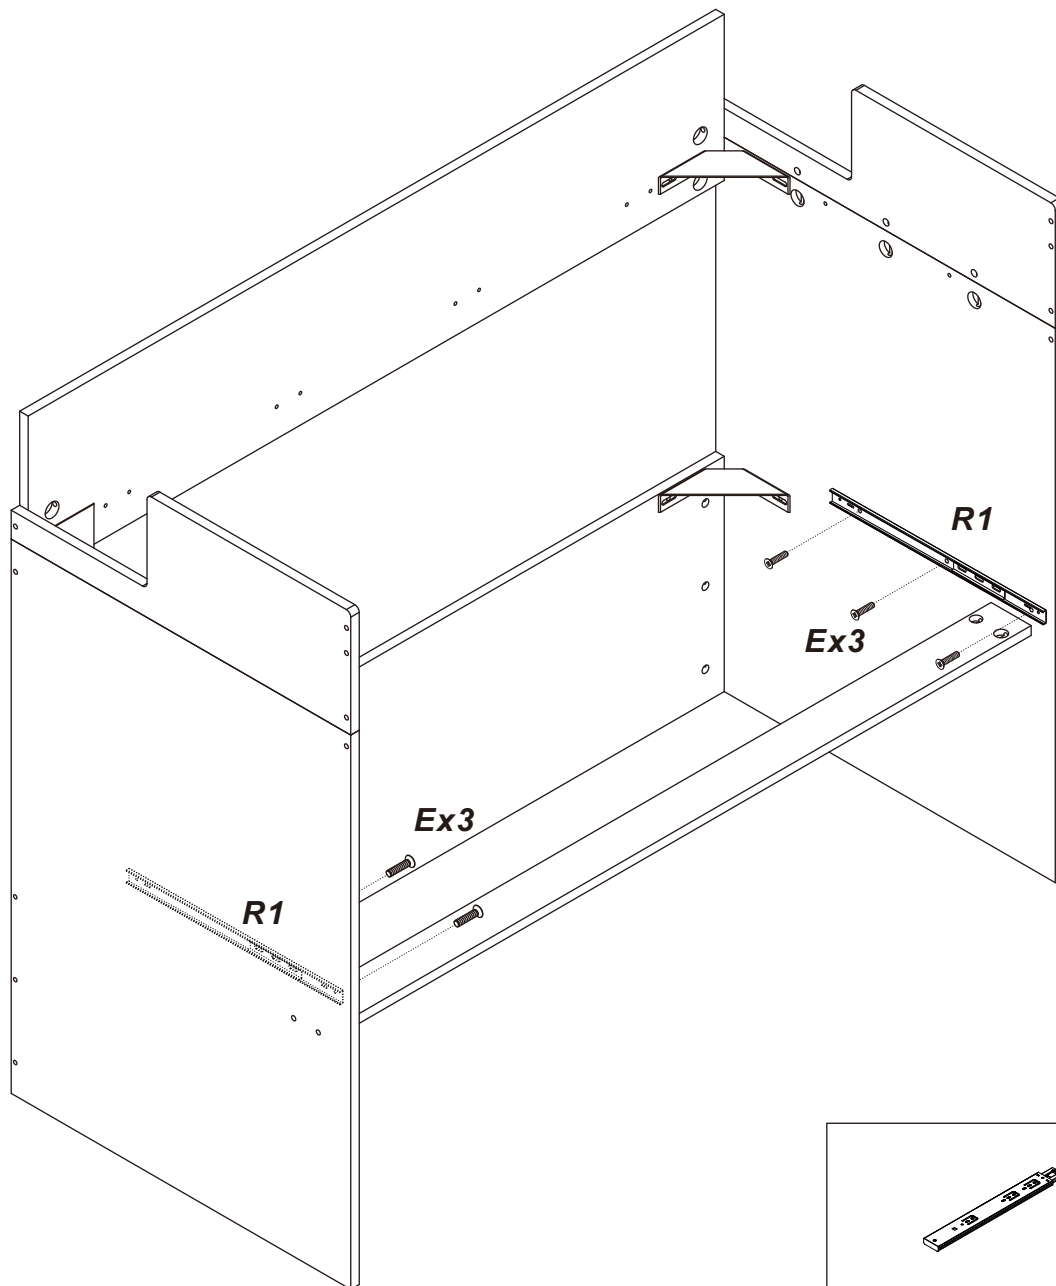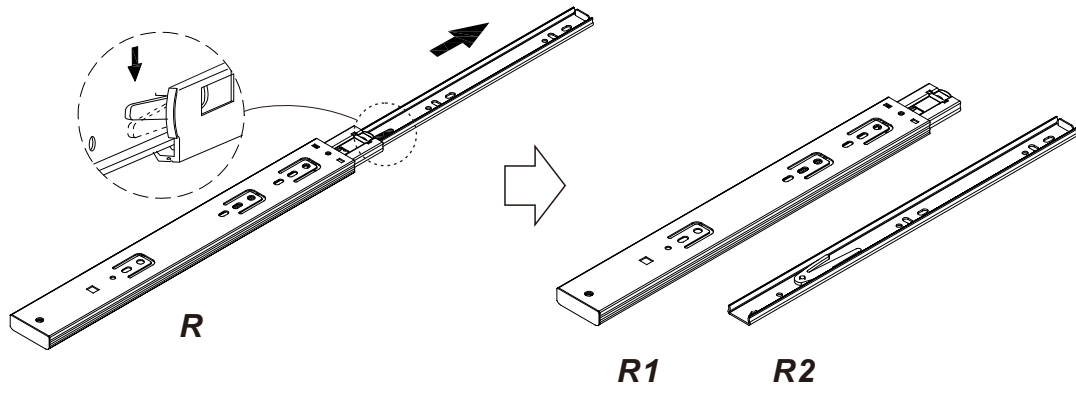


Ox2

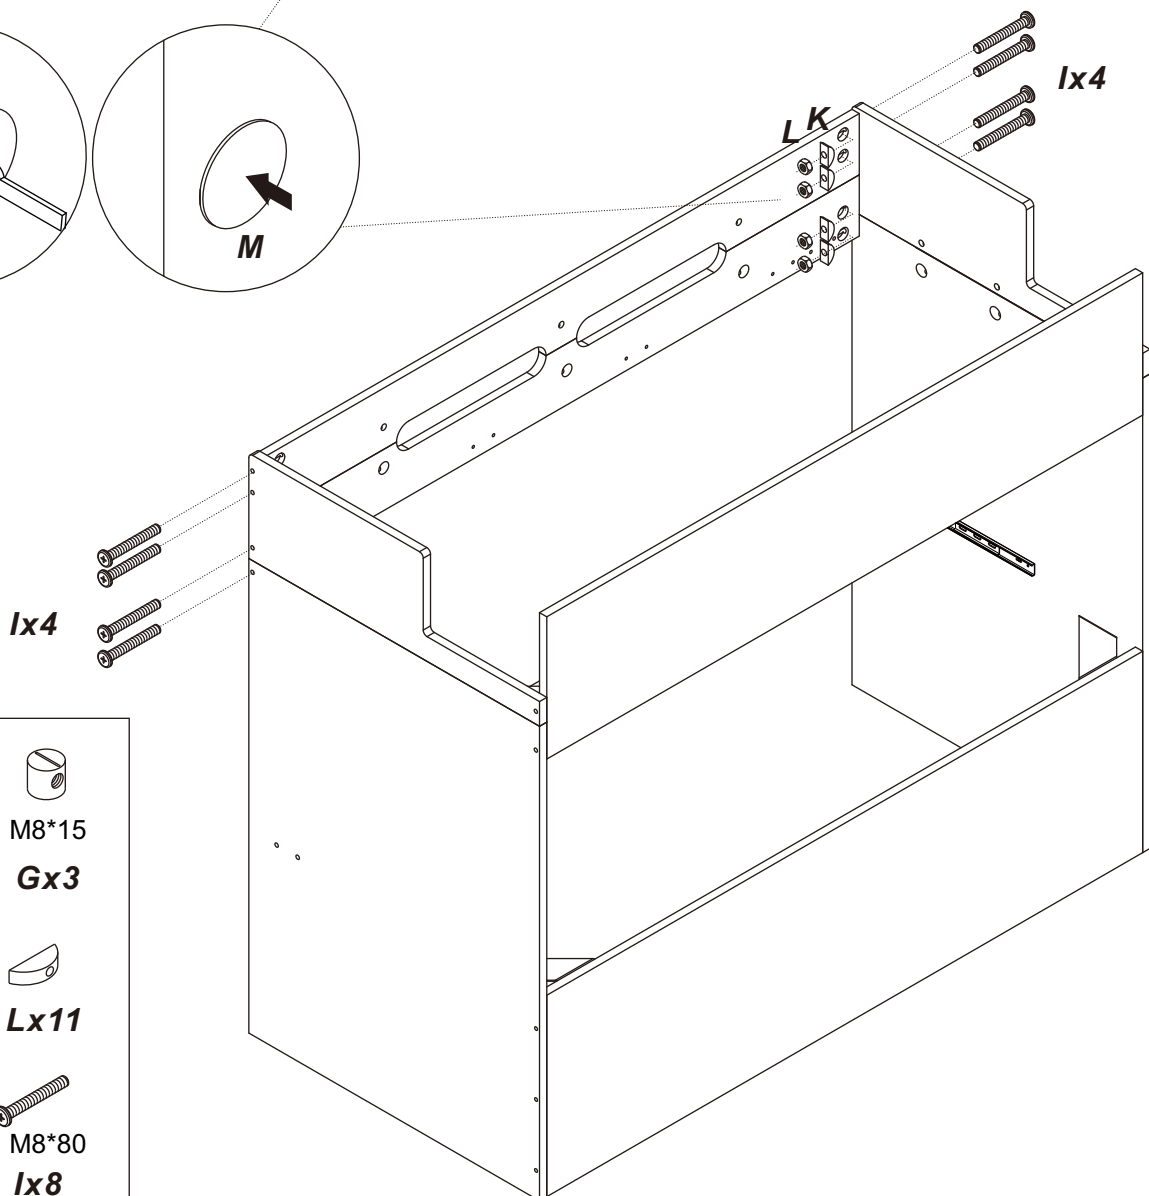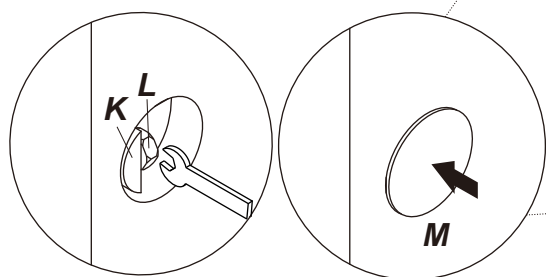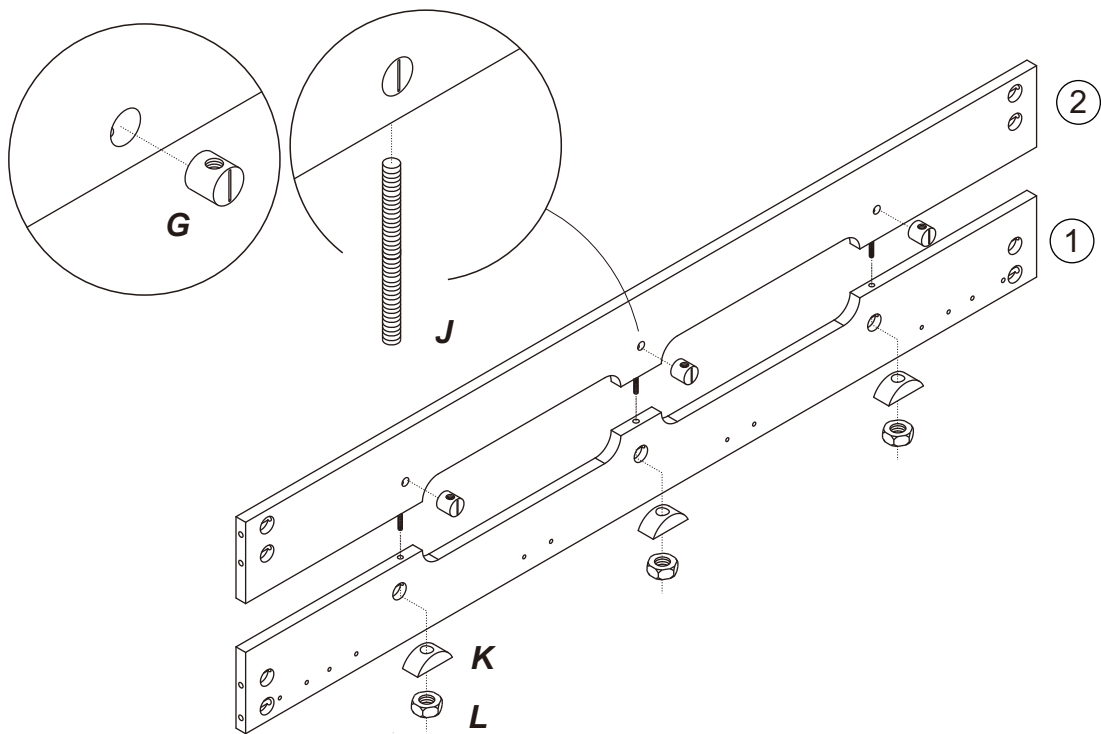5.






6.




	
Jx3	M8*15
	
Kx3	Lx11
	
Mx11	M8*80
	
	Lx8

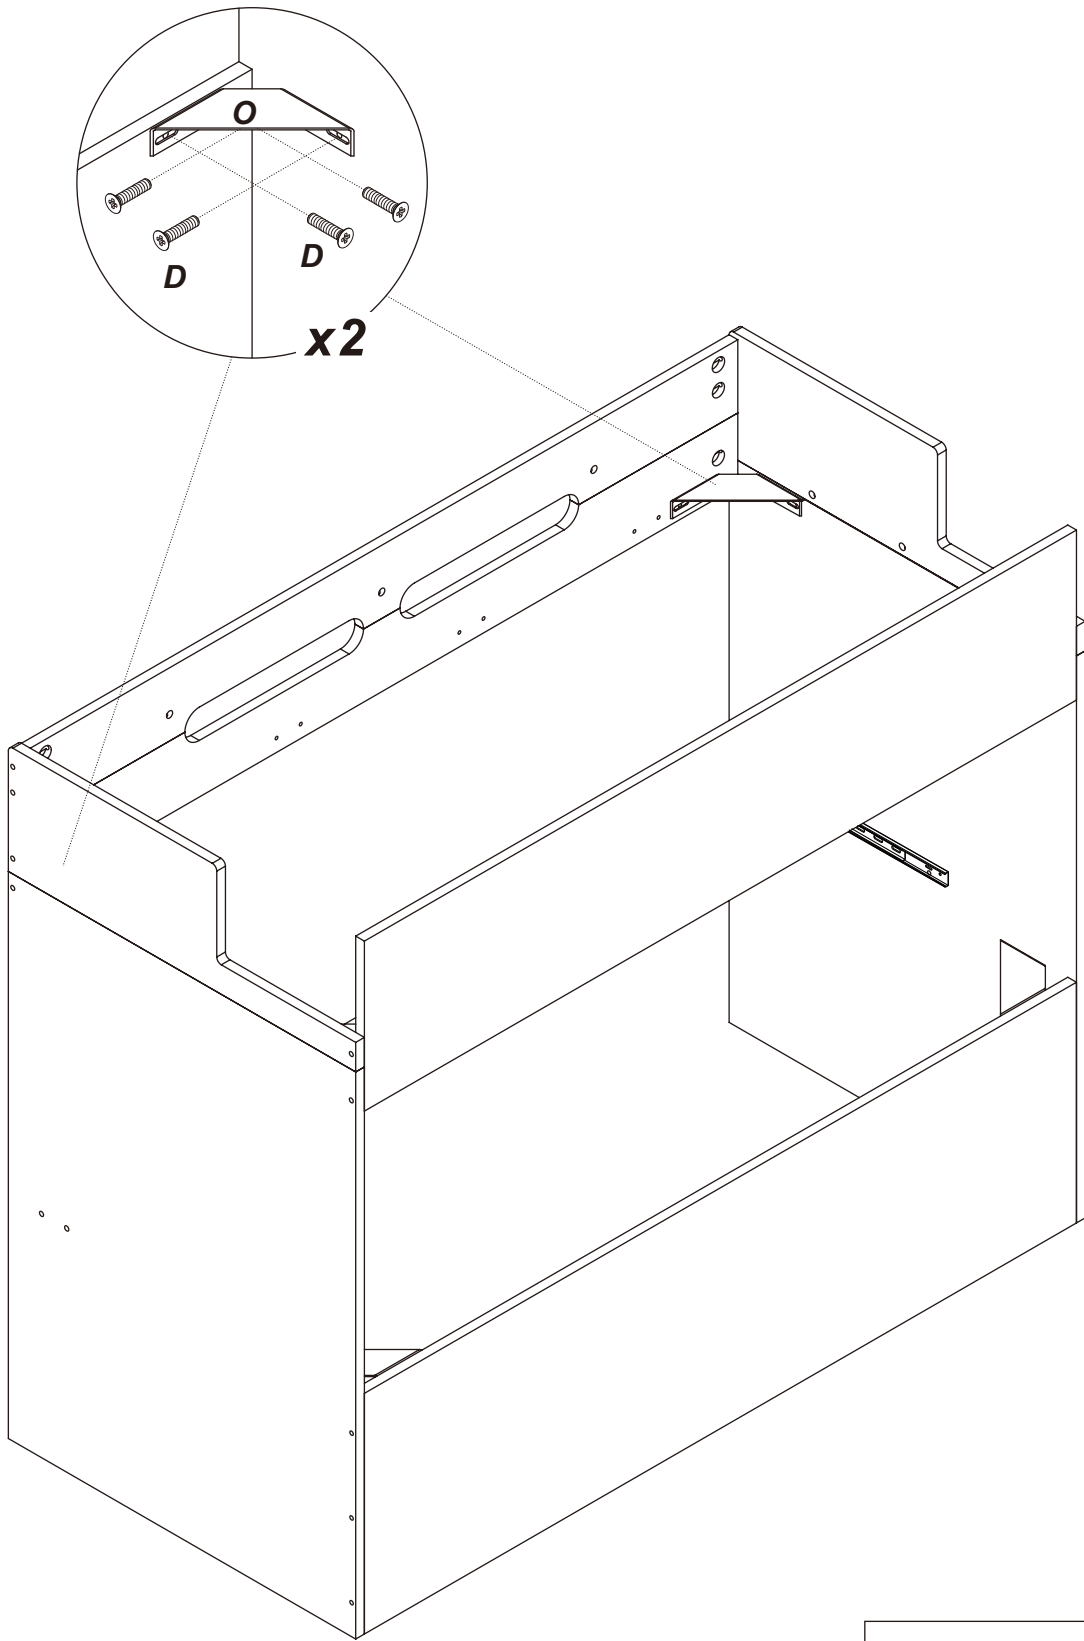7.



	
M6*15	
Dx8	Ox2


8.

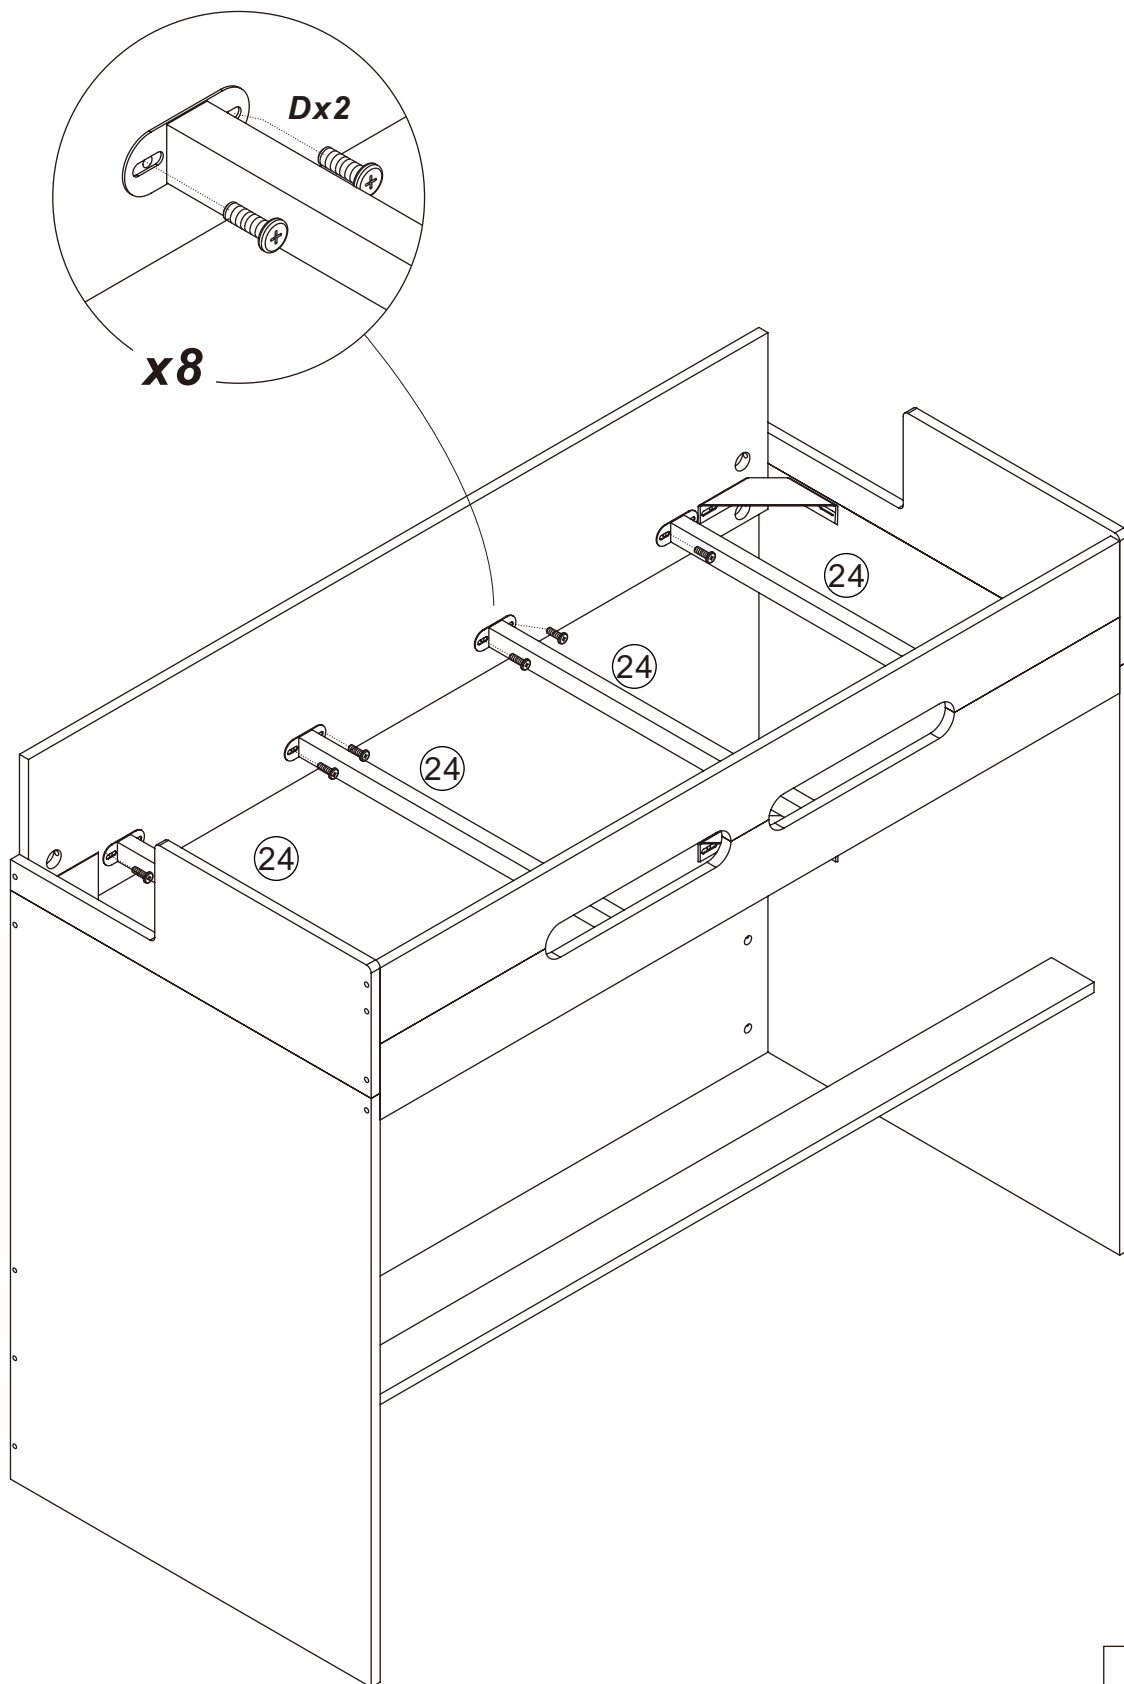

M6*15

Dx16

9.

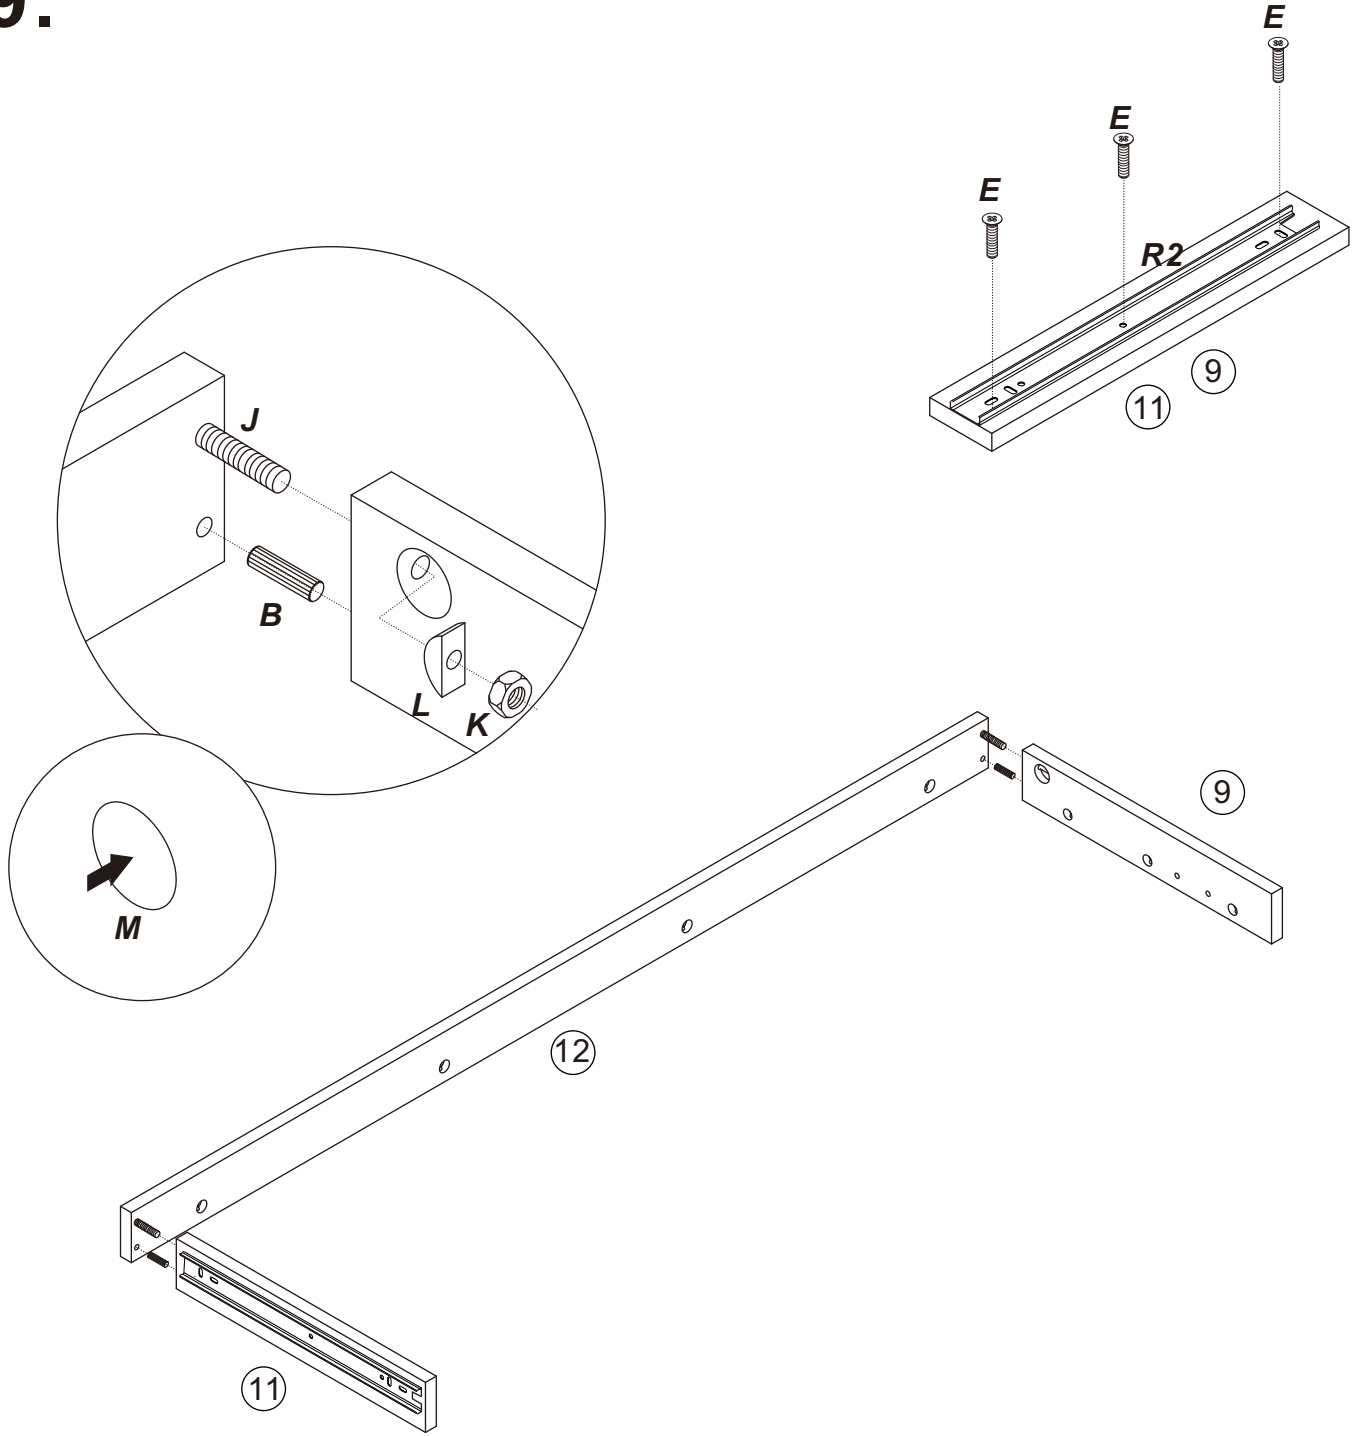

Jx2



Kx2



Lx2



Mx2





M6*18

Ex6





Bx2



10.

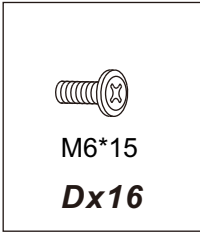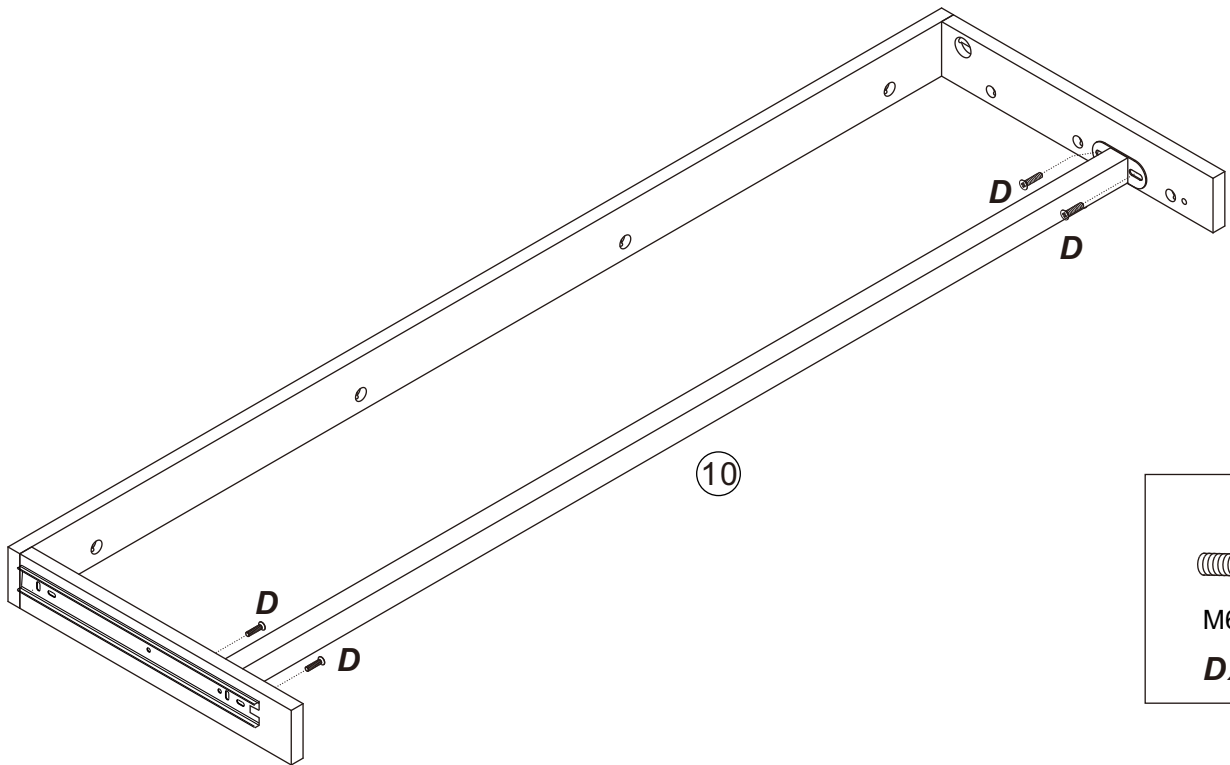

11.

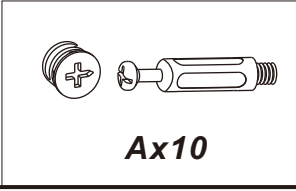
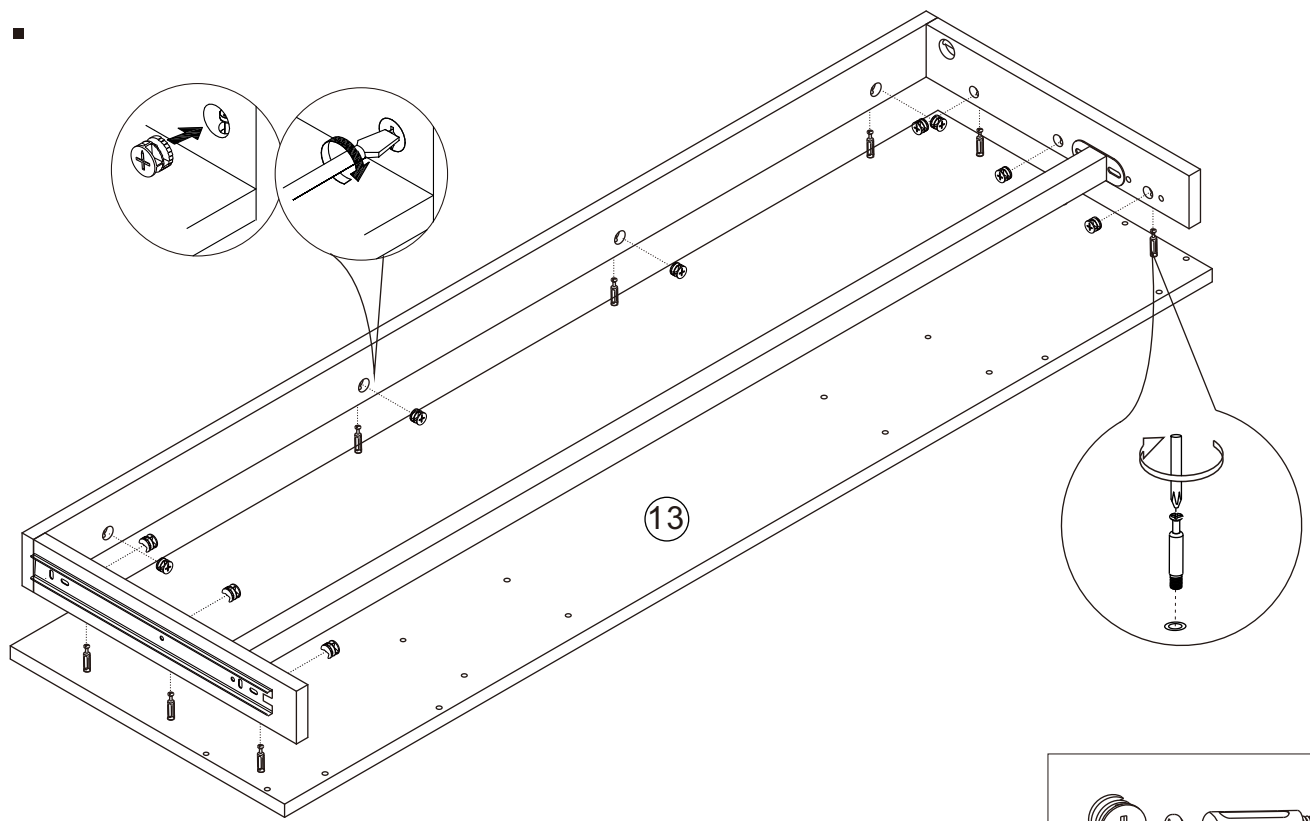


12.

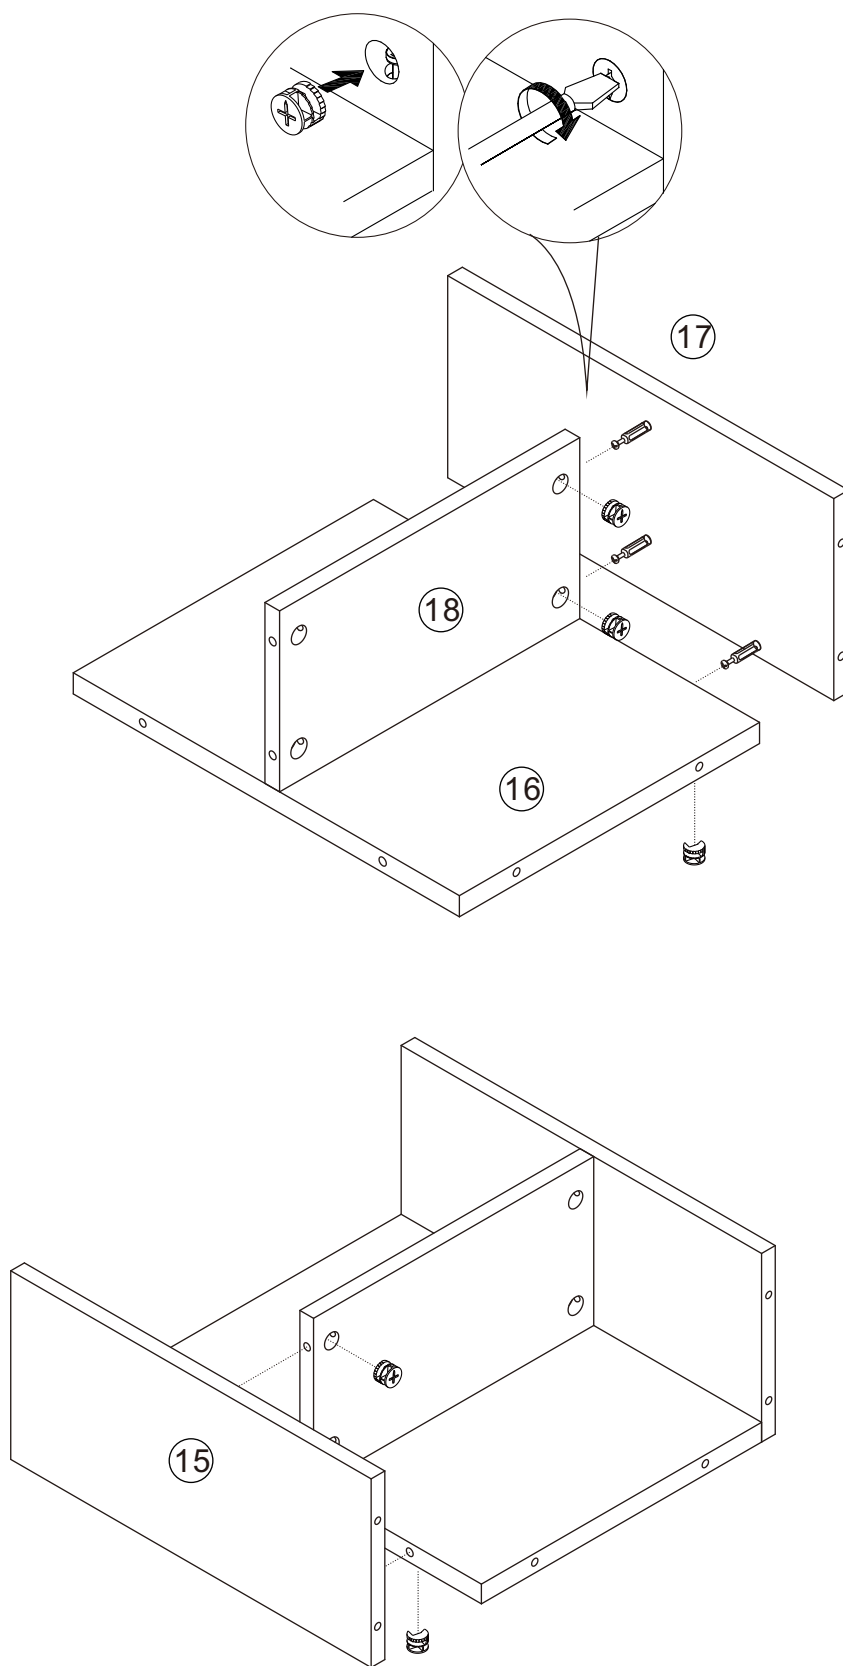



Ax8

13.

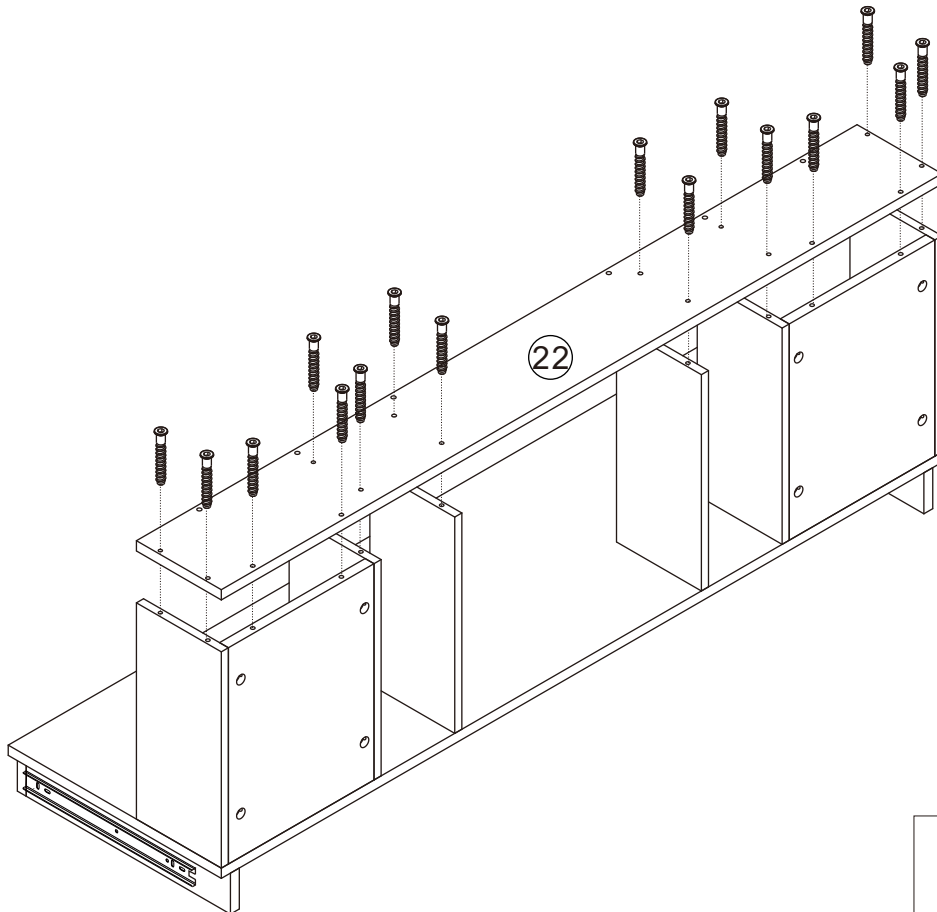
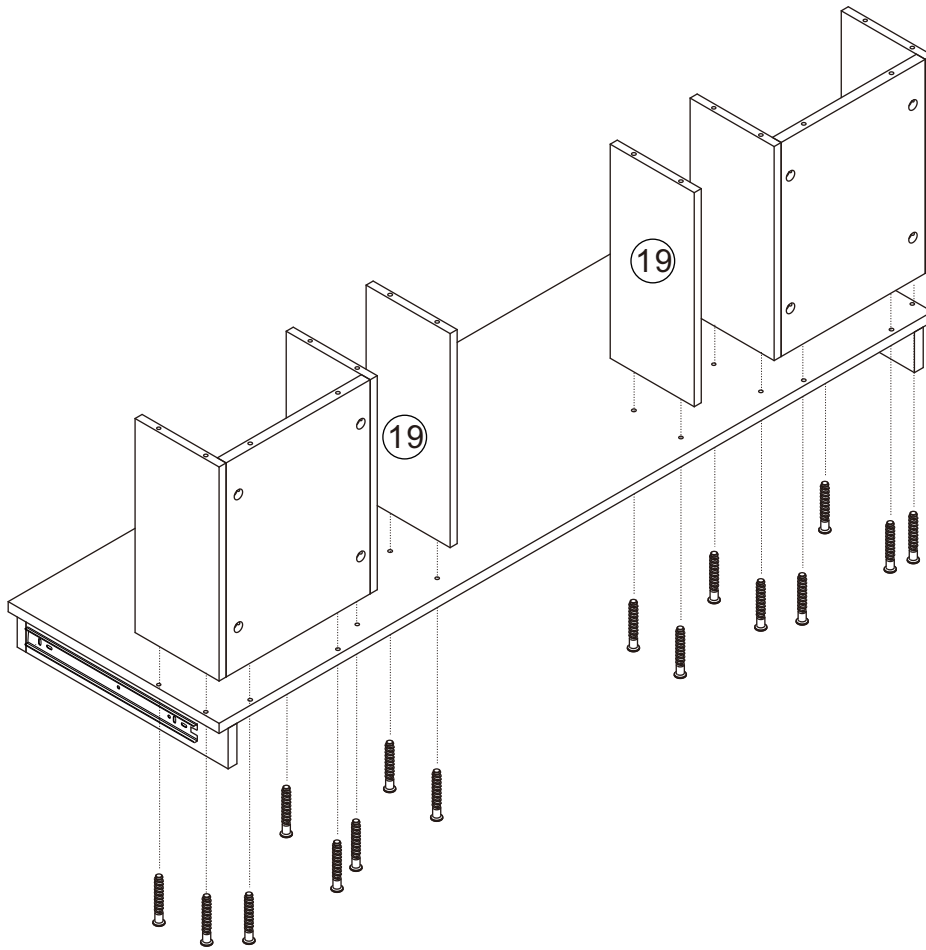


Cx32



14.

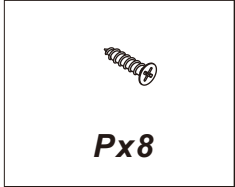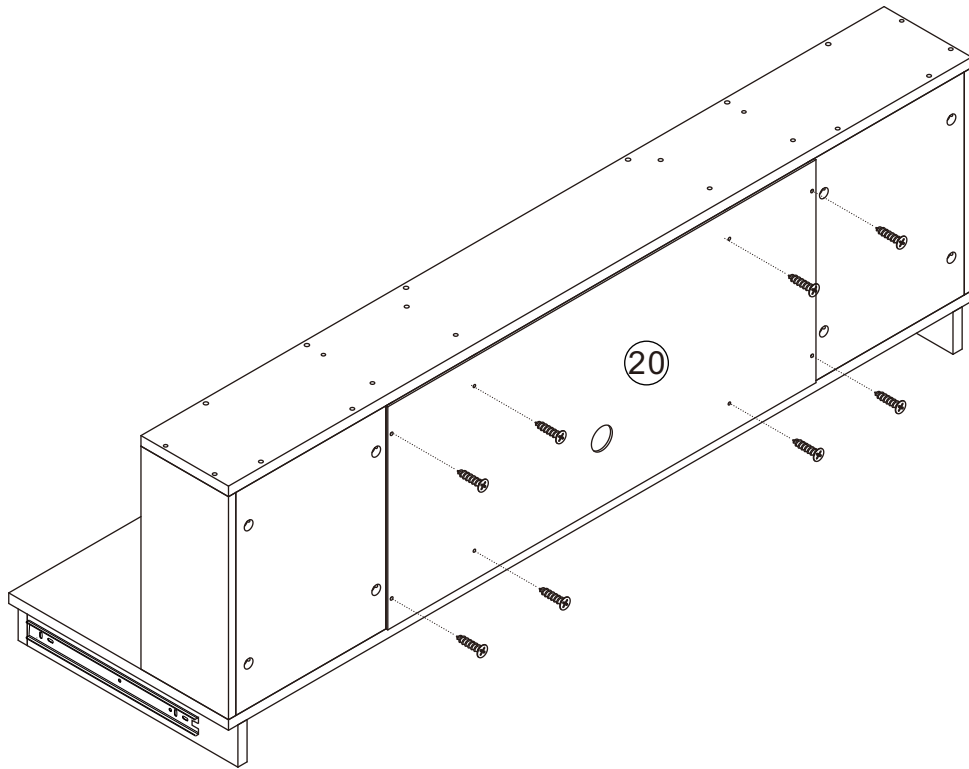

15.

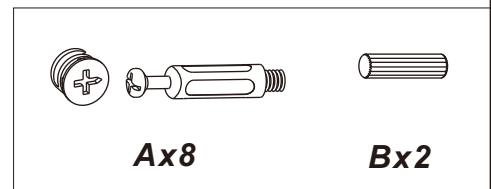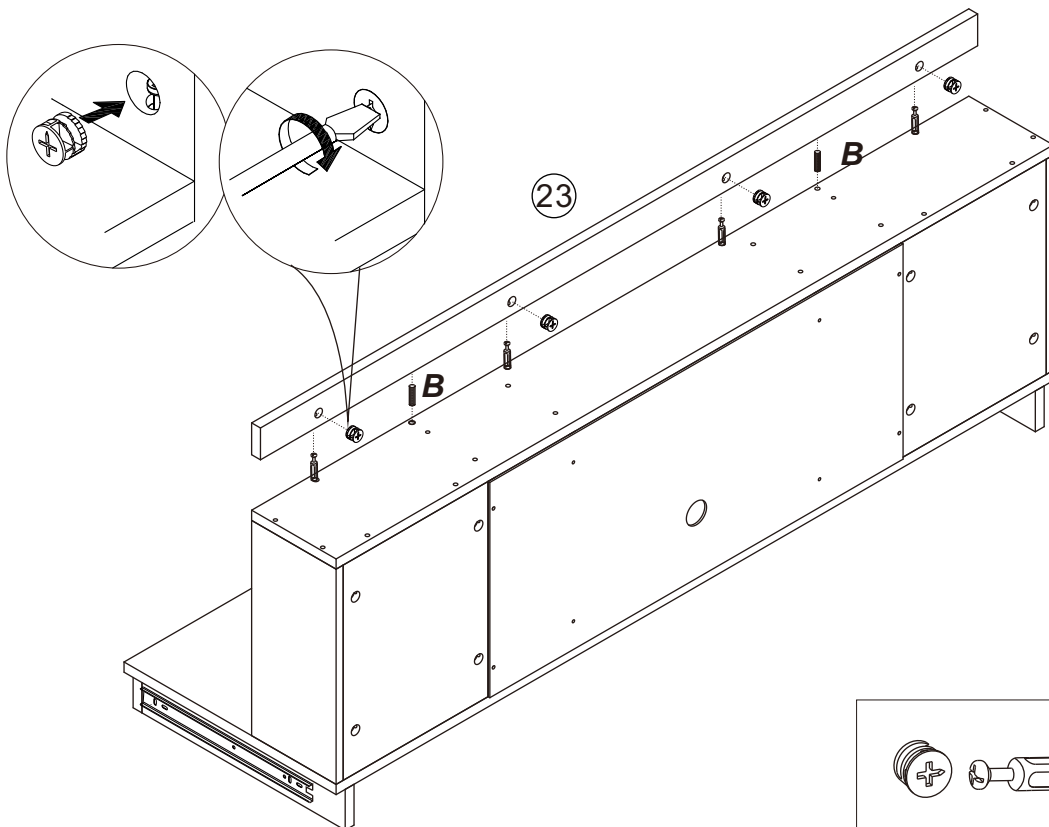

16.

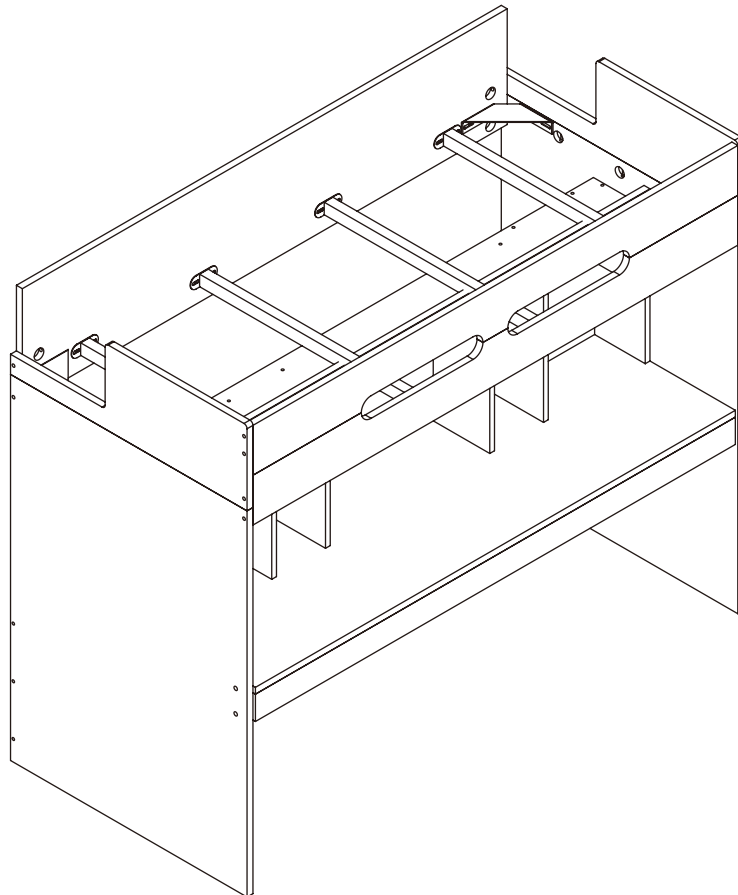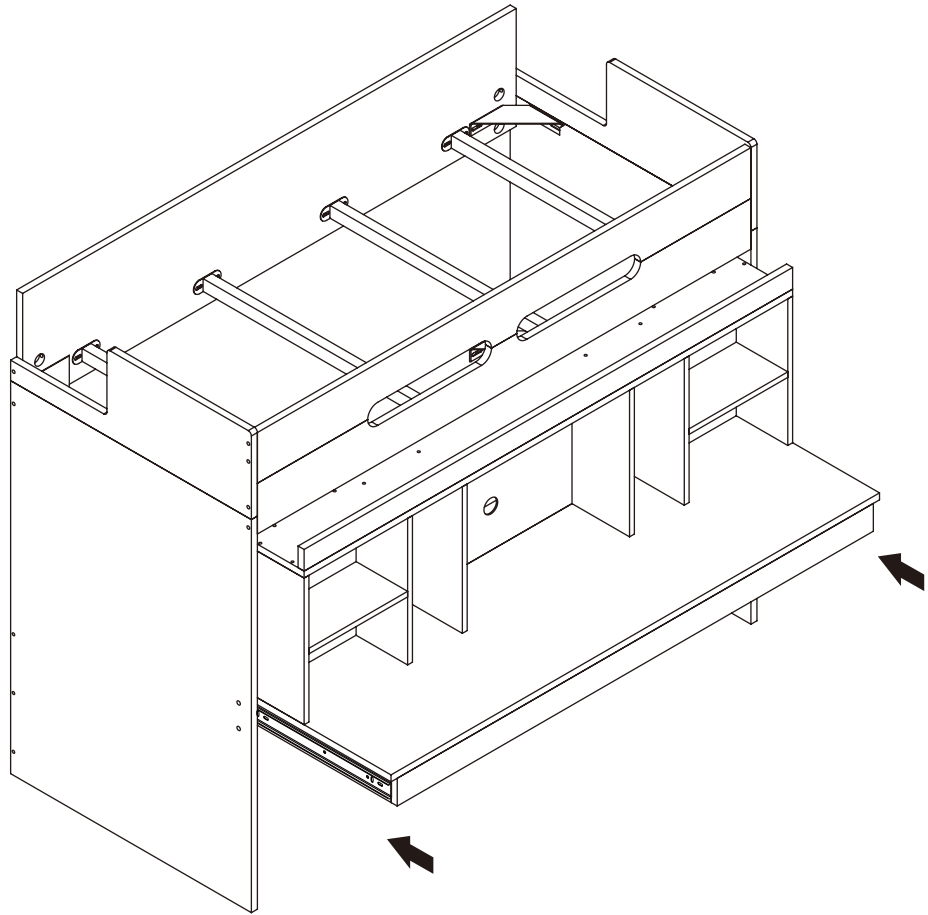

17.

