








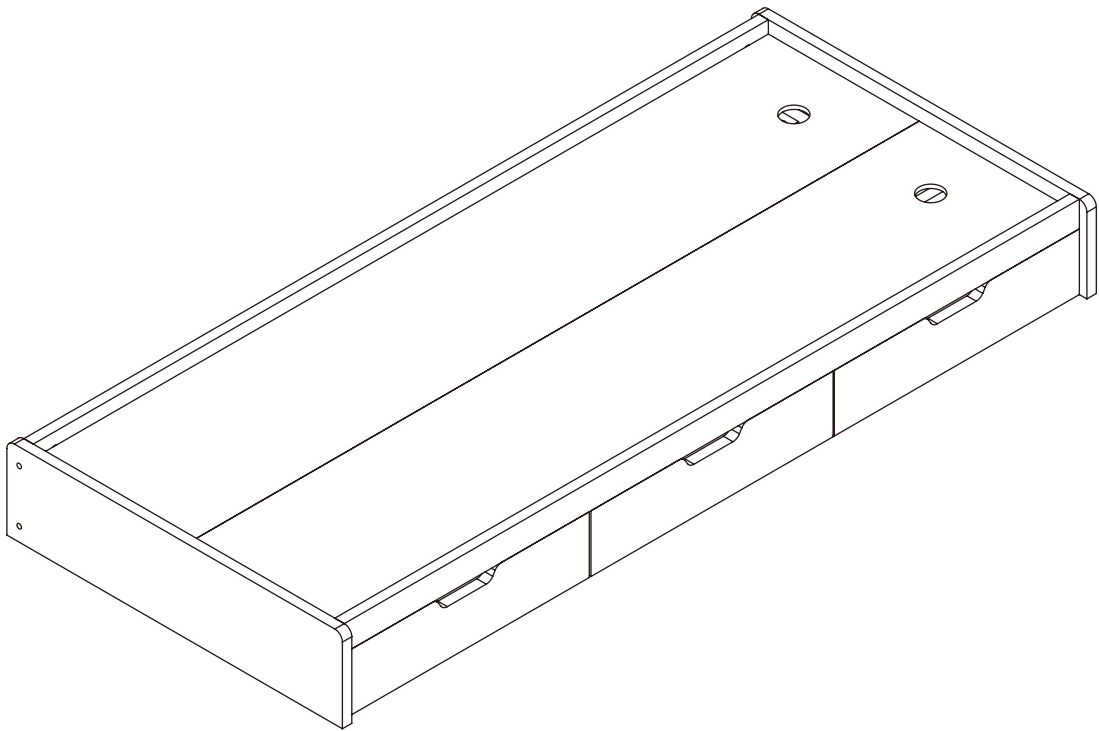





MO Loft Bed Installation Manual- Roll-out Trundle

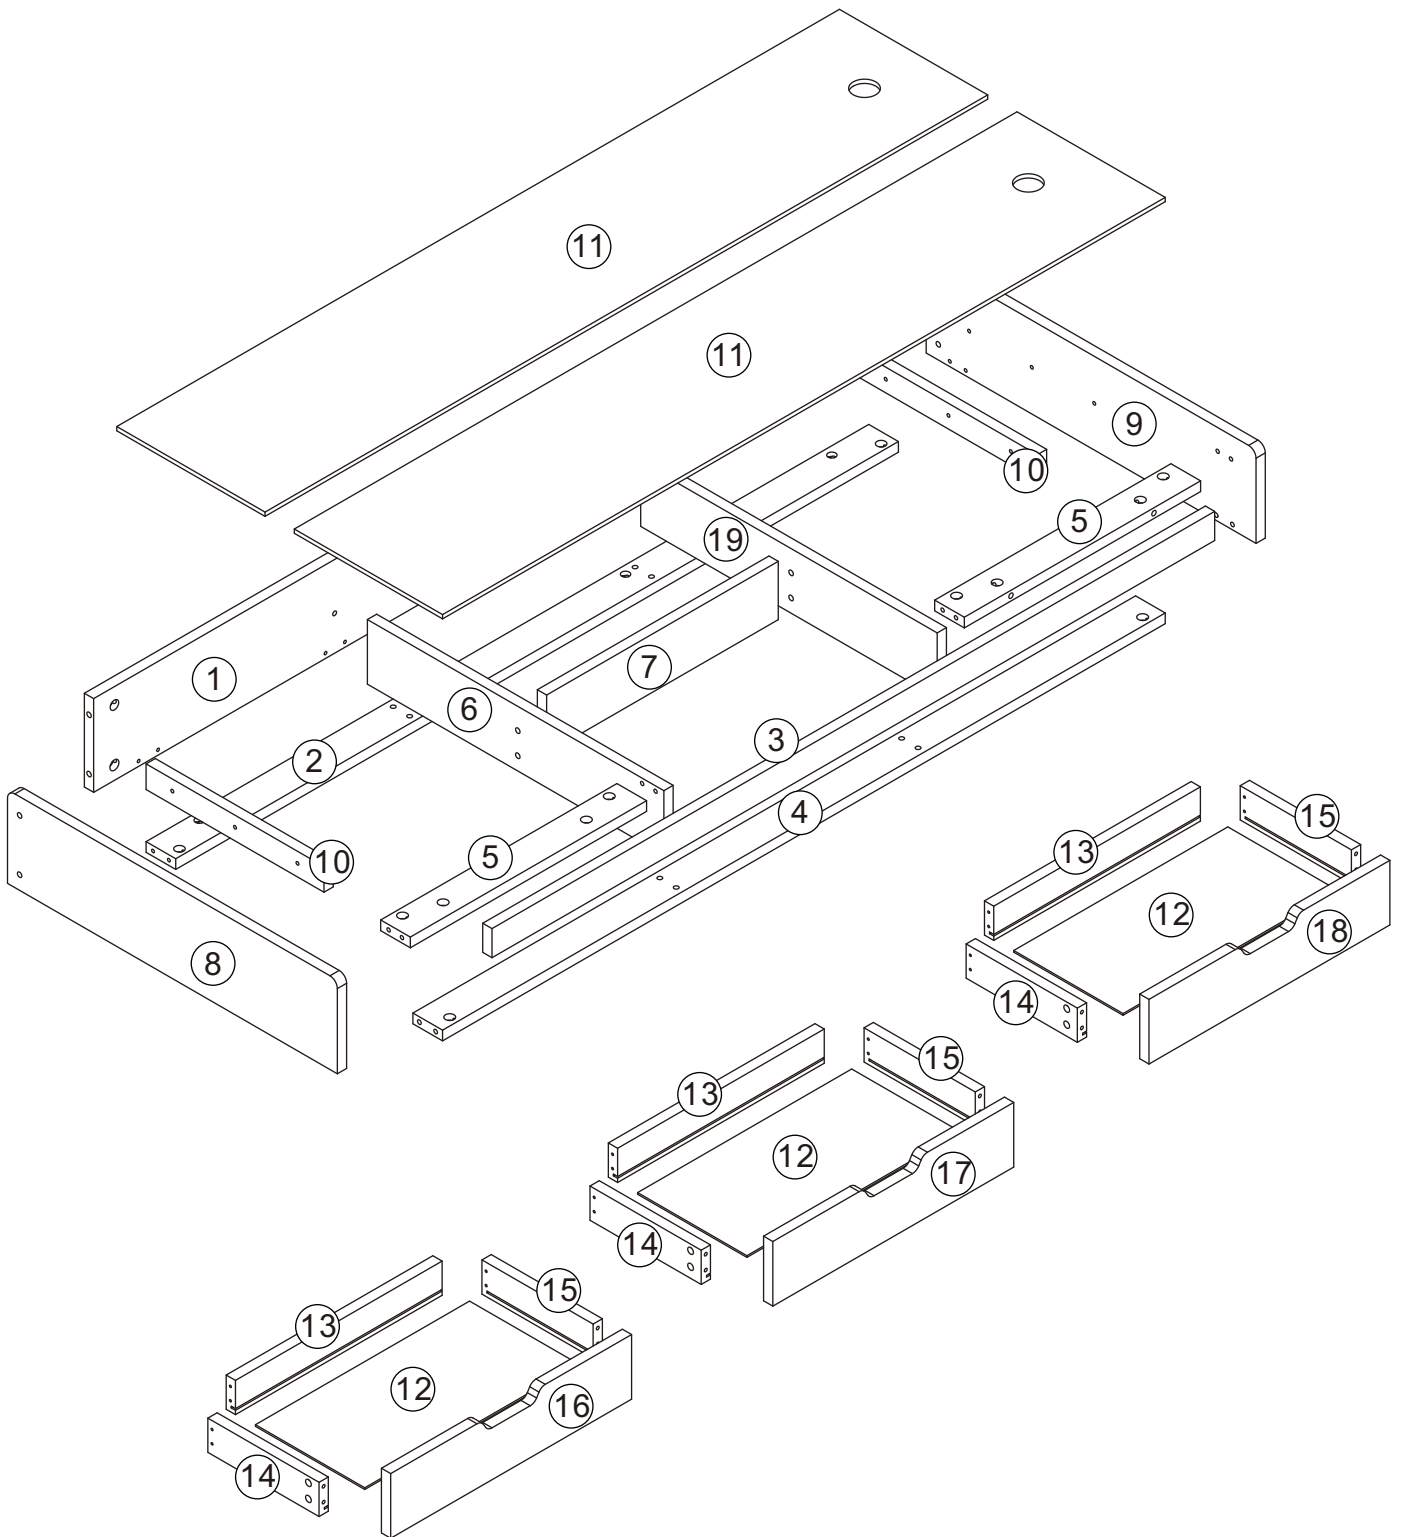





A			x34
B		8*30	x14
C		7*38	x14
D		M6*25	x6
E			x8
F		3.5*13	x62
G		3*30	x12
H			x3

1.

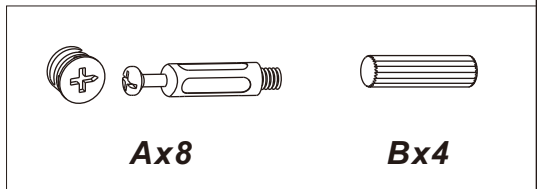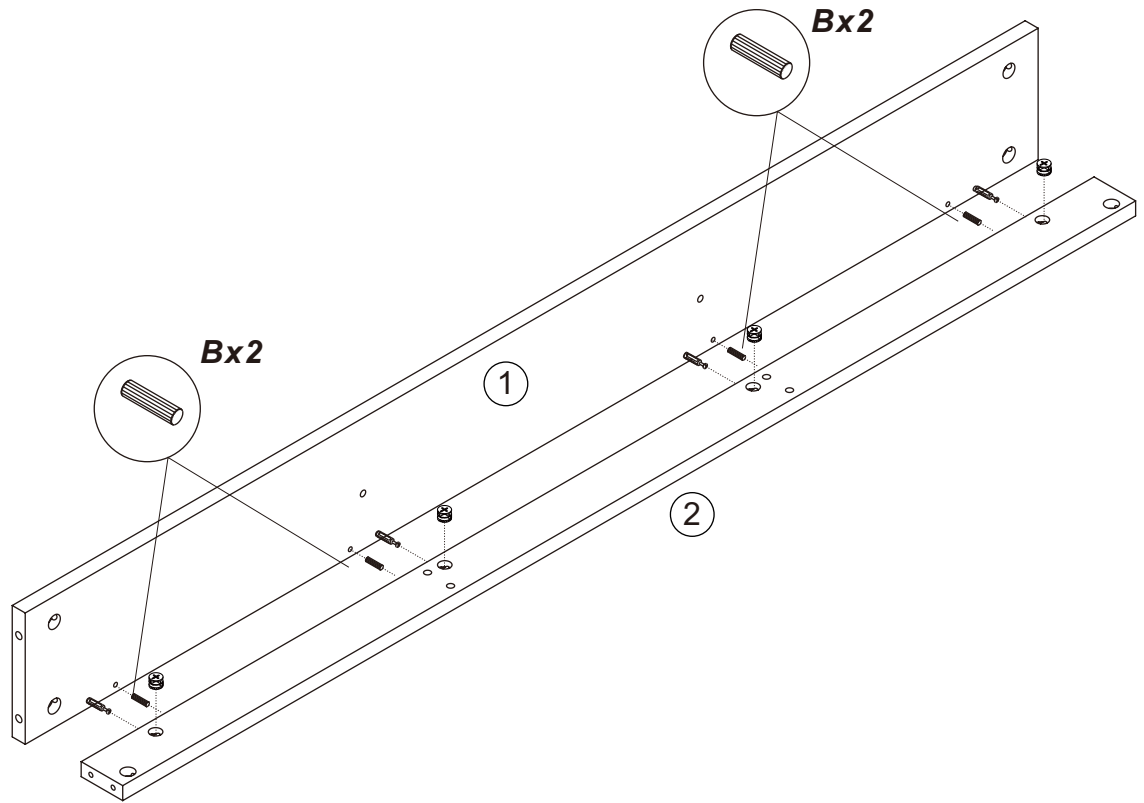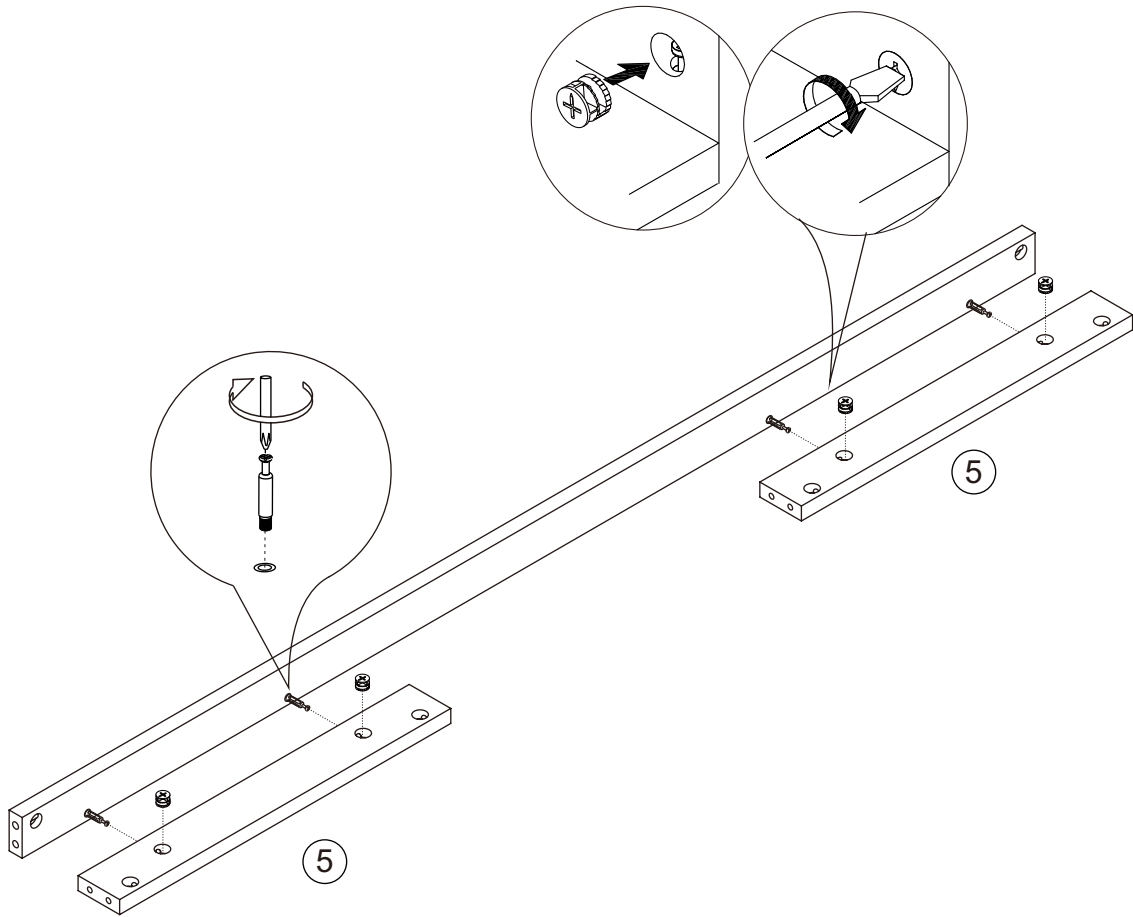



2.

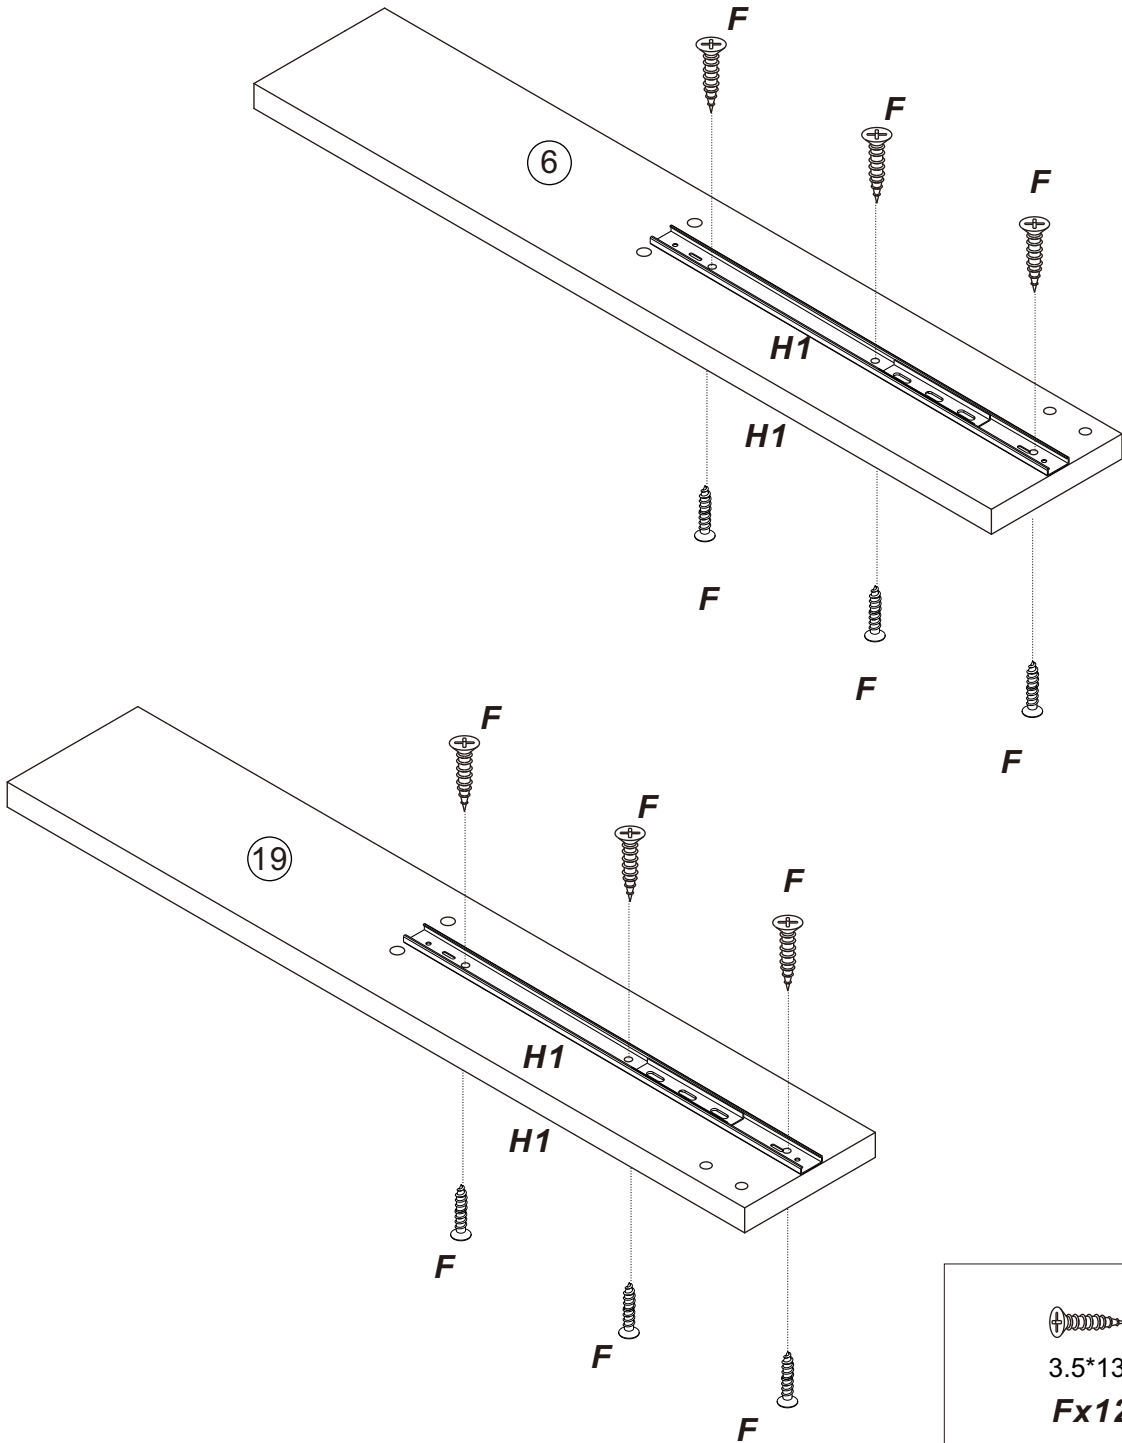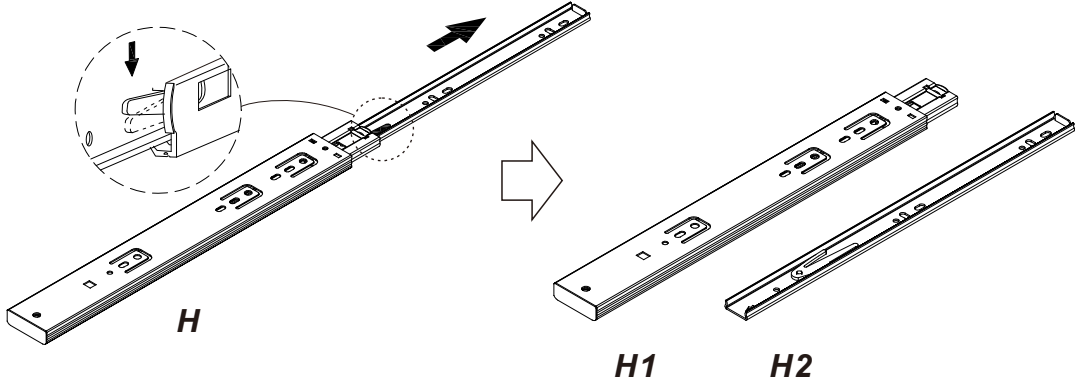




3.5*13
Fx12


Hx4

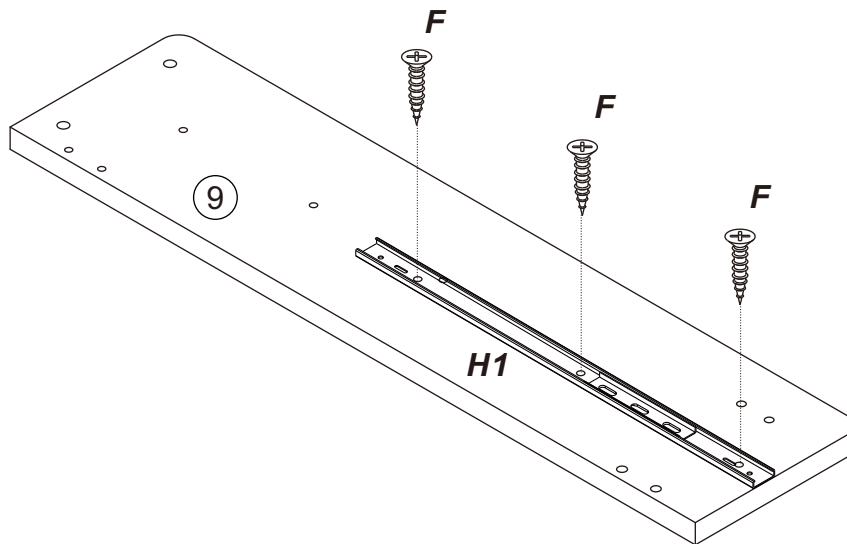
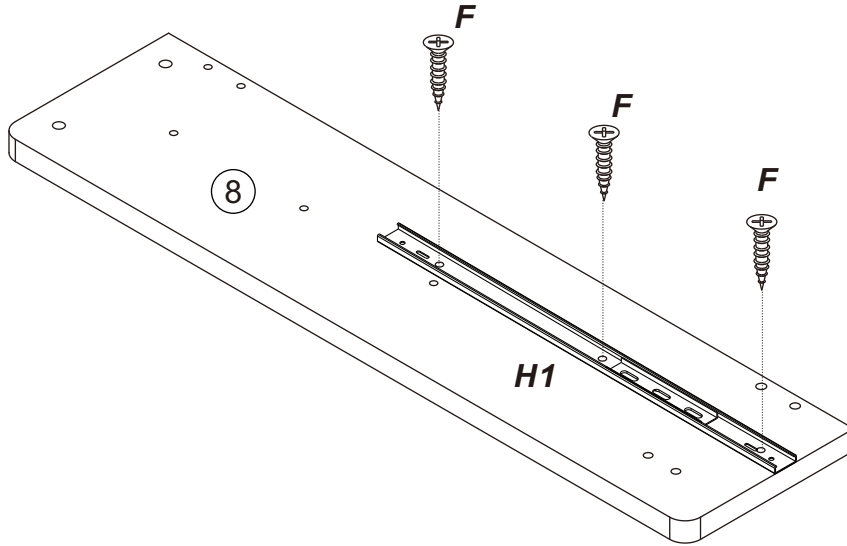
3.






3.5*13
Fx6


Hx2


4.

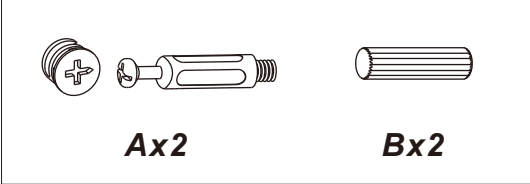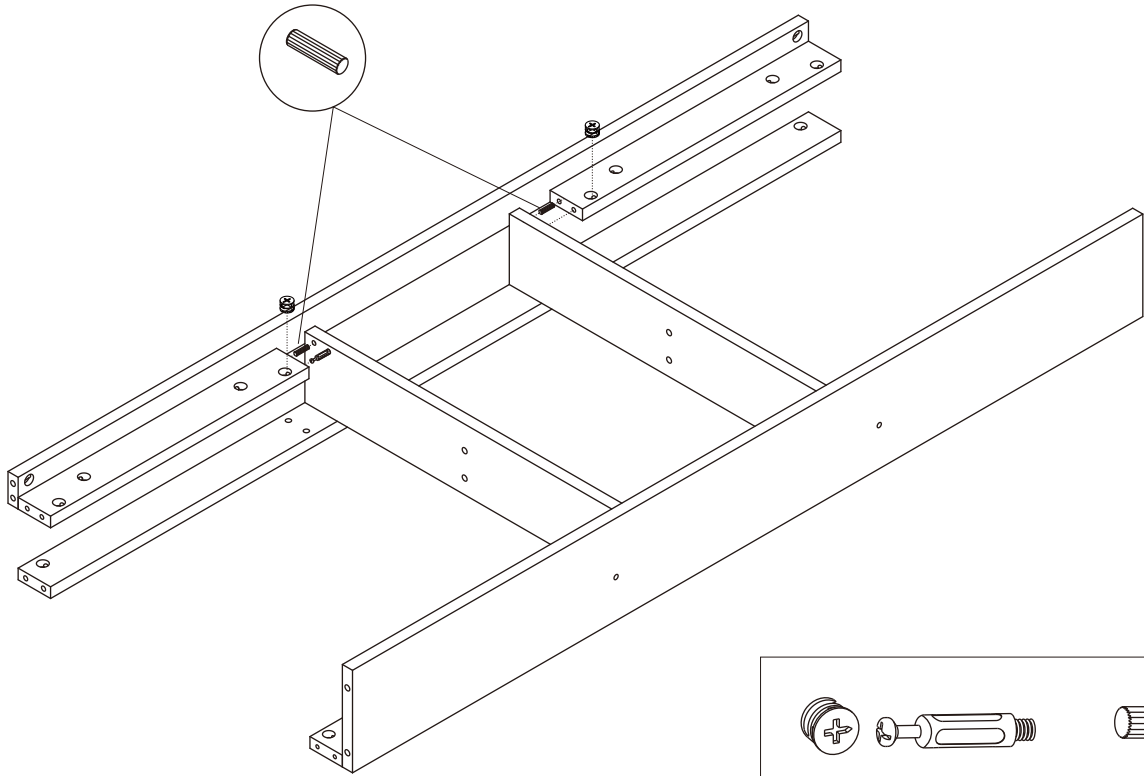

5.

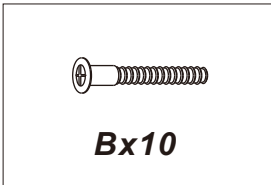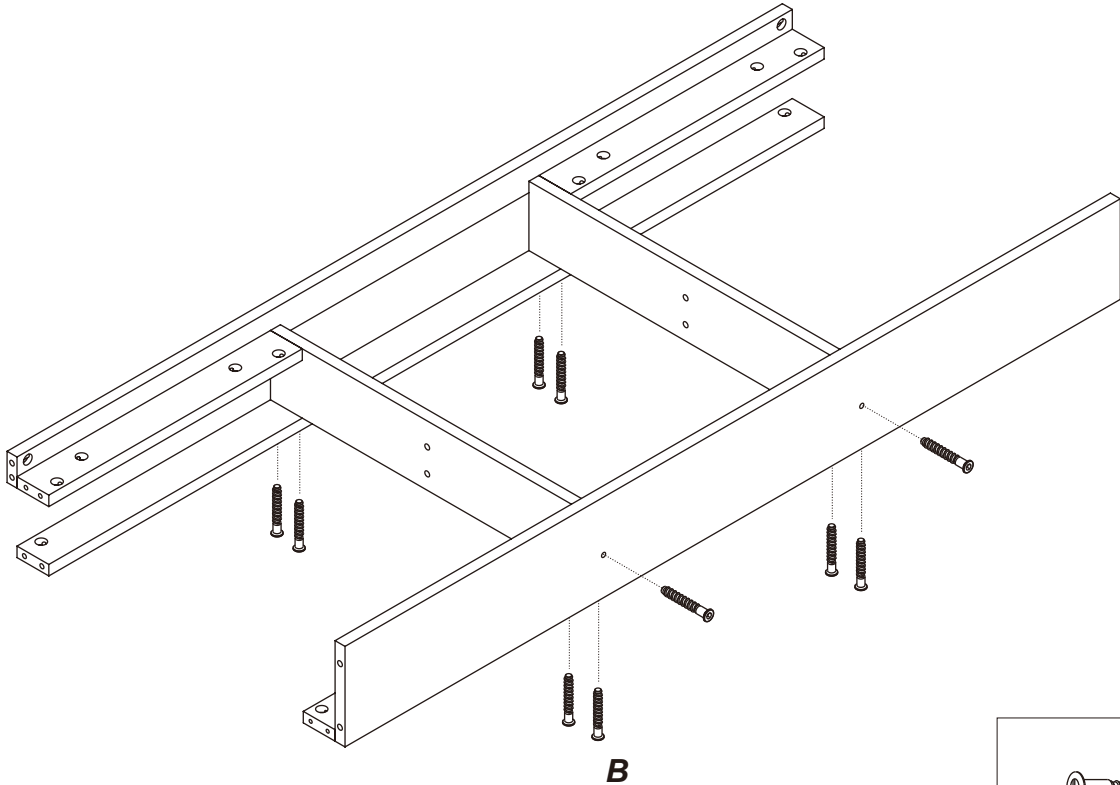

6.

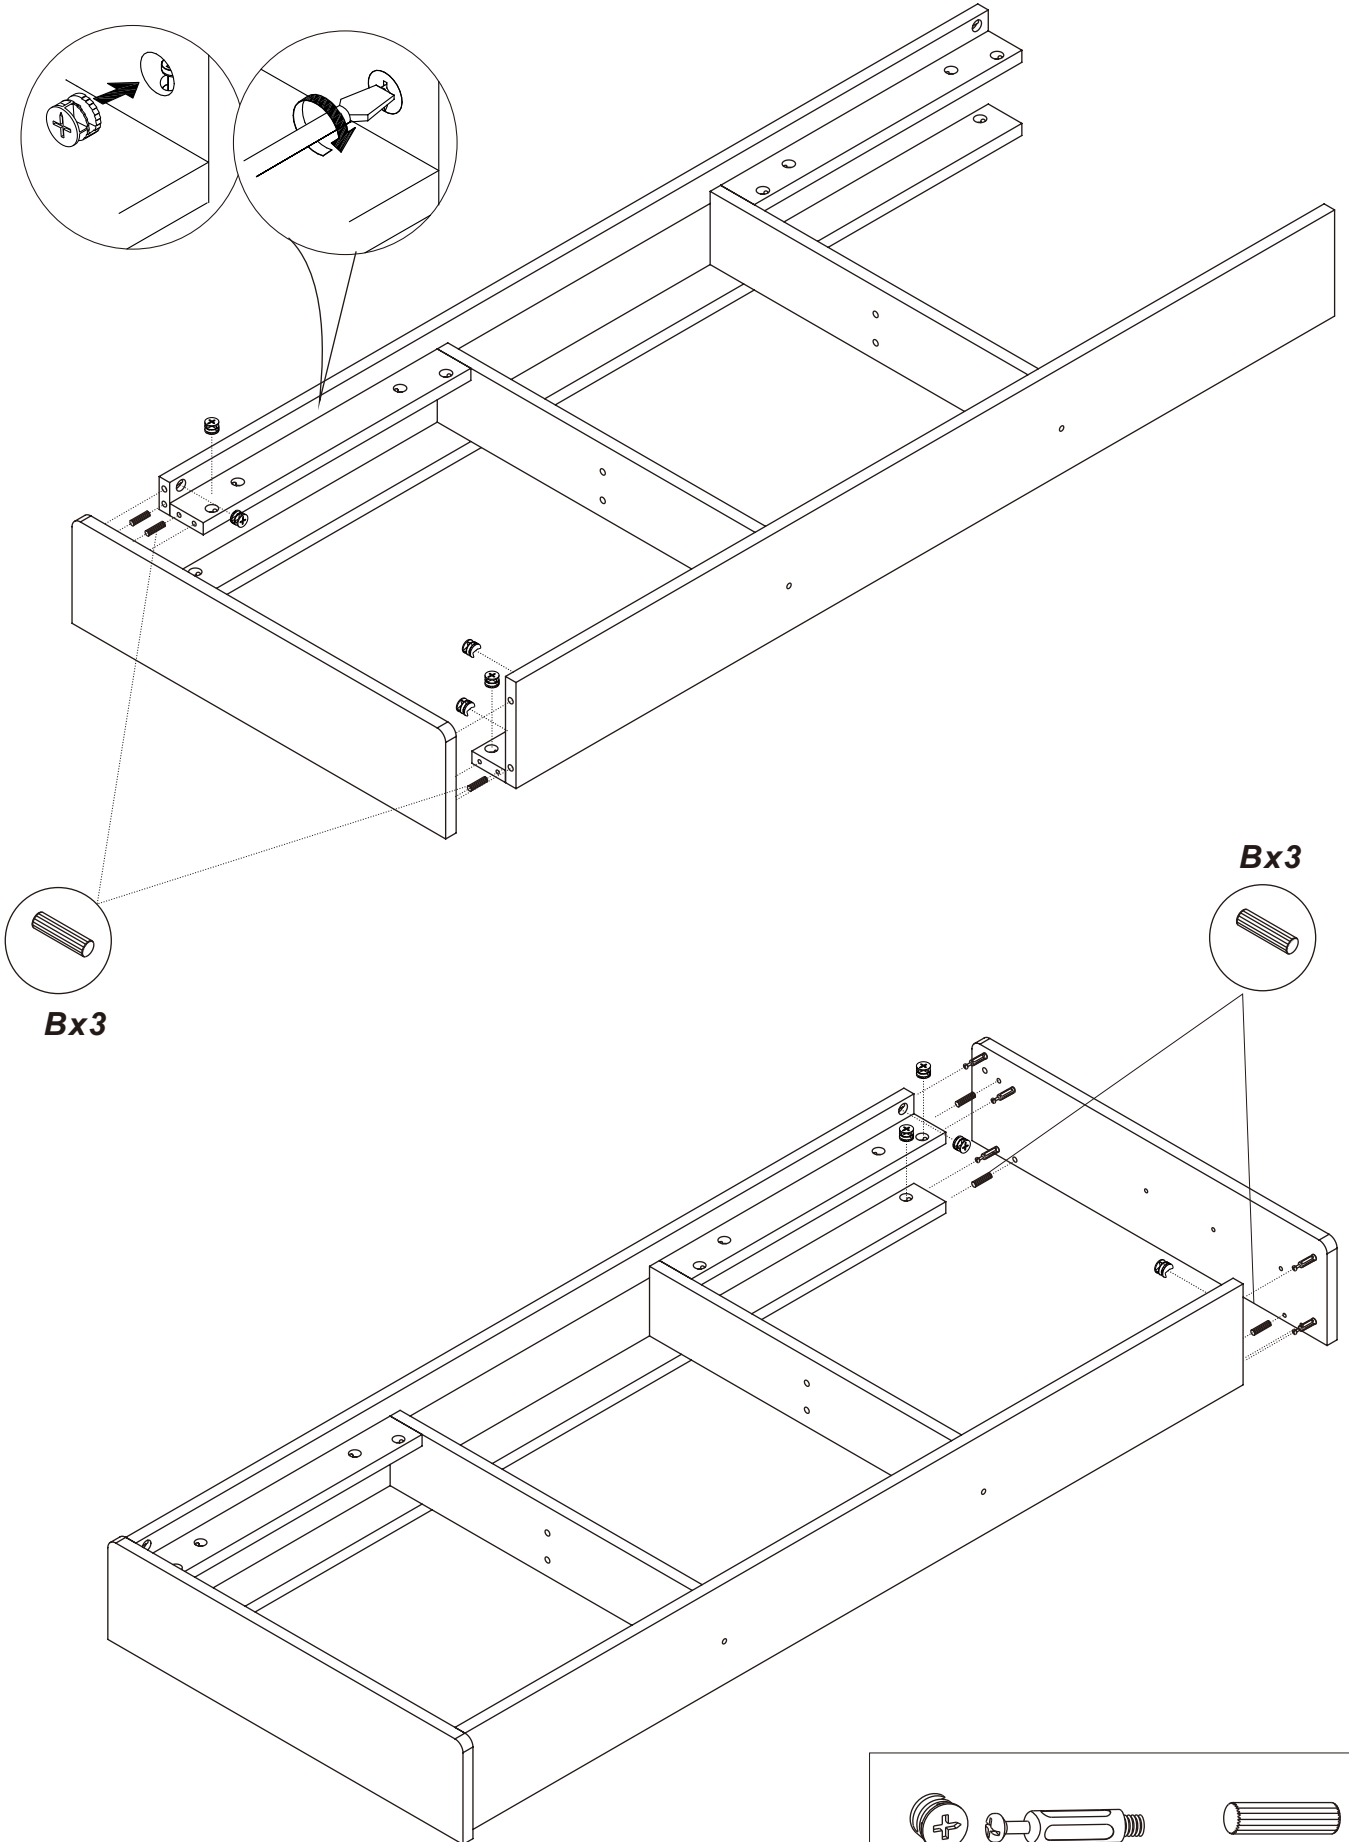

Bx3


Bx3



Ax12


Bx6

7.

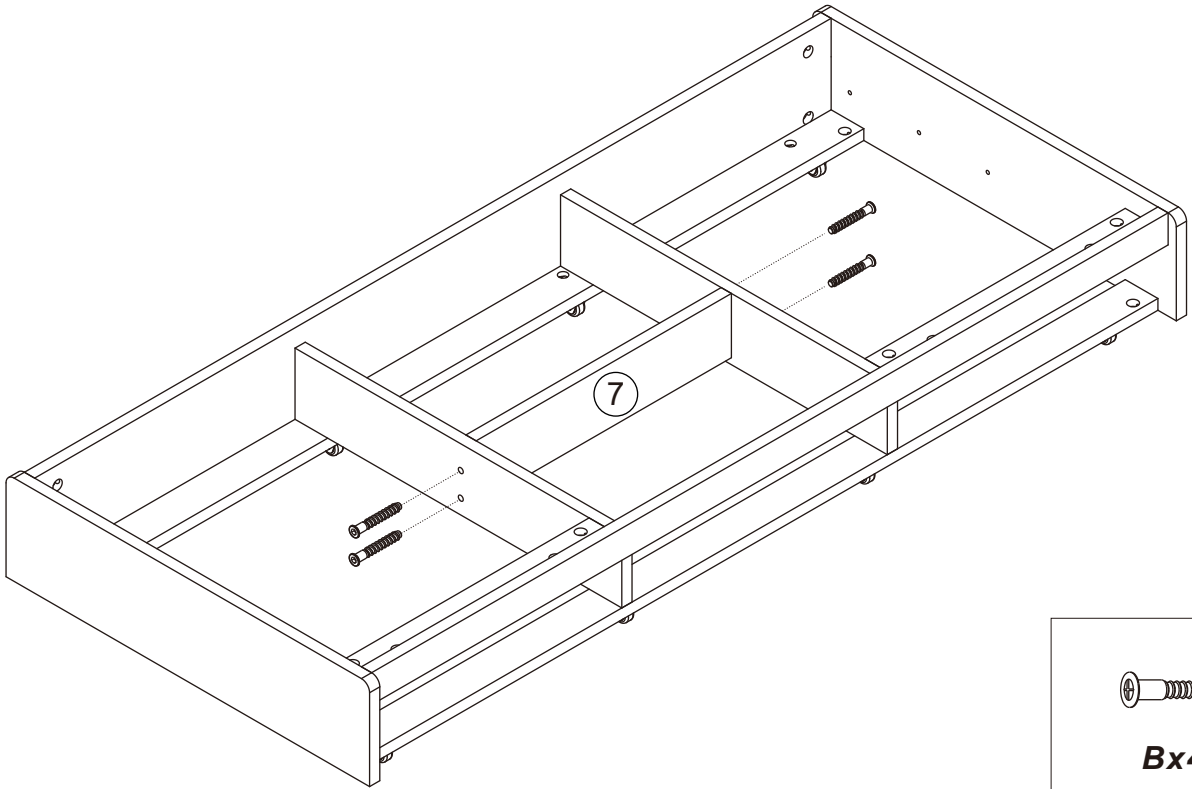

Bx4



8.

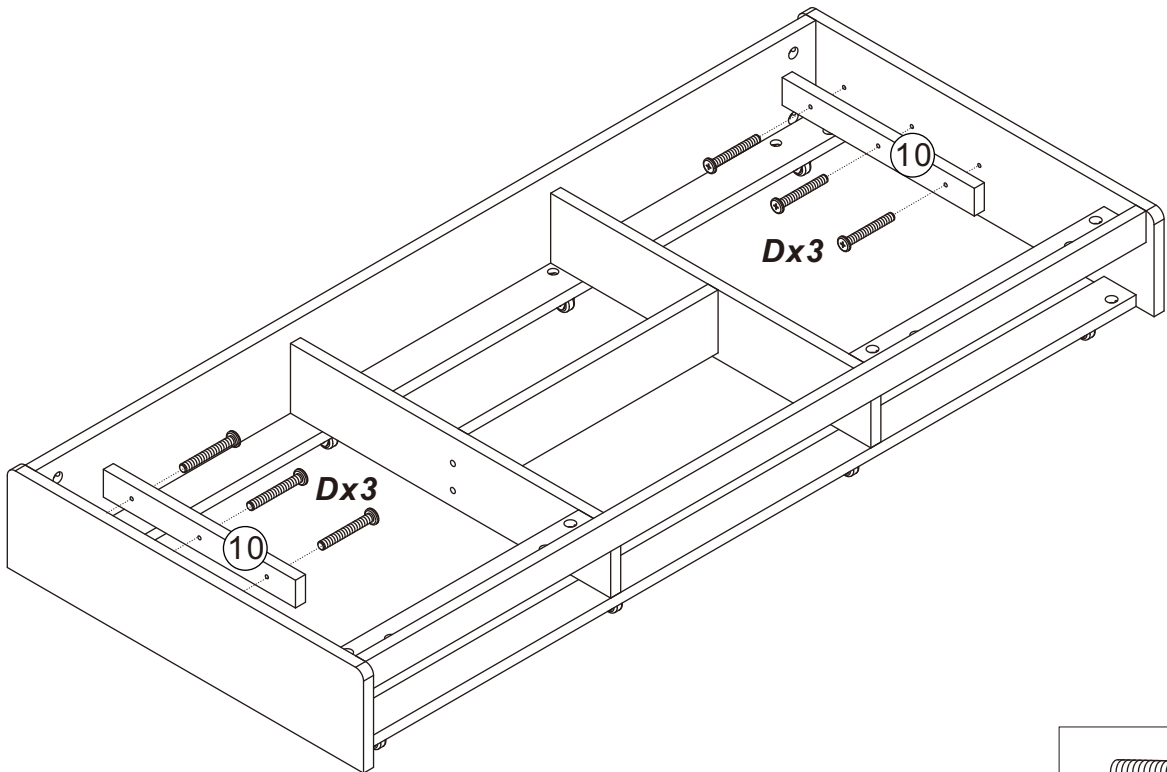



M6*25


Dx6

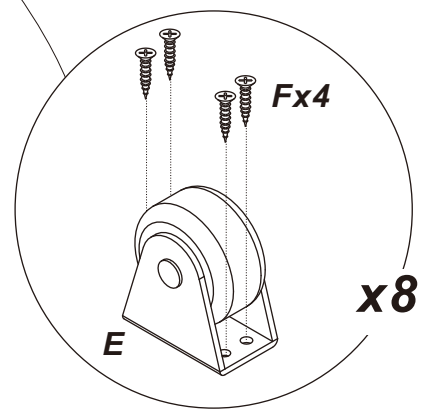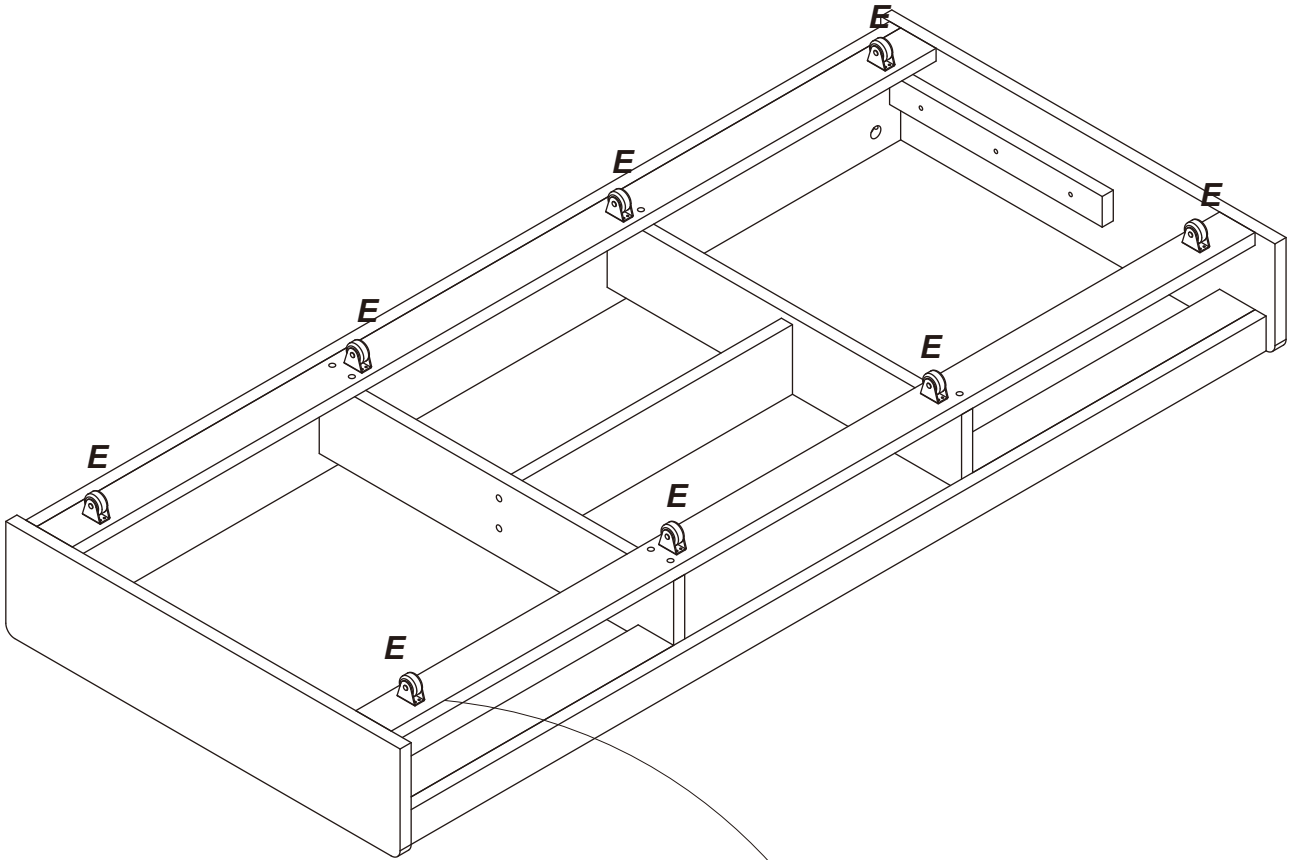9.




	
3.5*13	<i>Ex8</i>
<i>Fx32</i>	



10.

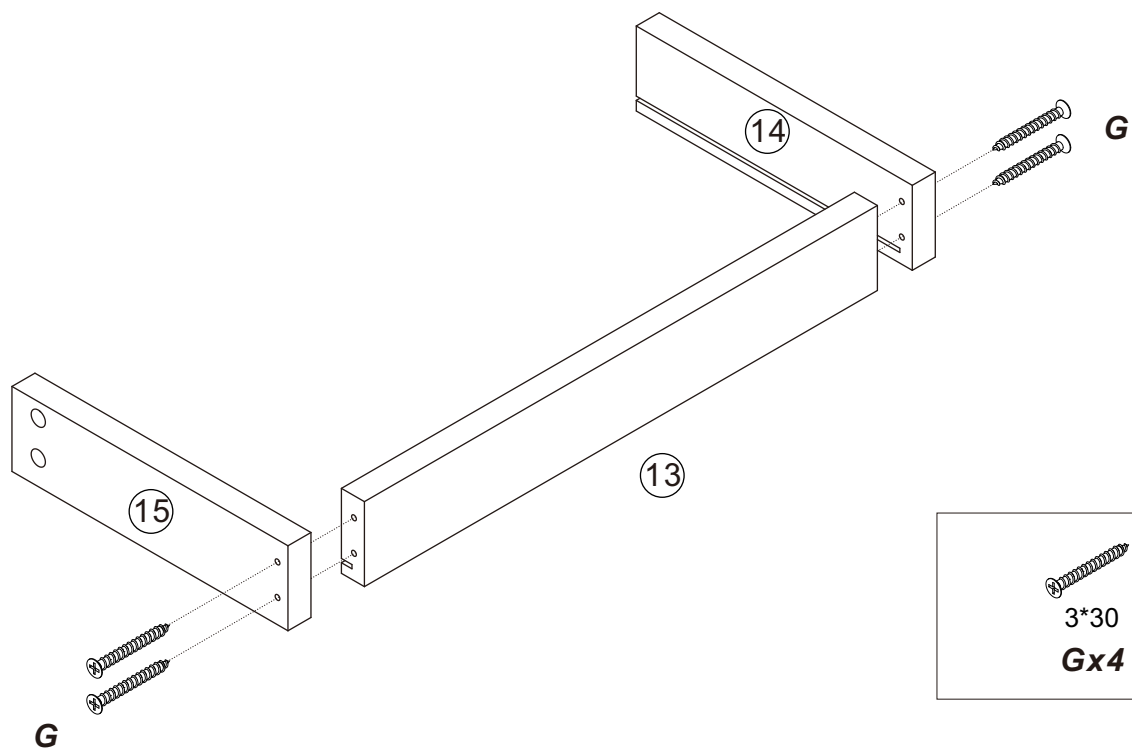

11.

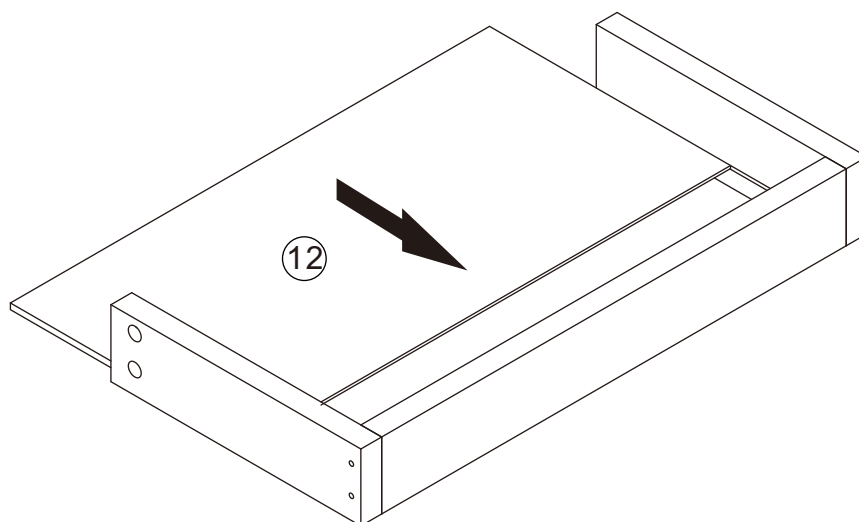


12.

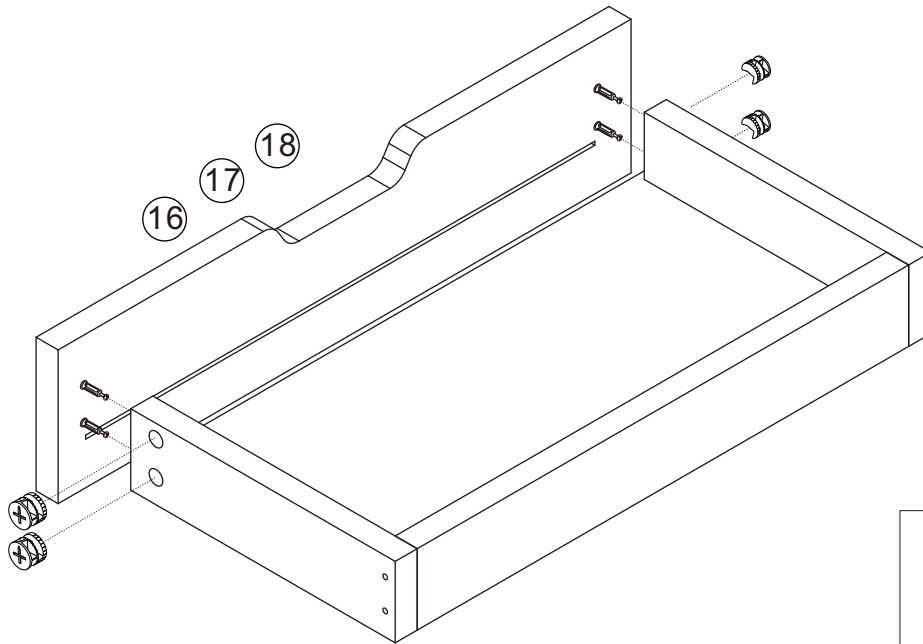

Ax4

13.


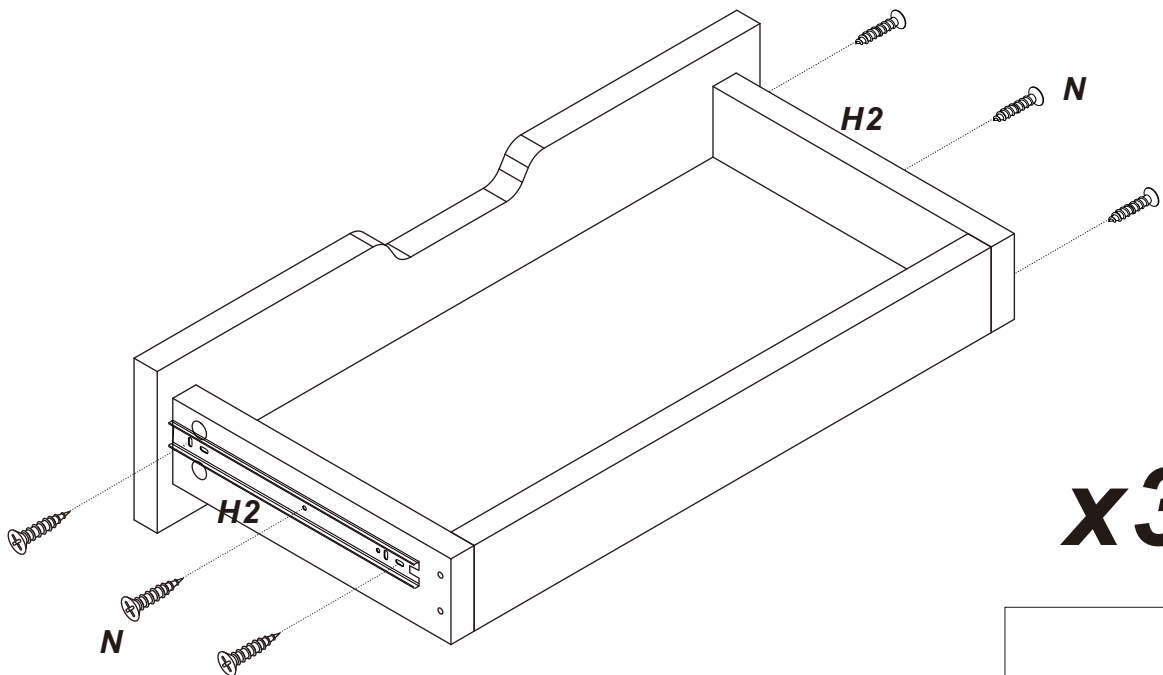


x3




3.5*13
Nx6


14.

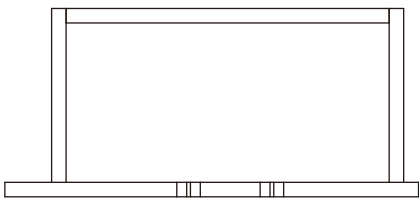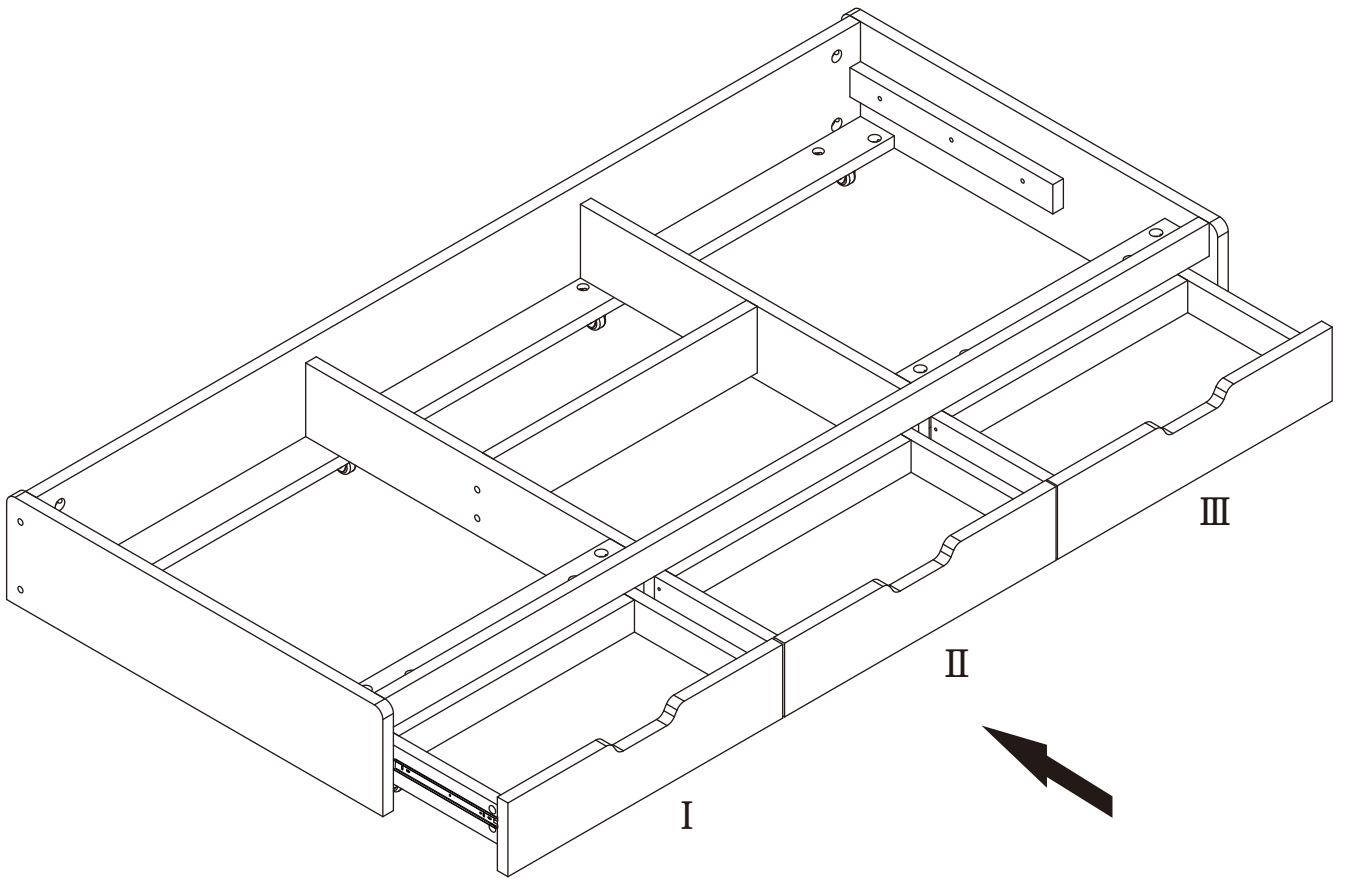

I

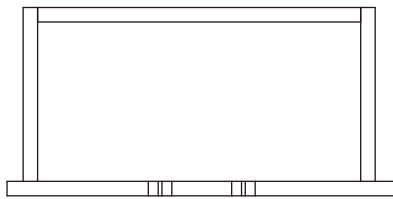

II

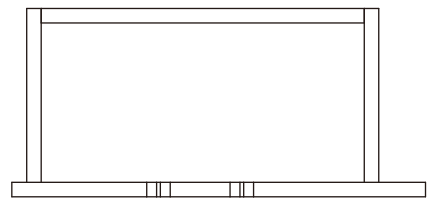

III

15.

