


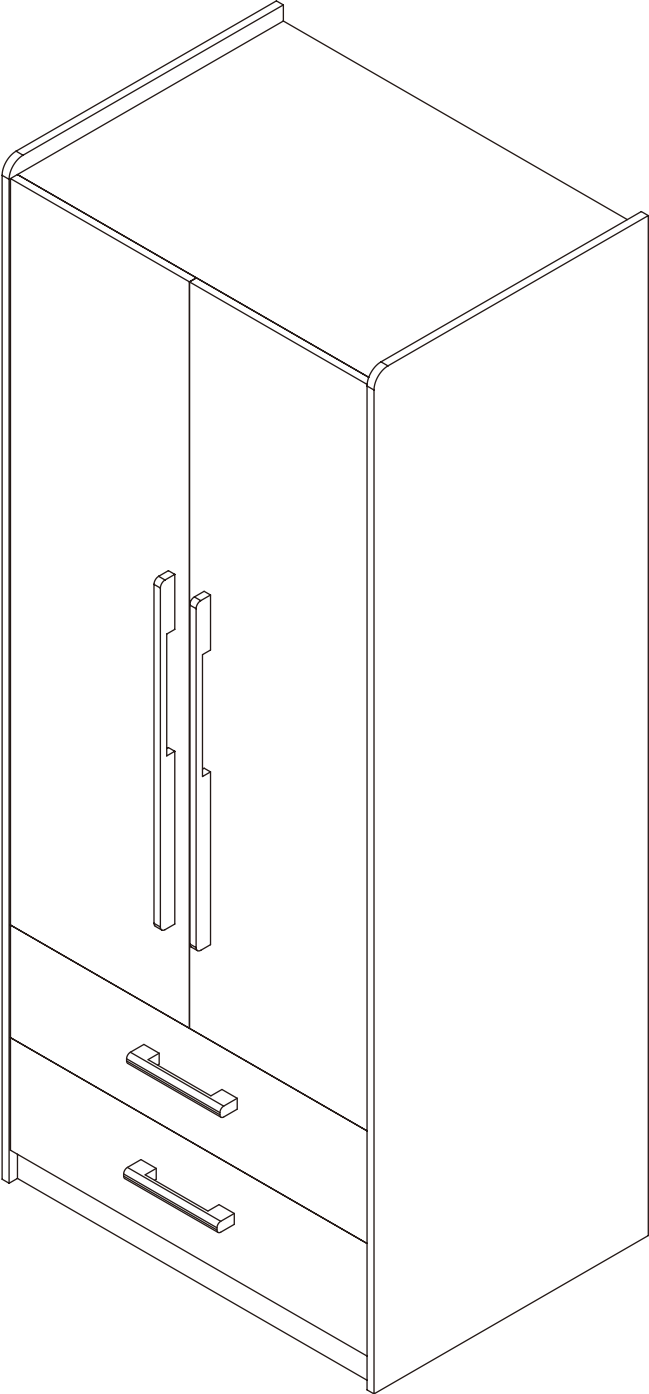
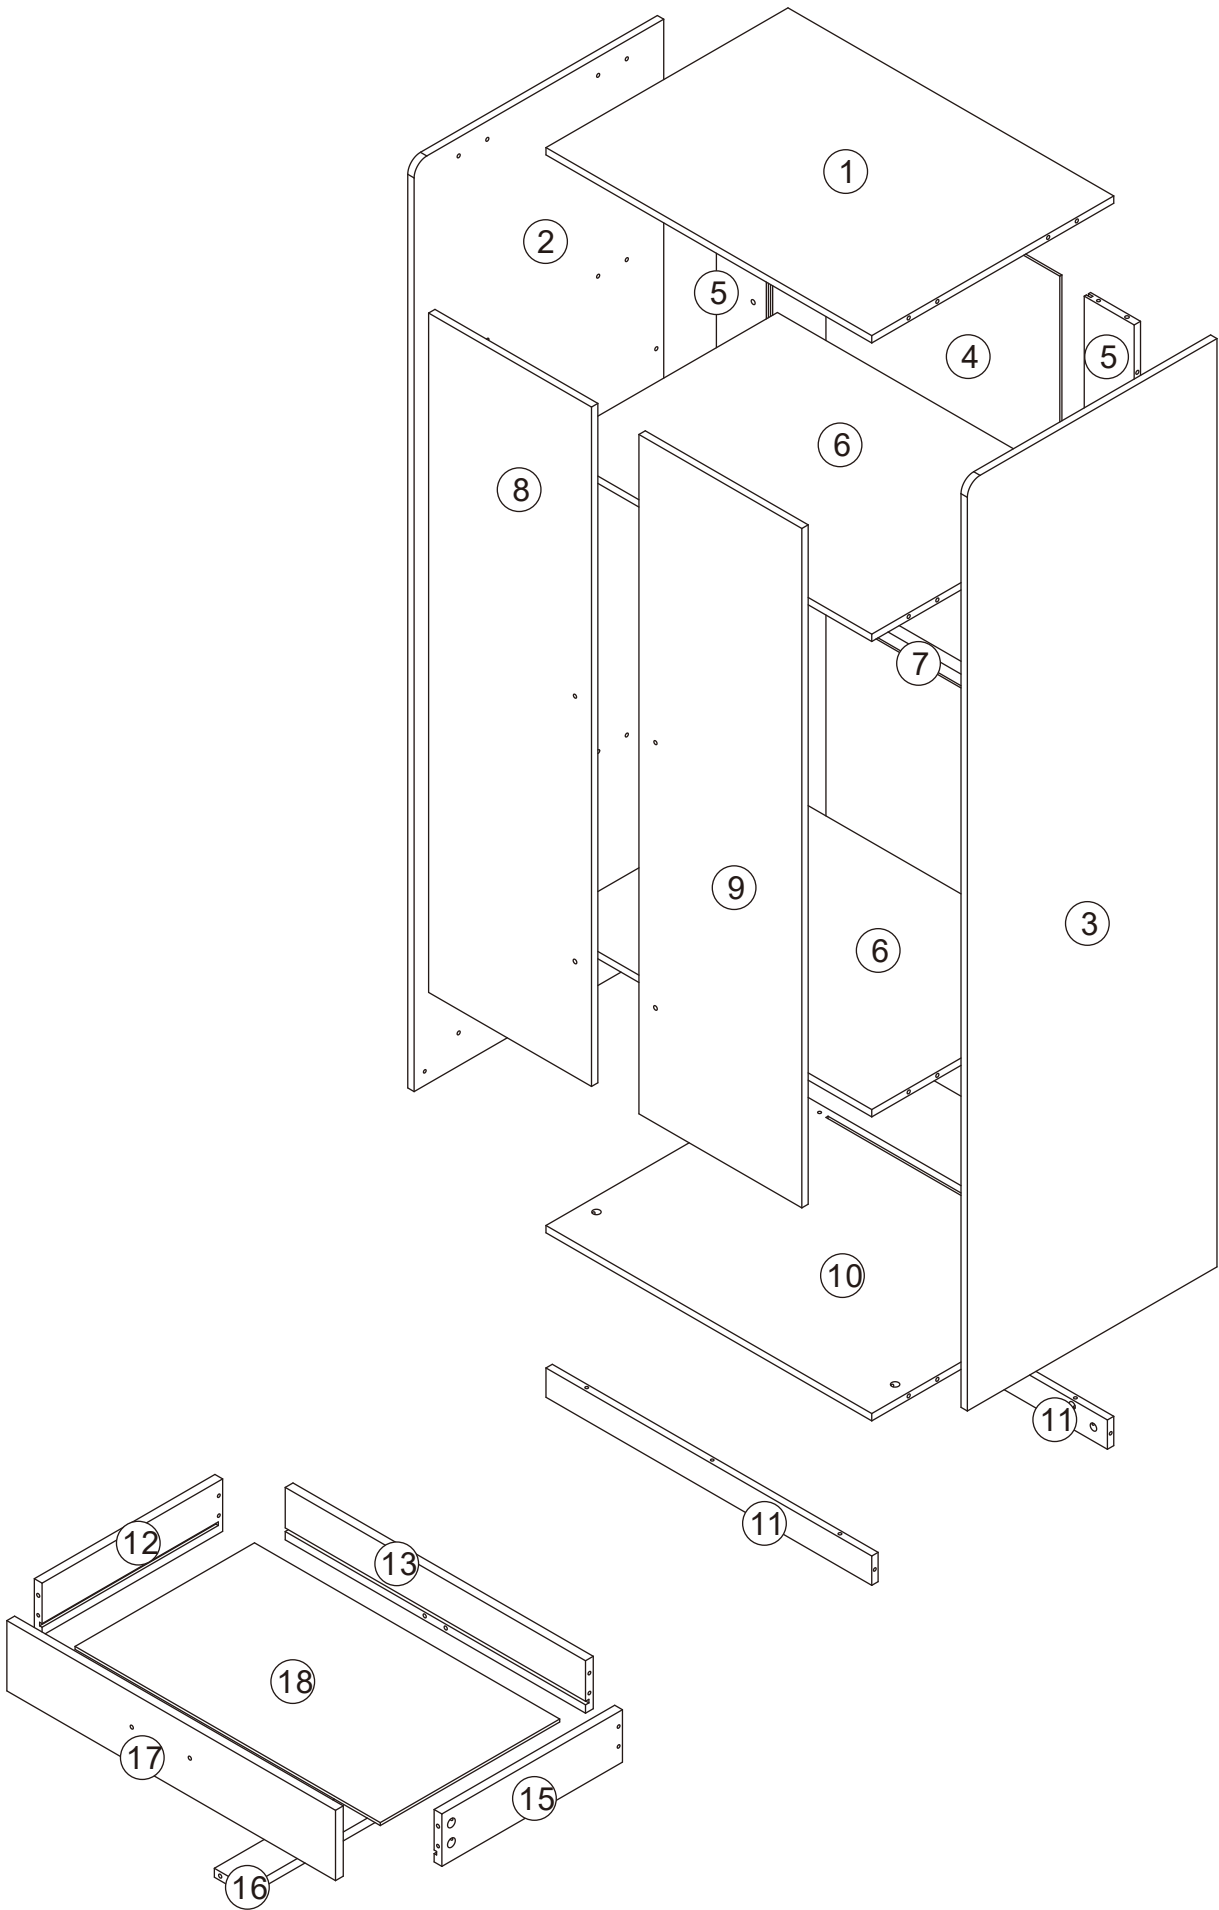
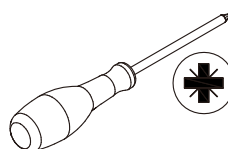



TEOM Wardrobe Installation Manual

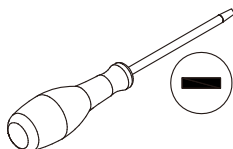

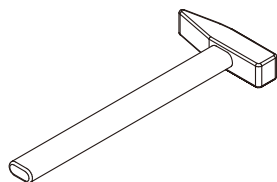


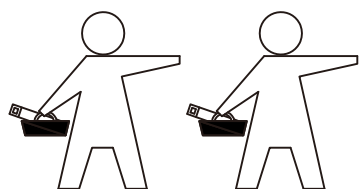


Ax55



Bx16




Cx4



M7*38


Dx6

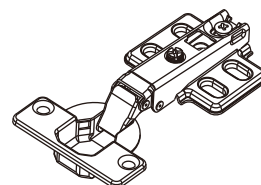

Ex2




Fx48



M3.5*14

Gx10




M4*18

Hx10



Jx1

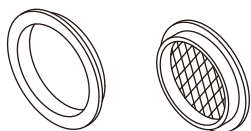

Kx10




Lx8




3.5*35


Mx2

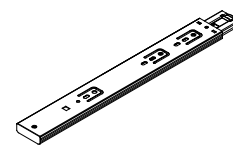


Nx2

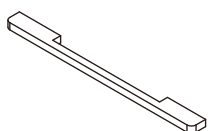


Ox2

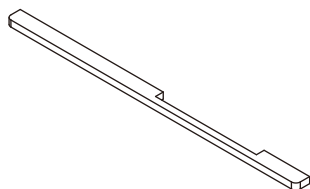




Px1

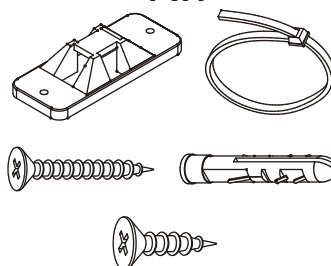




Qx55

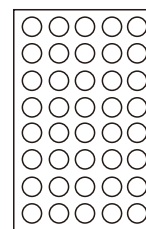


1.

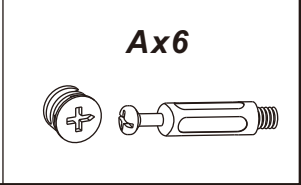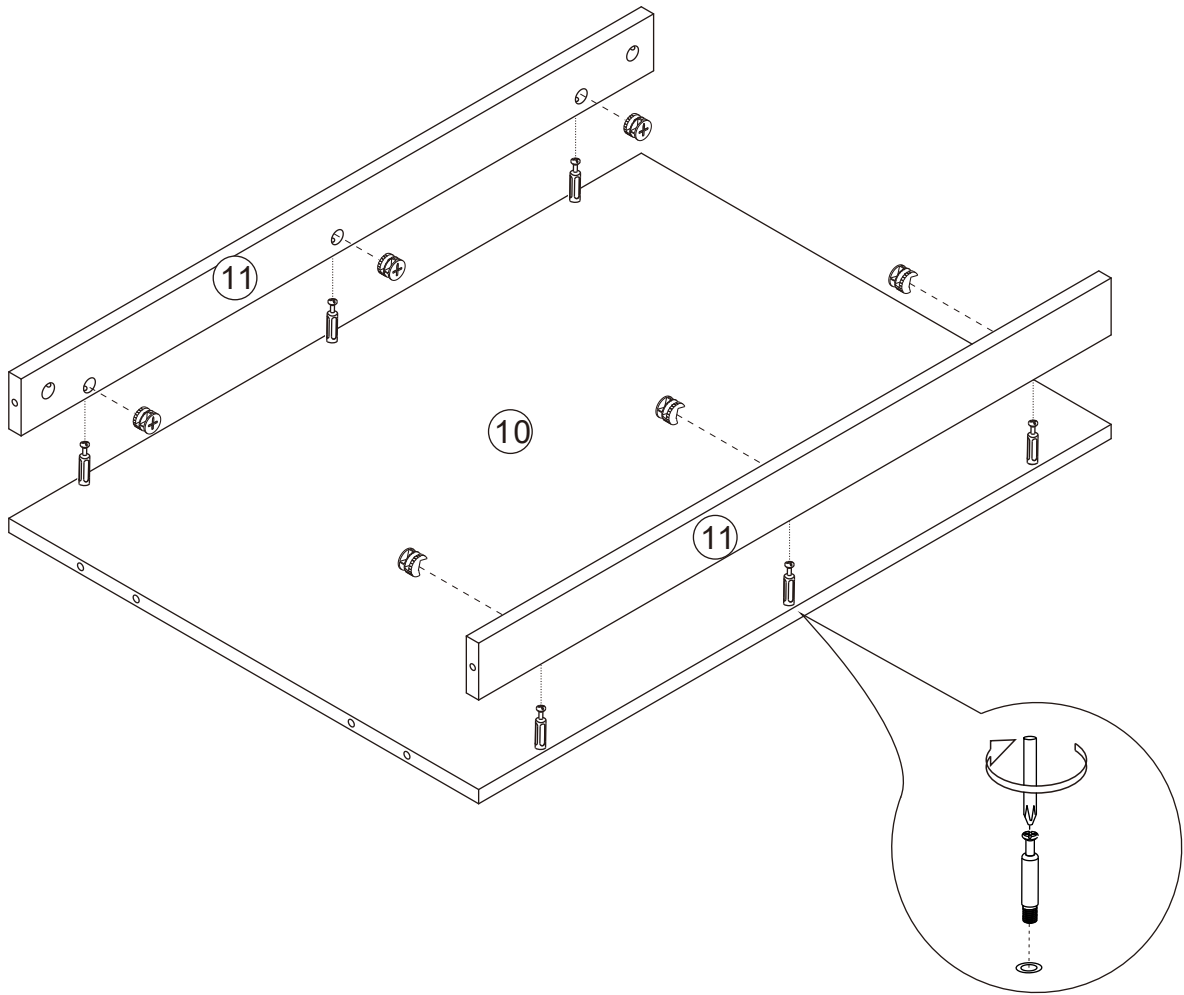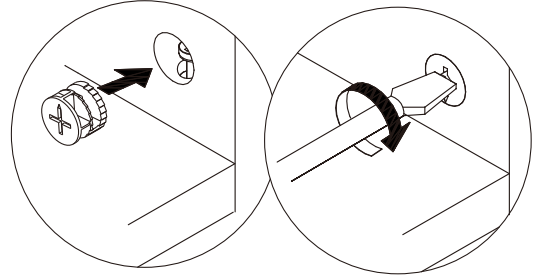


2.

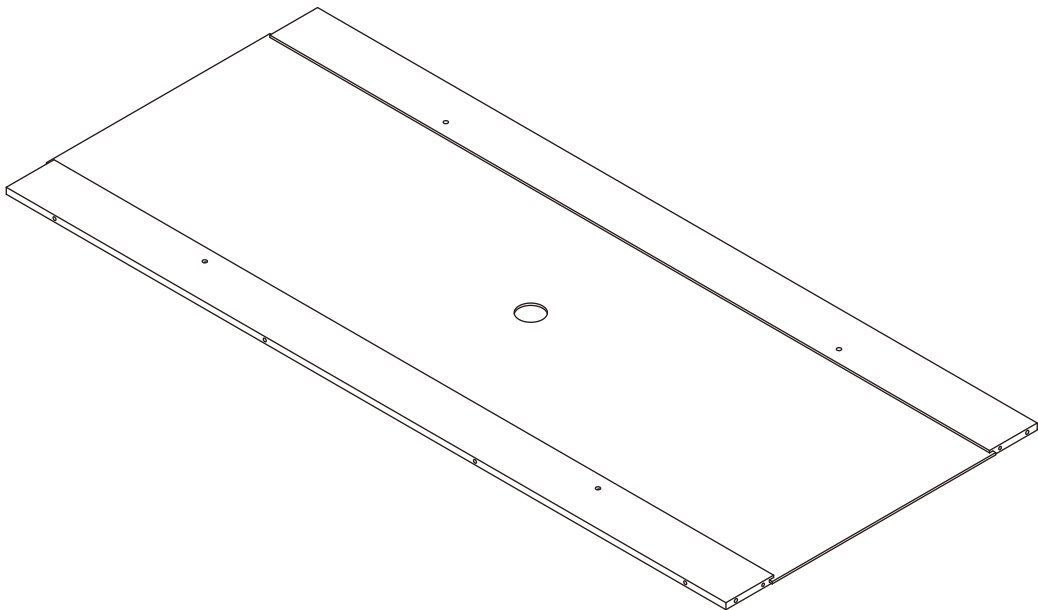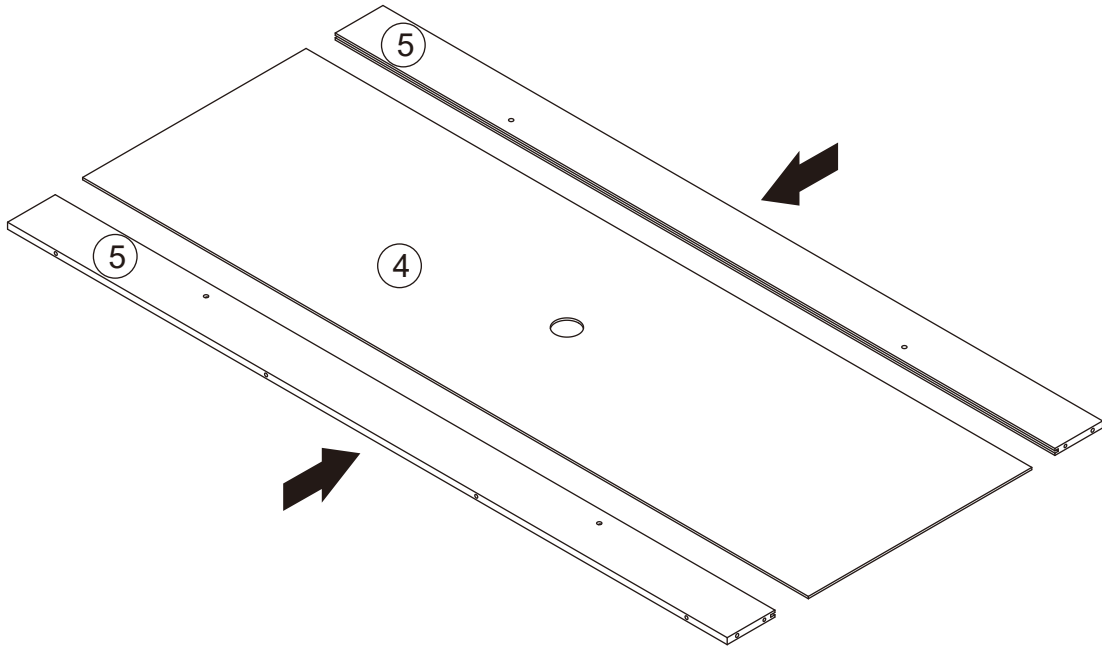


3.

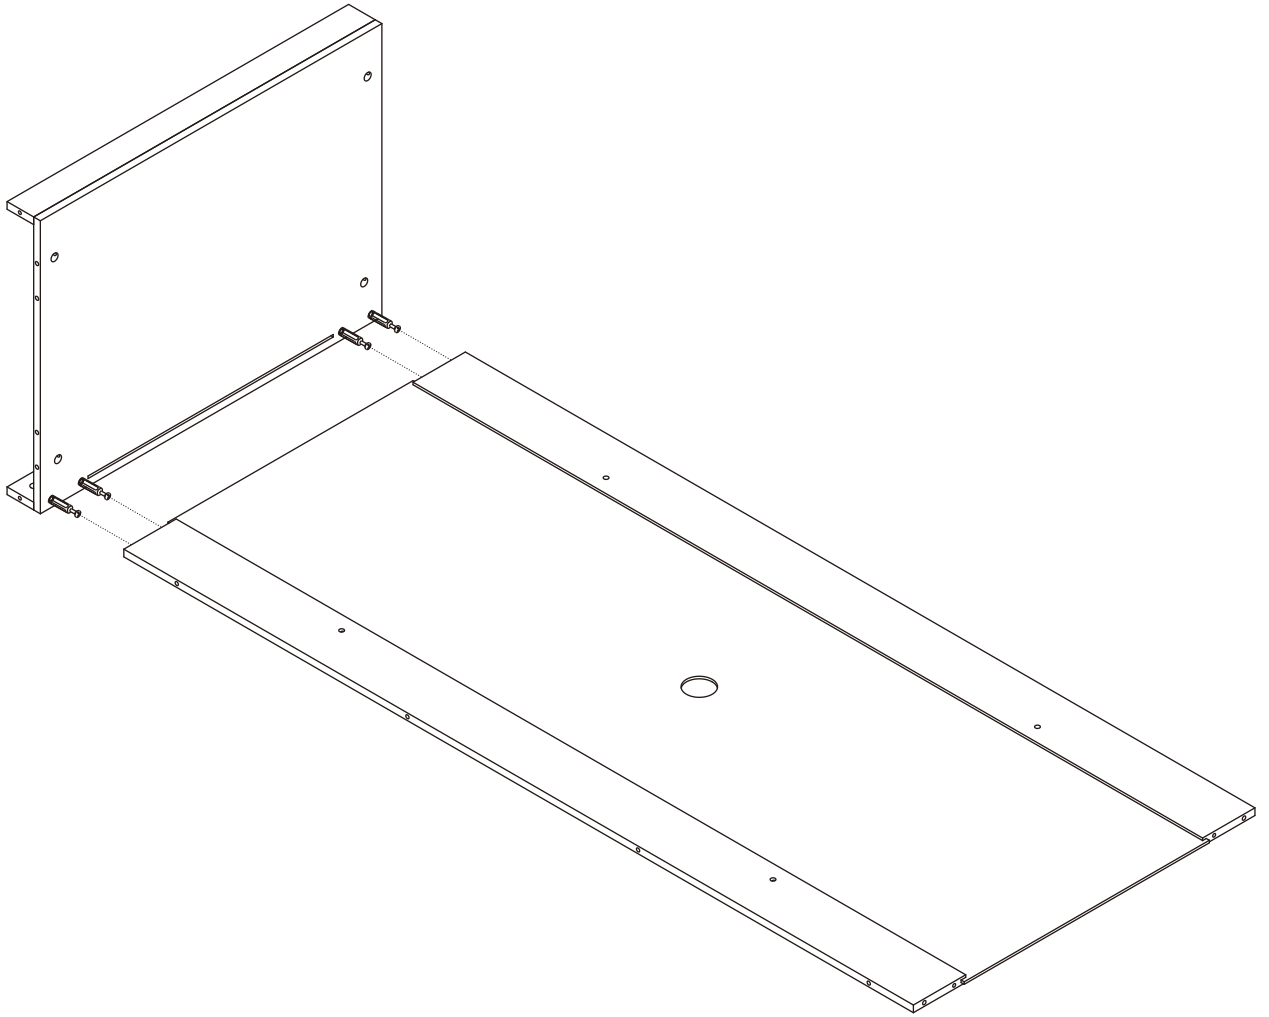


Ax4







4.

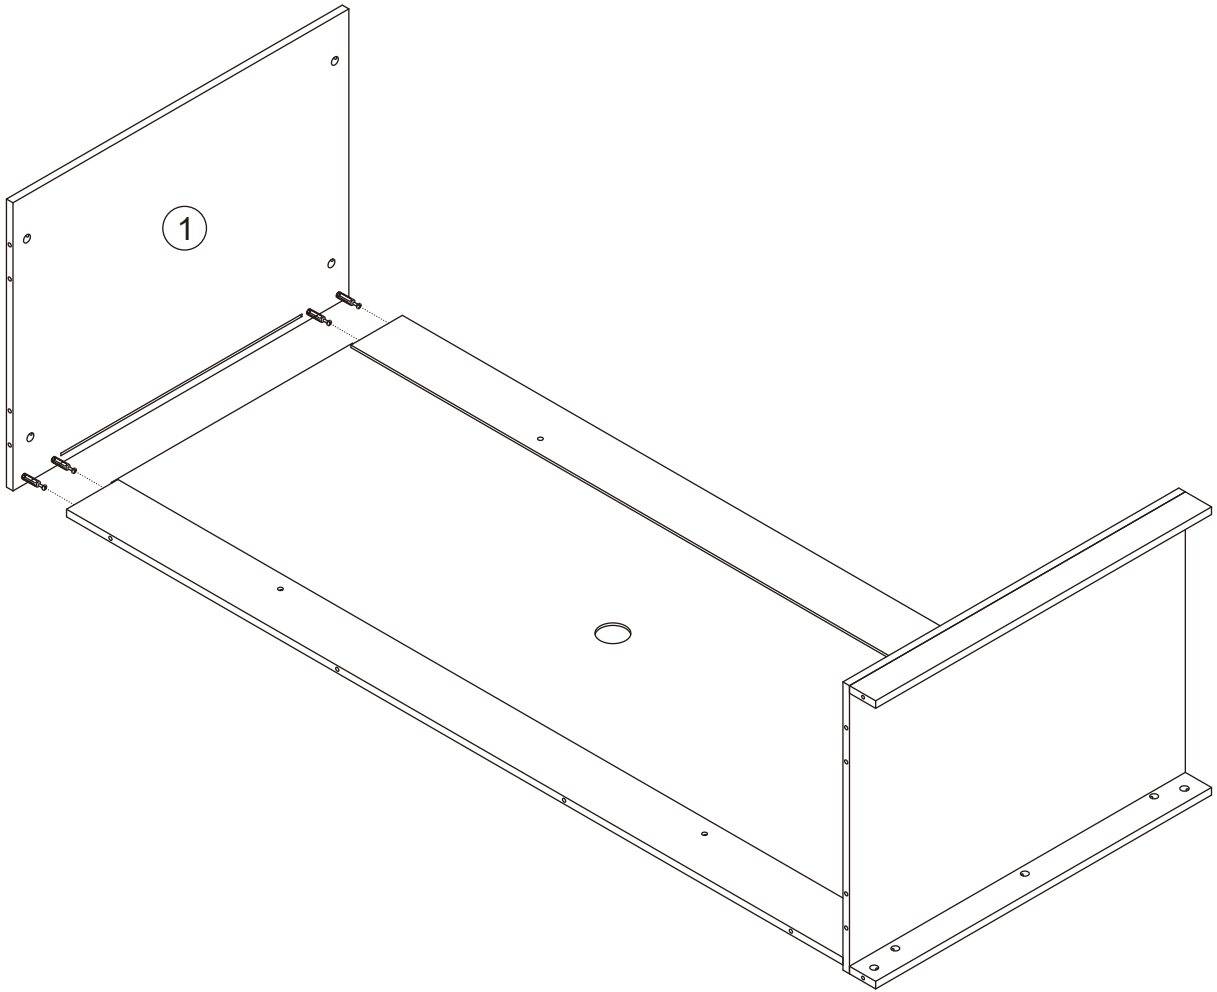



Ax4






5.

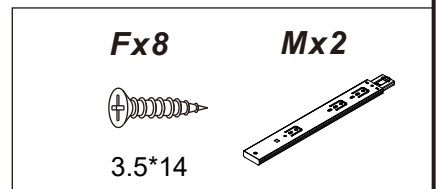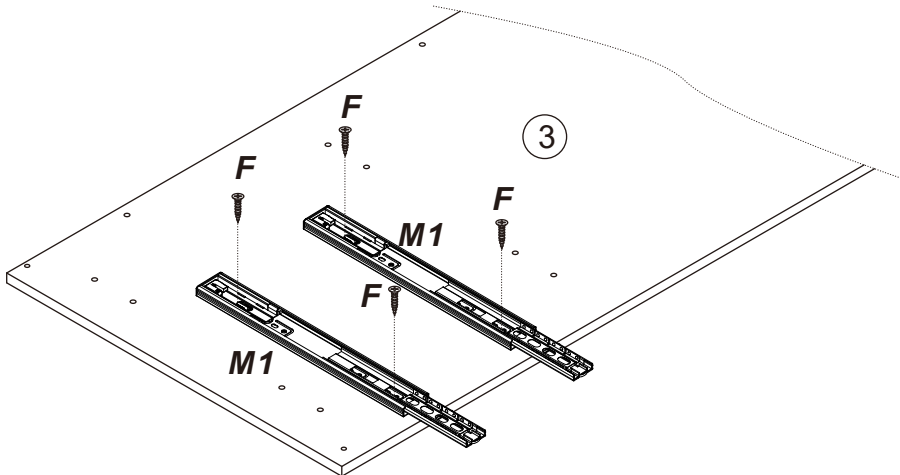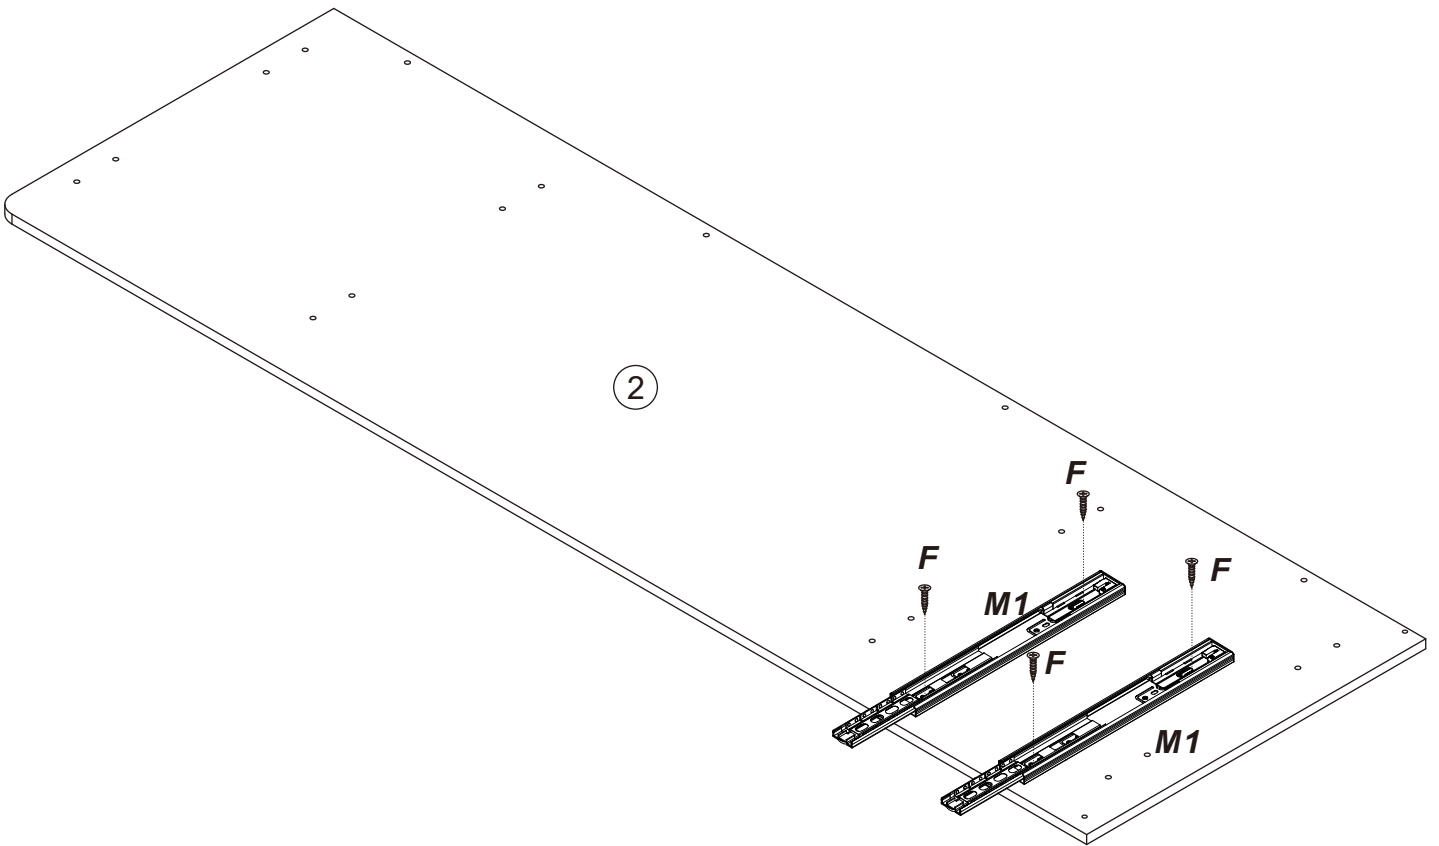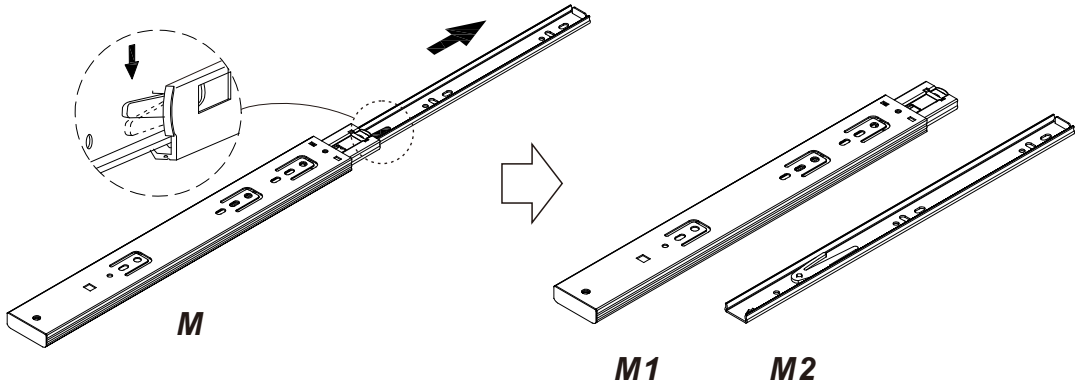




6.

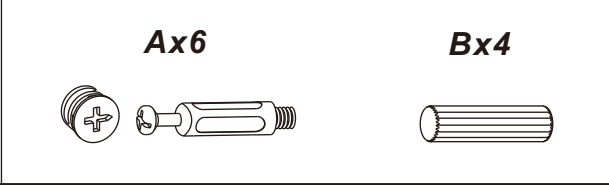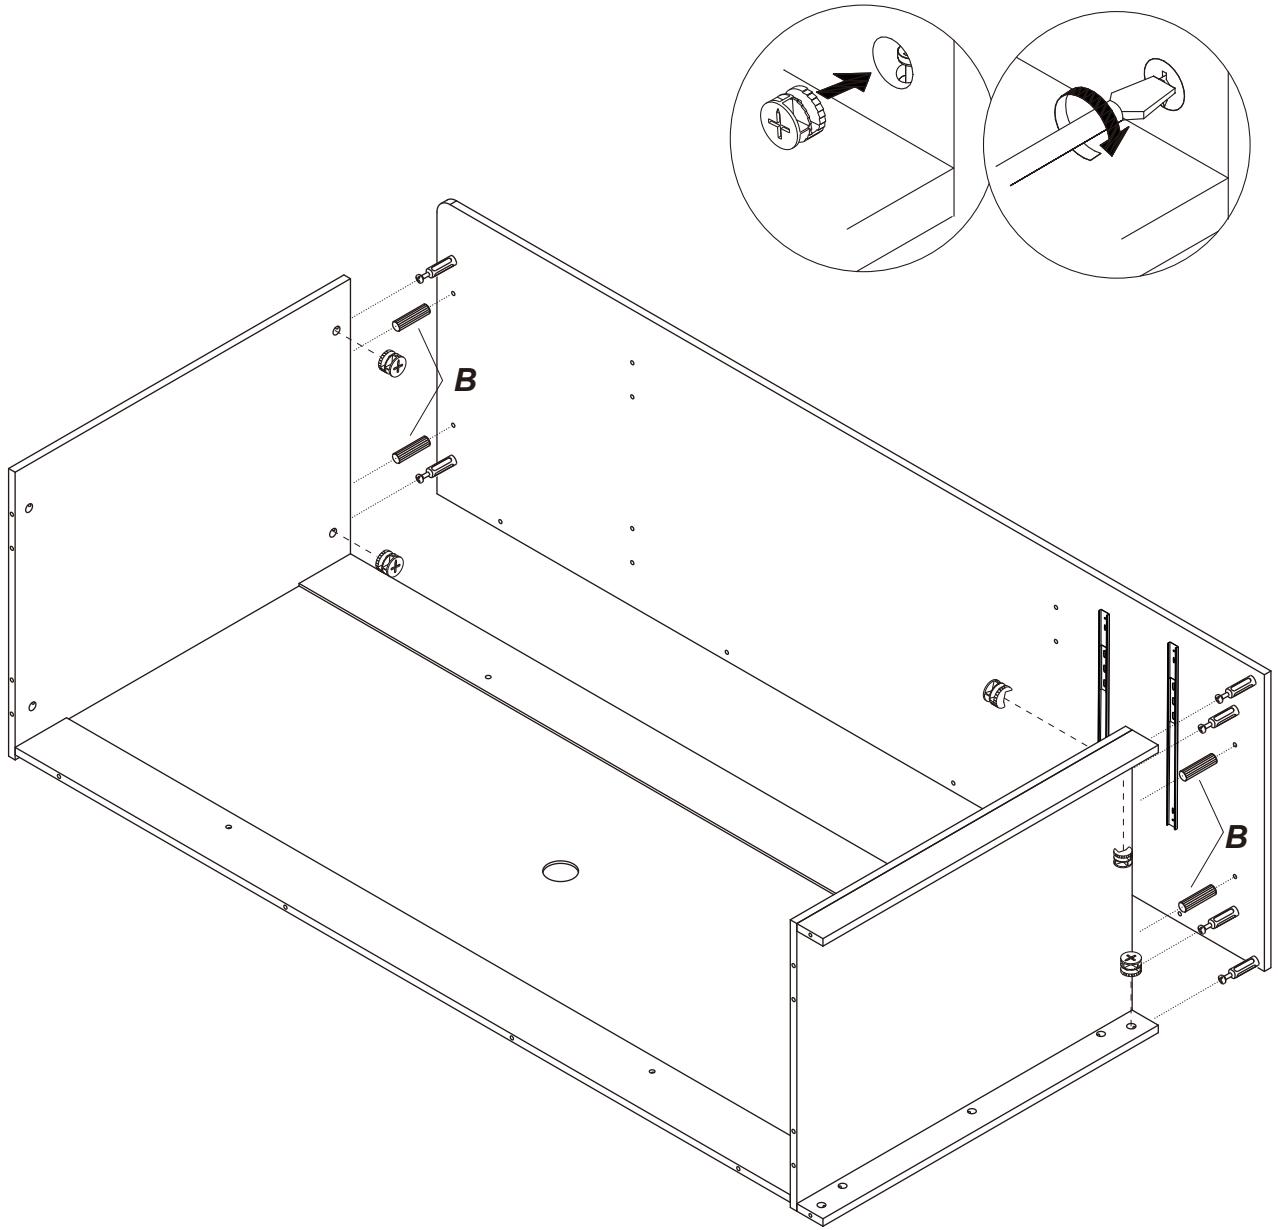




7.

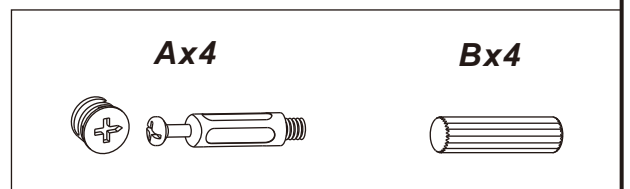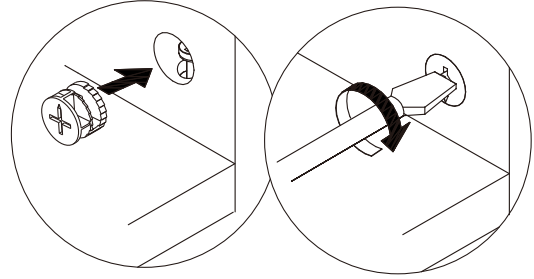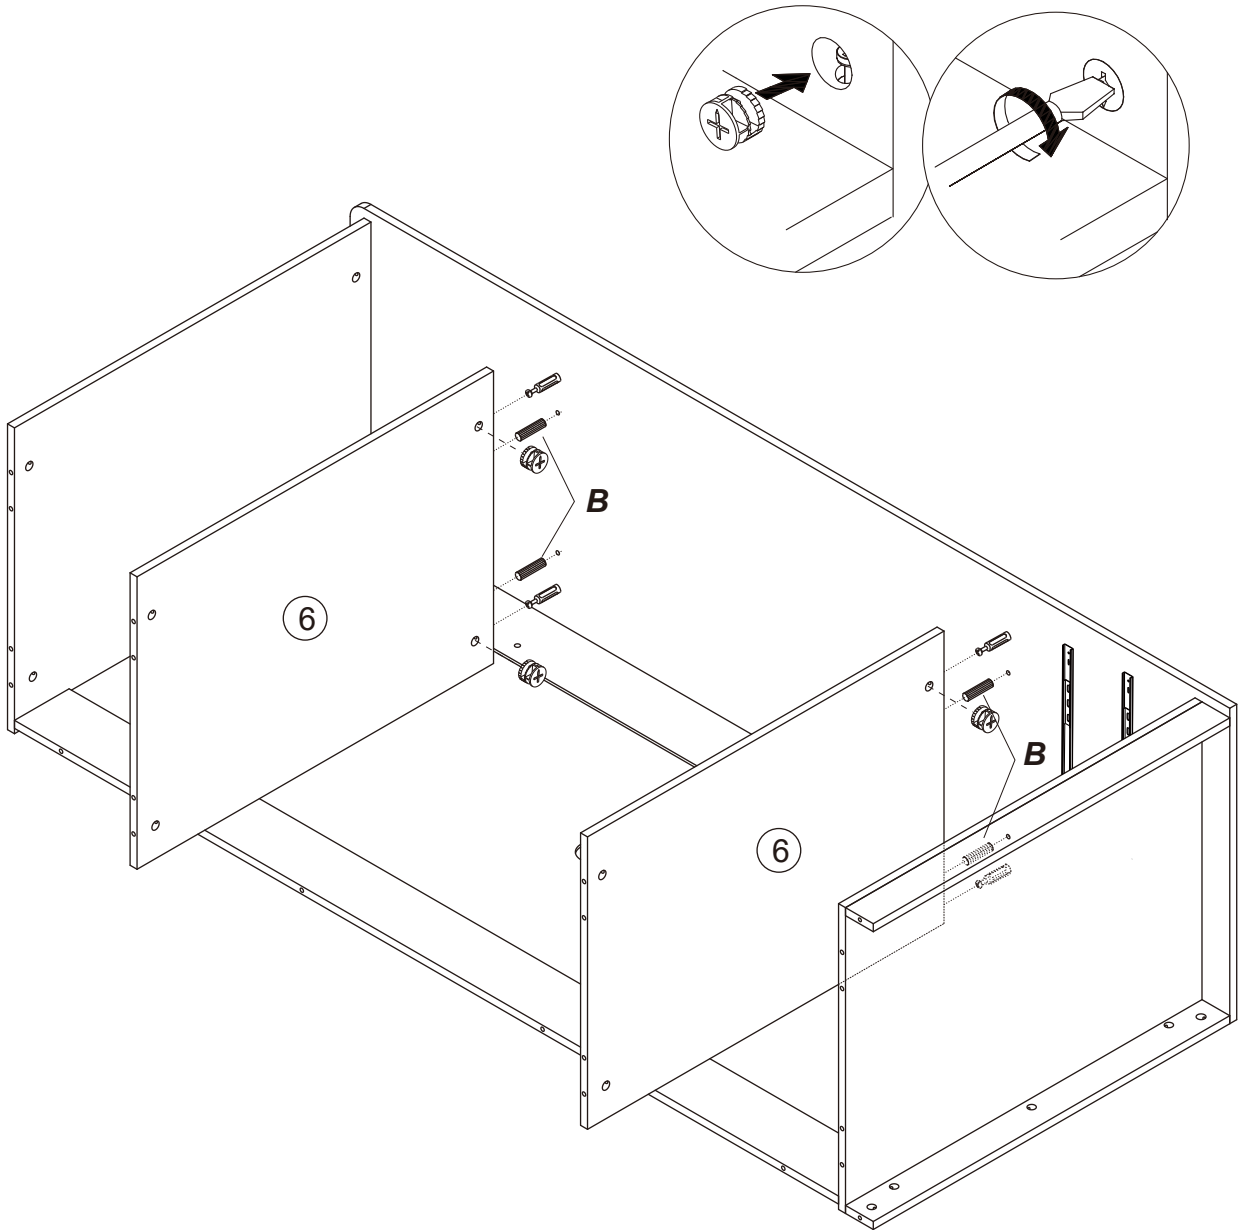




8.

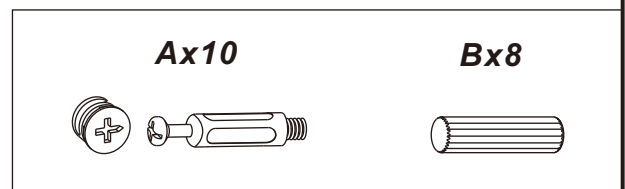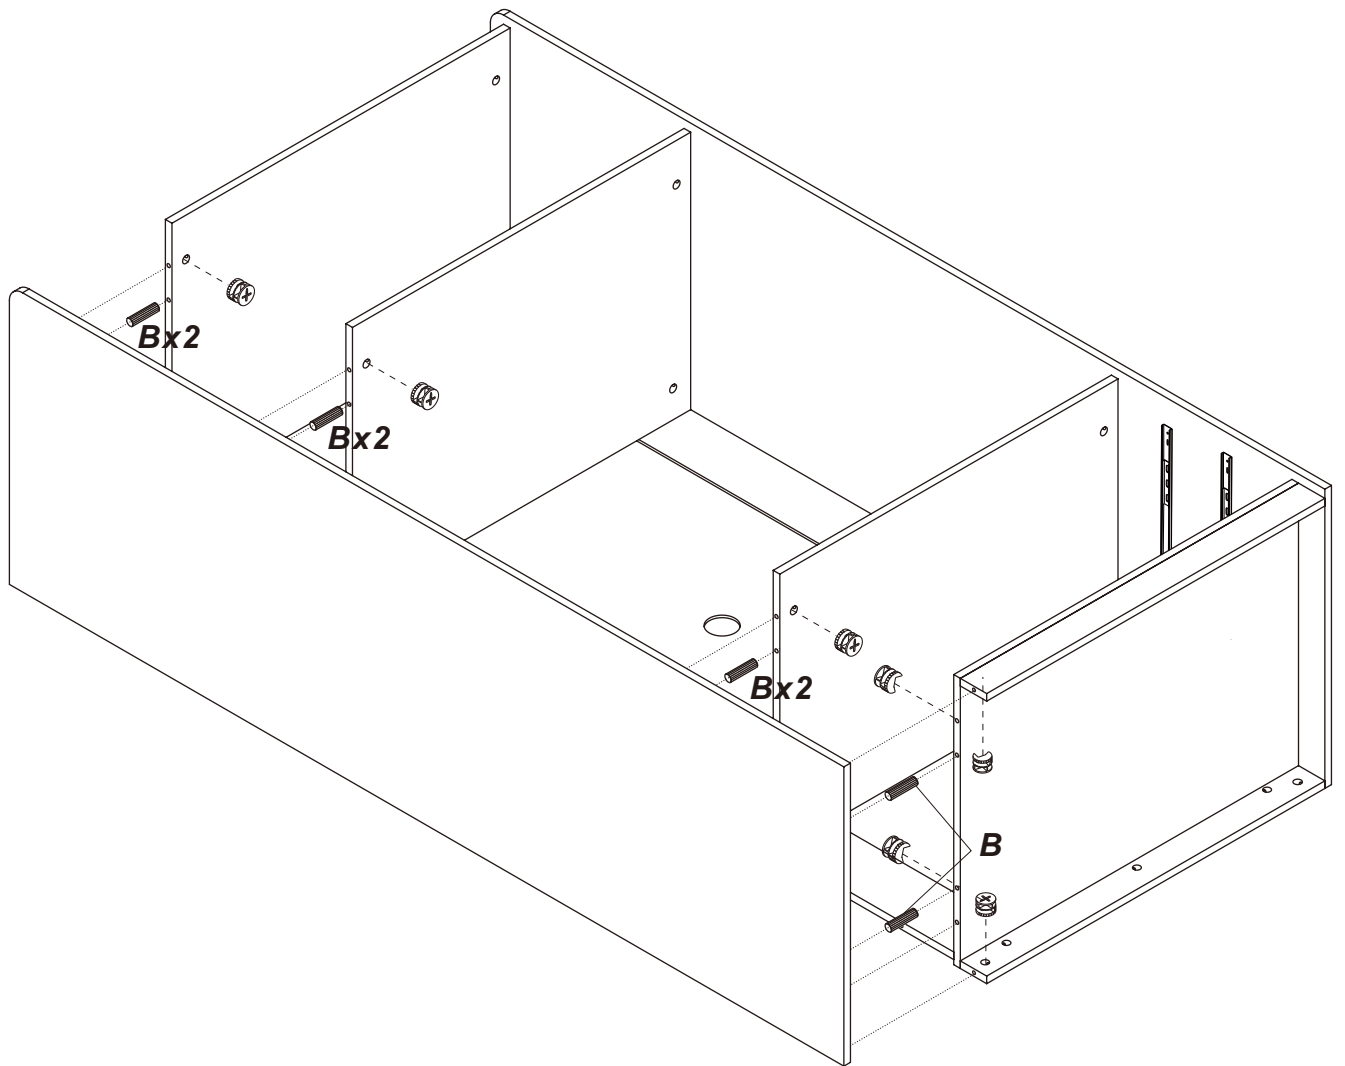
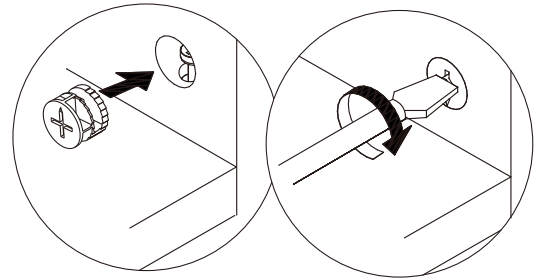


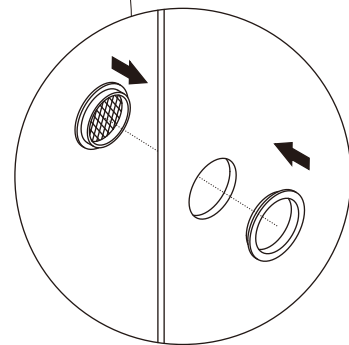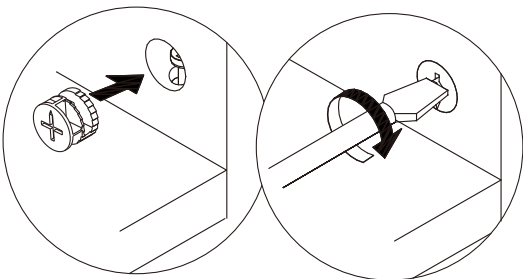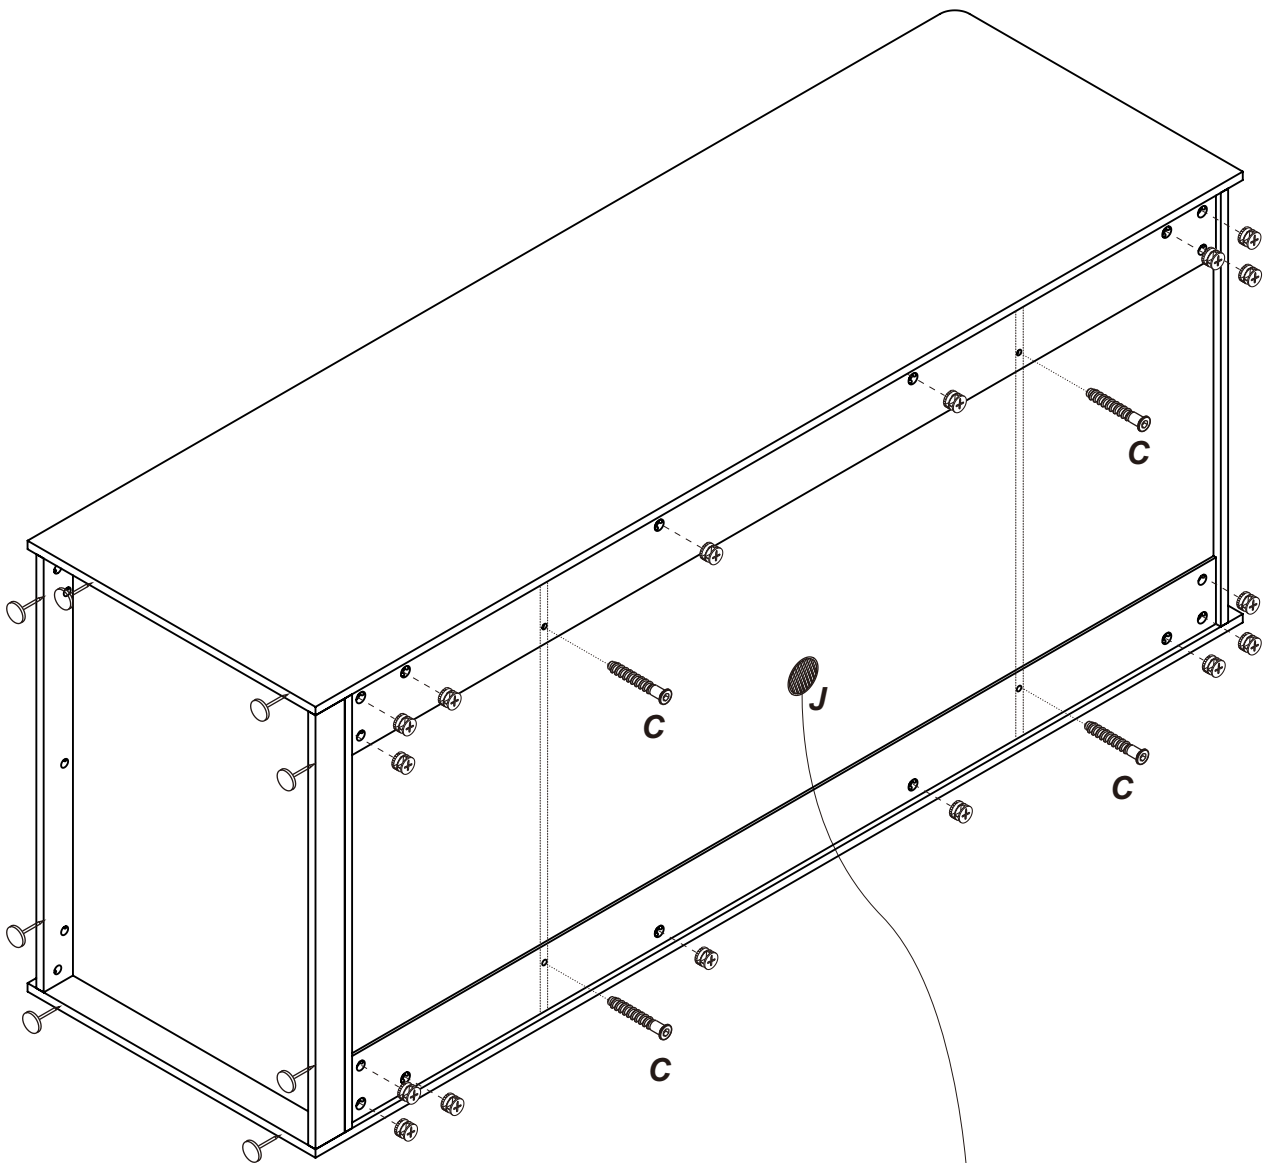

9.




Cx4	Jx1	Kx8
		
M7*38		

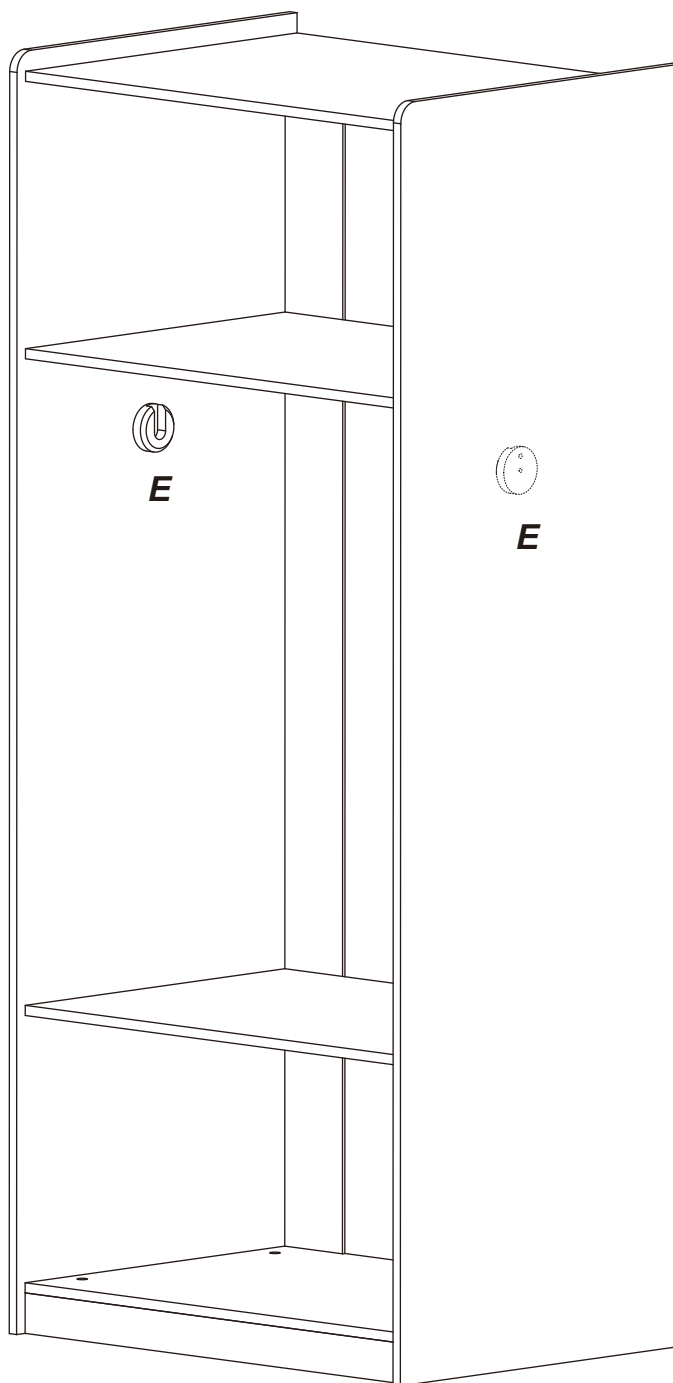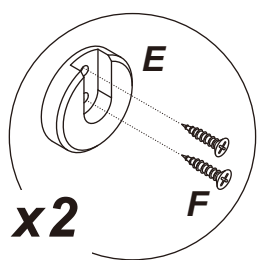10.





Fx4	Ex2
	
3.5*14	

11.

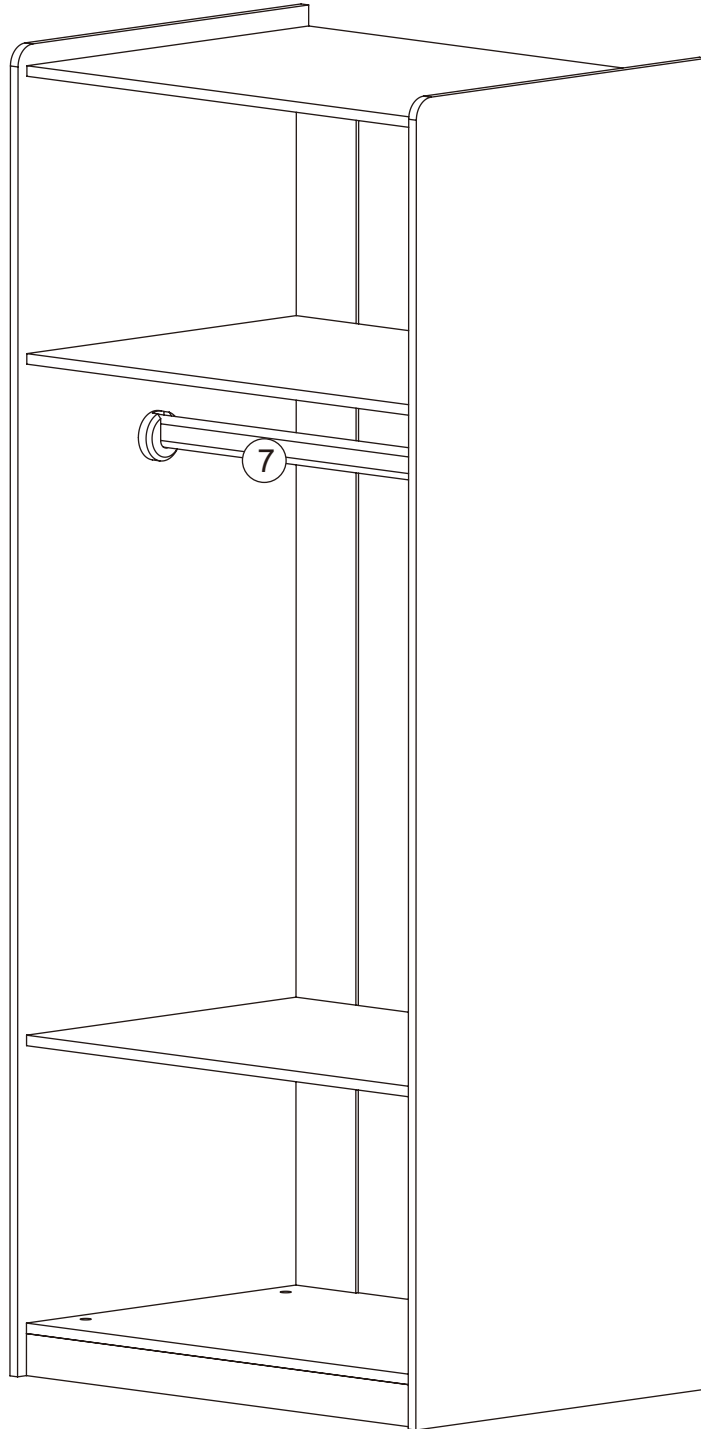

12.

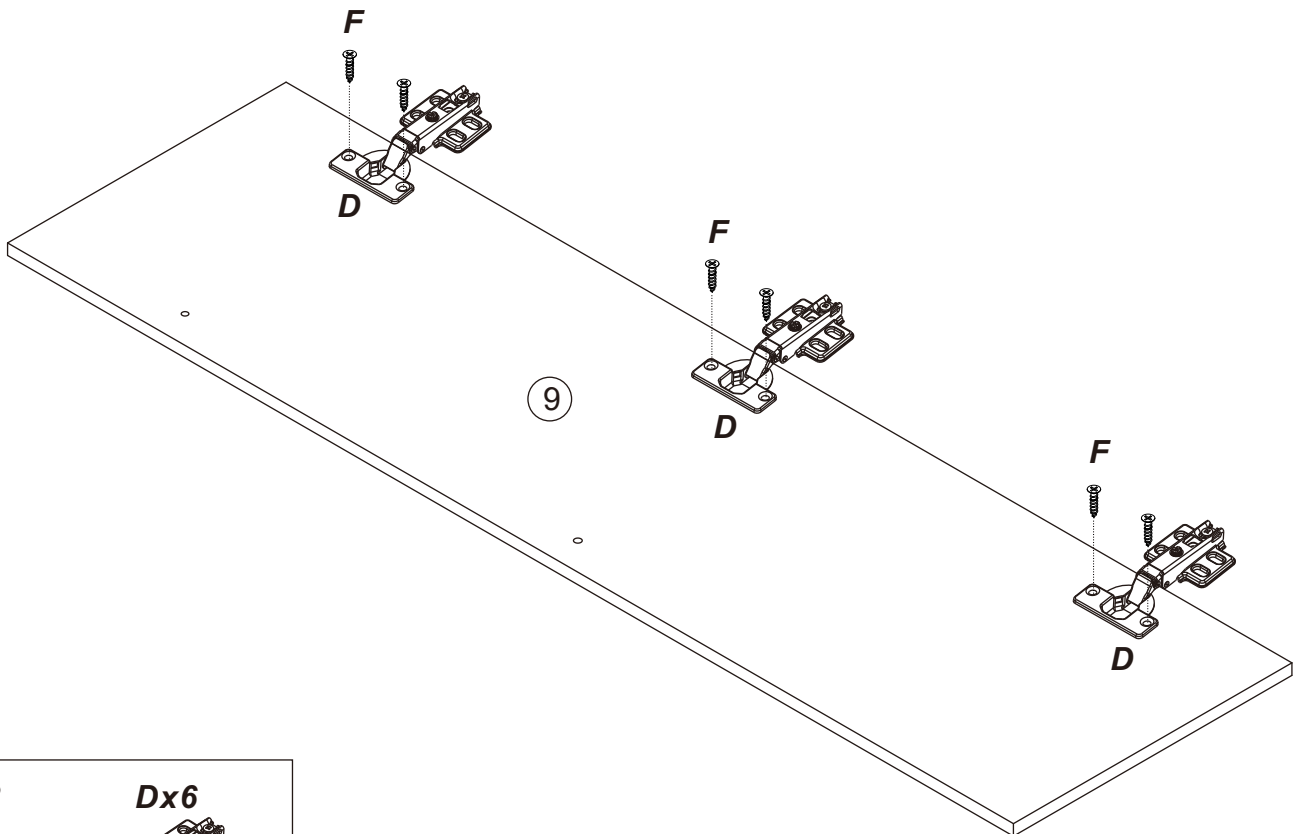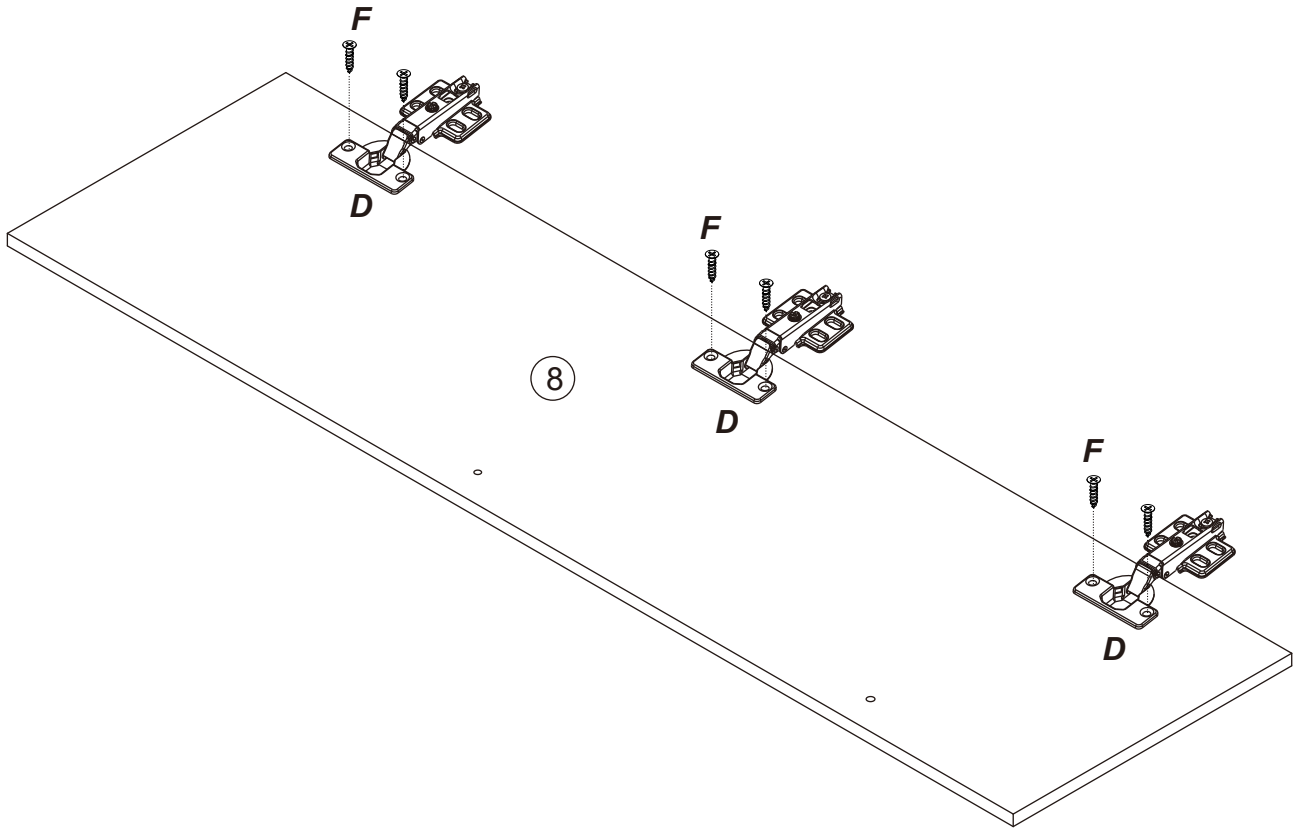


Fx12





3.5*14

Dx6



13.

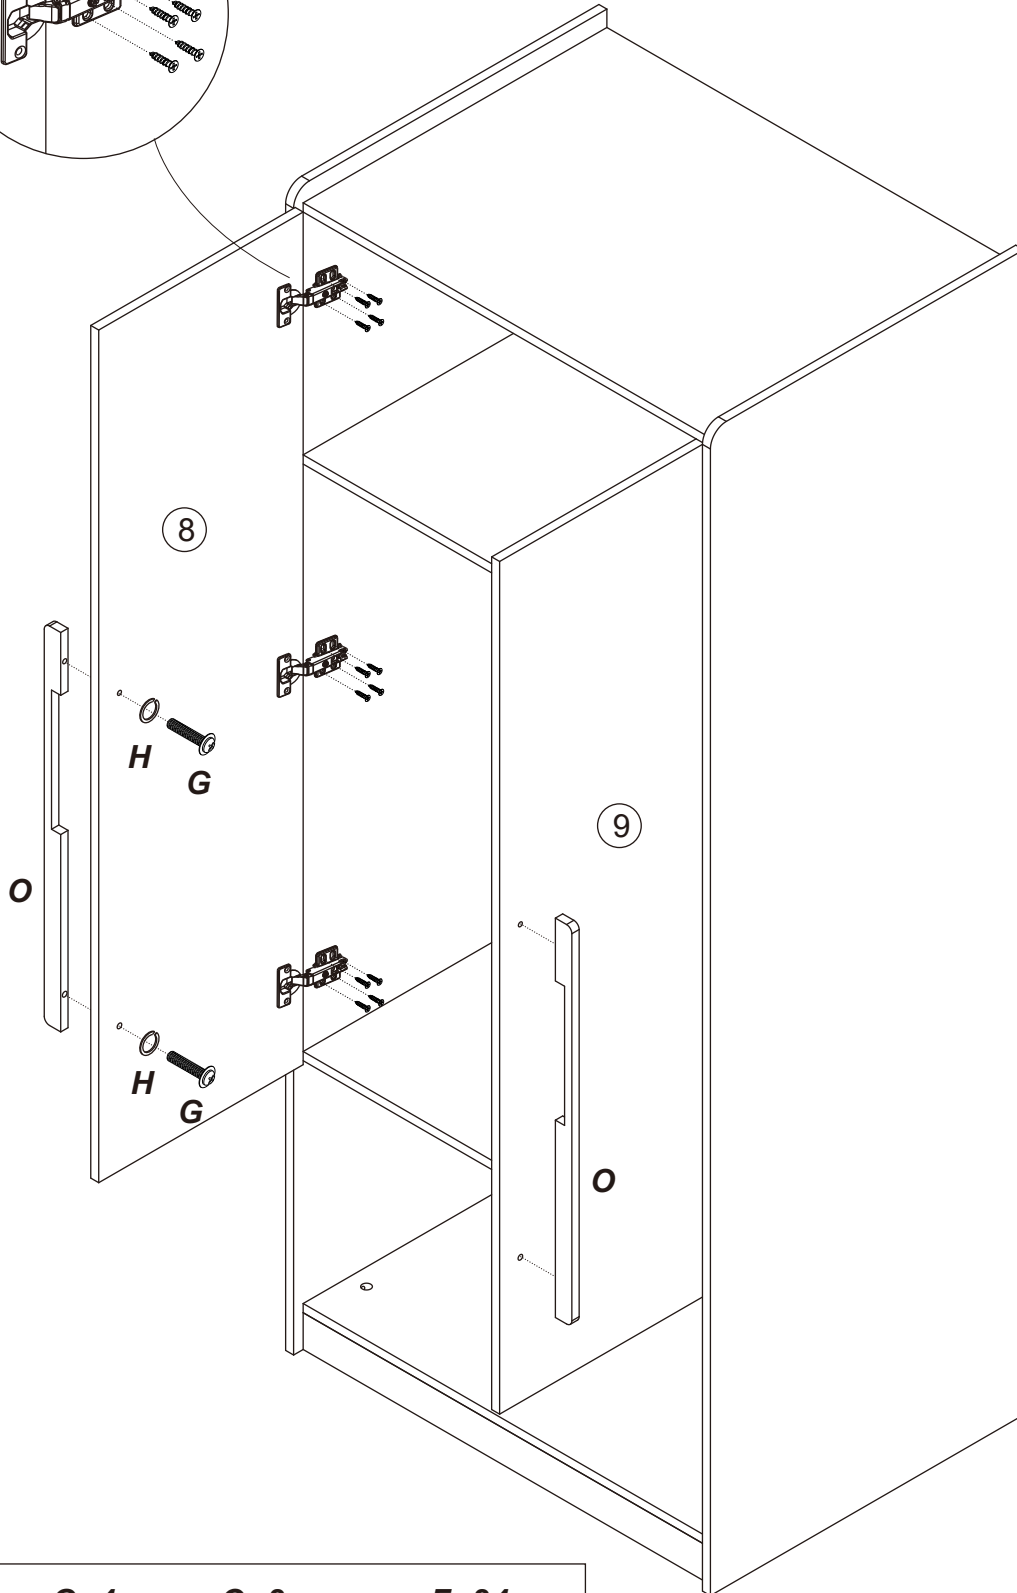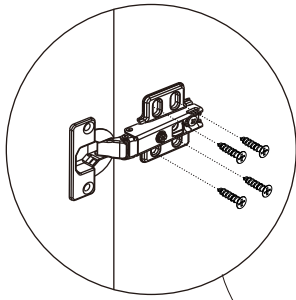

Hx4




Gx4



M4*18

Ox2





Fx24




3.5*14



14.

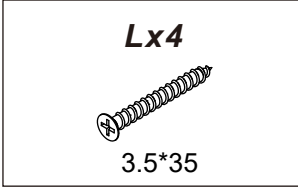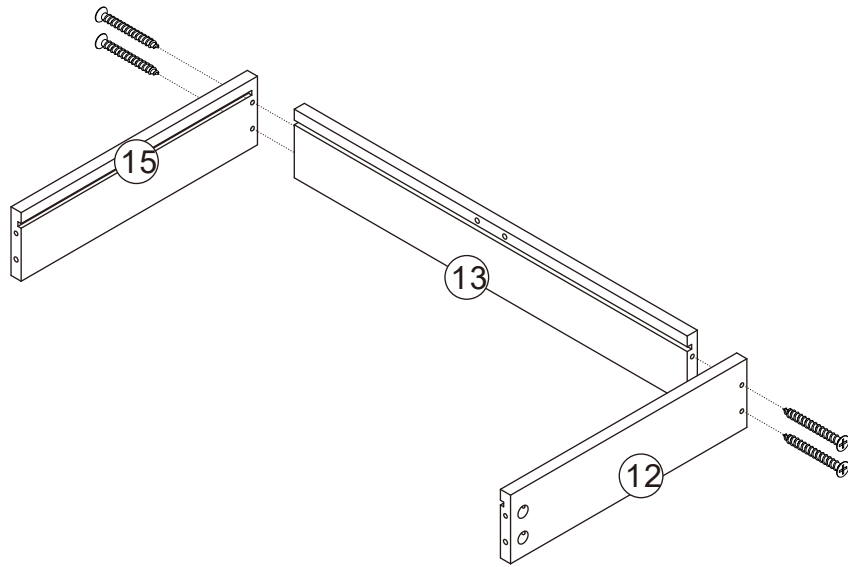



15.

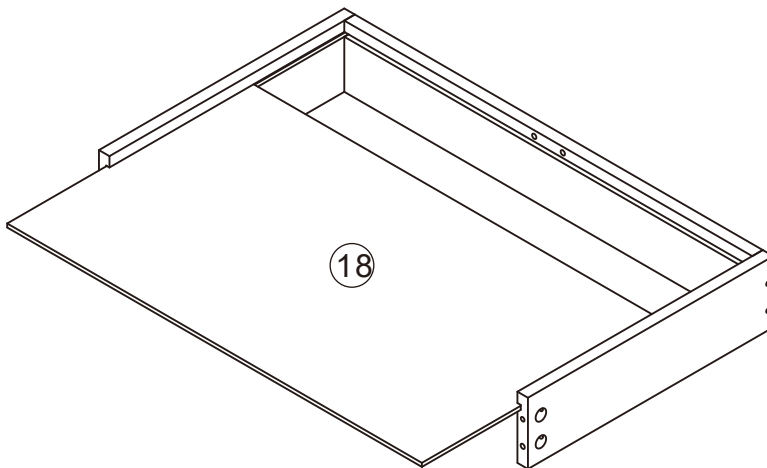



16.

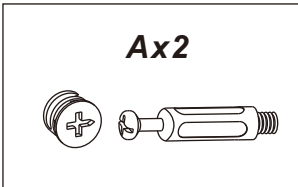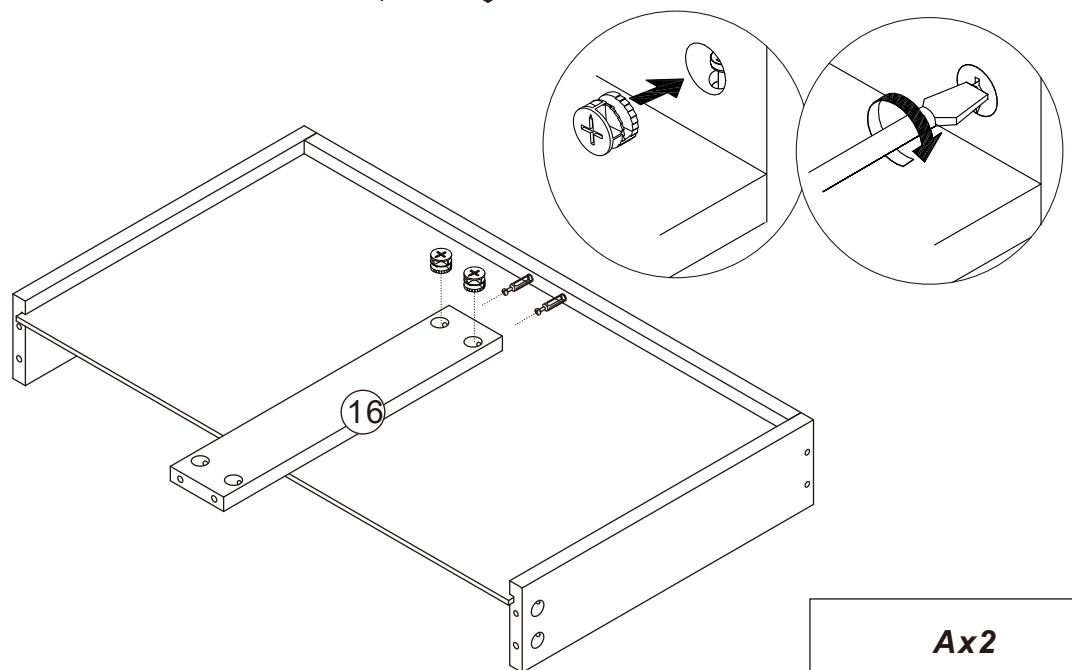


17.

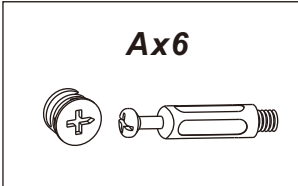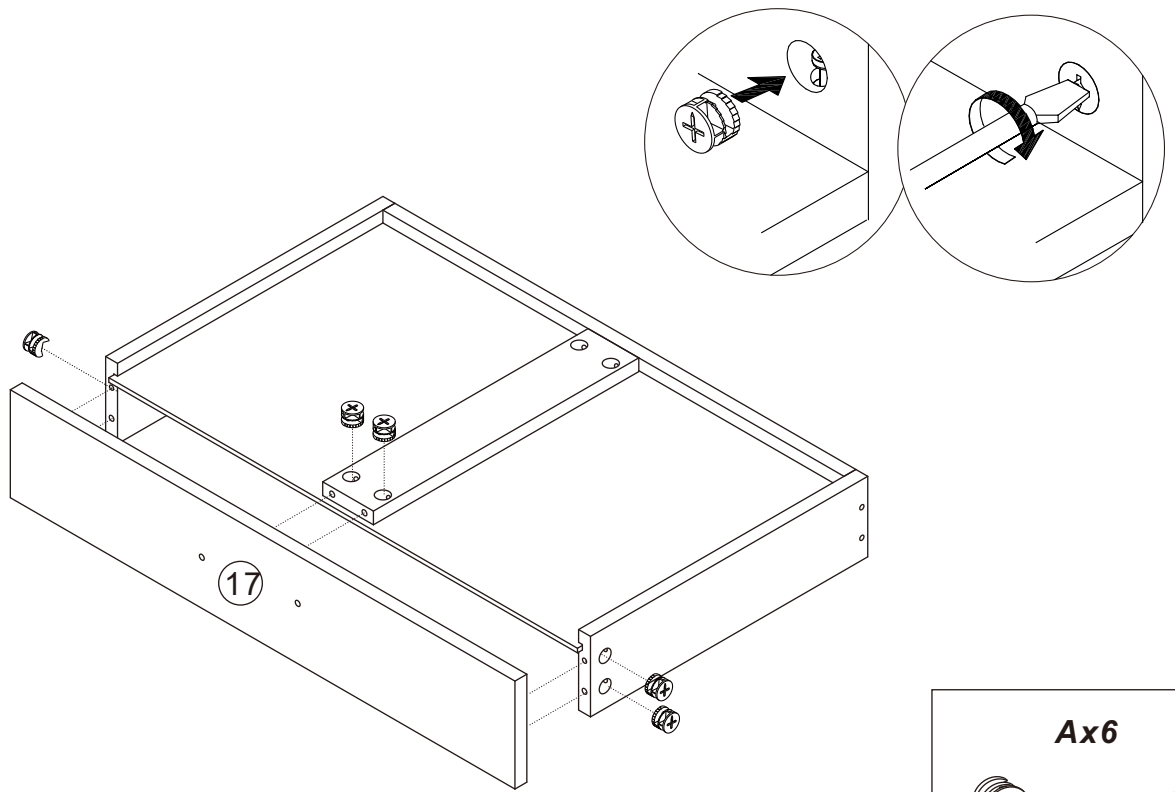


18.

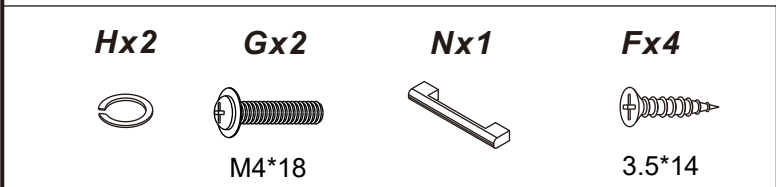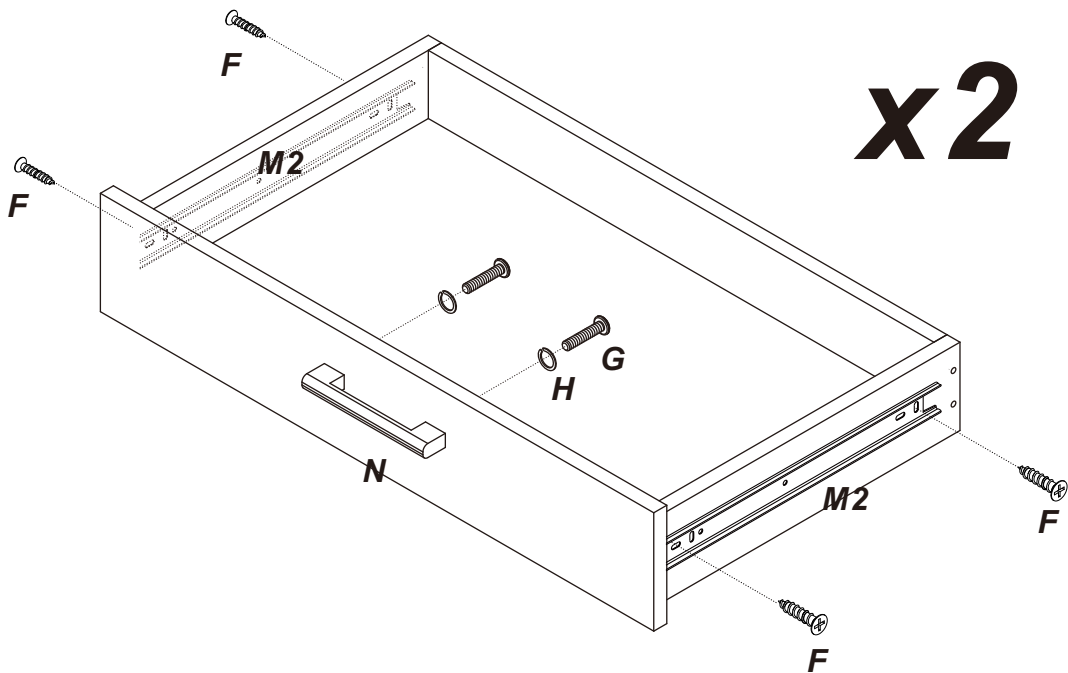





19.

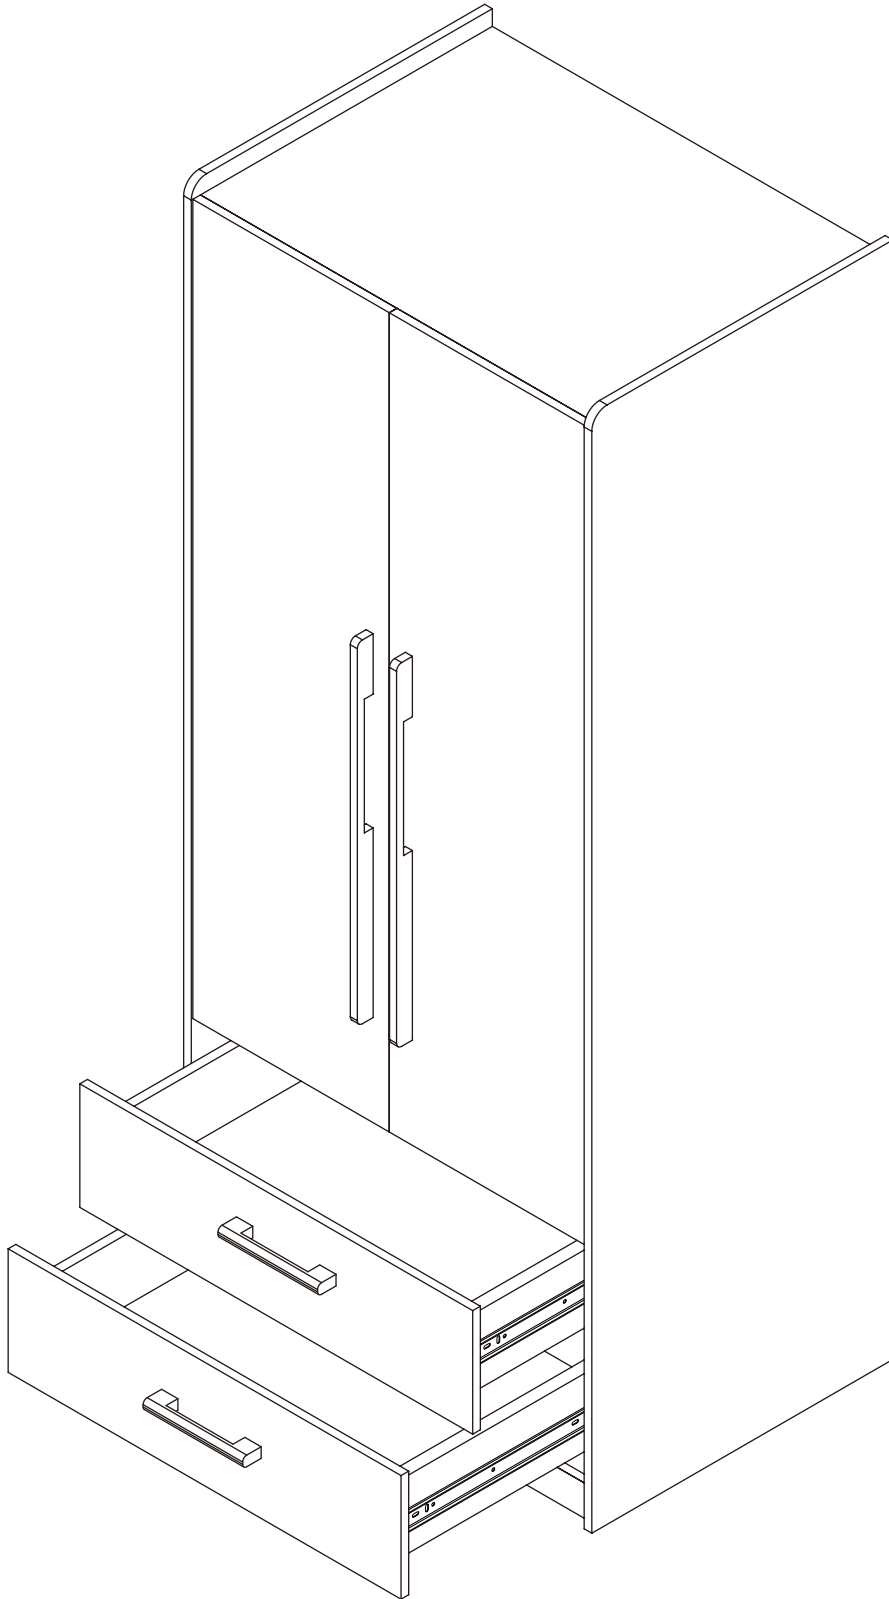


20.

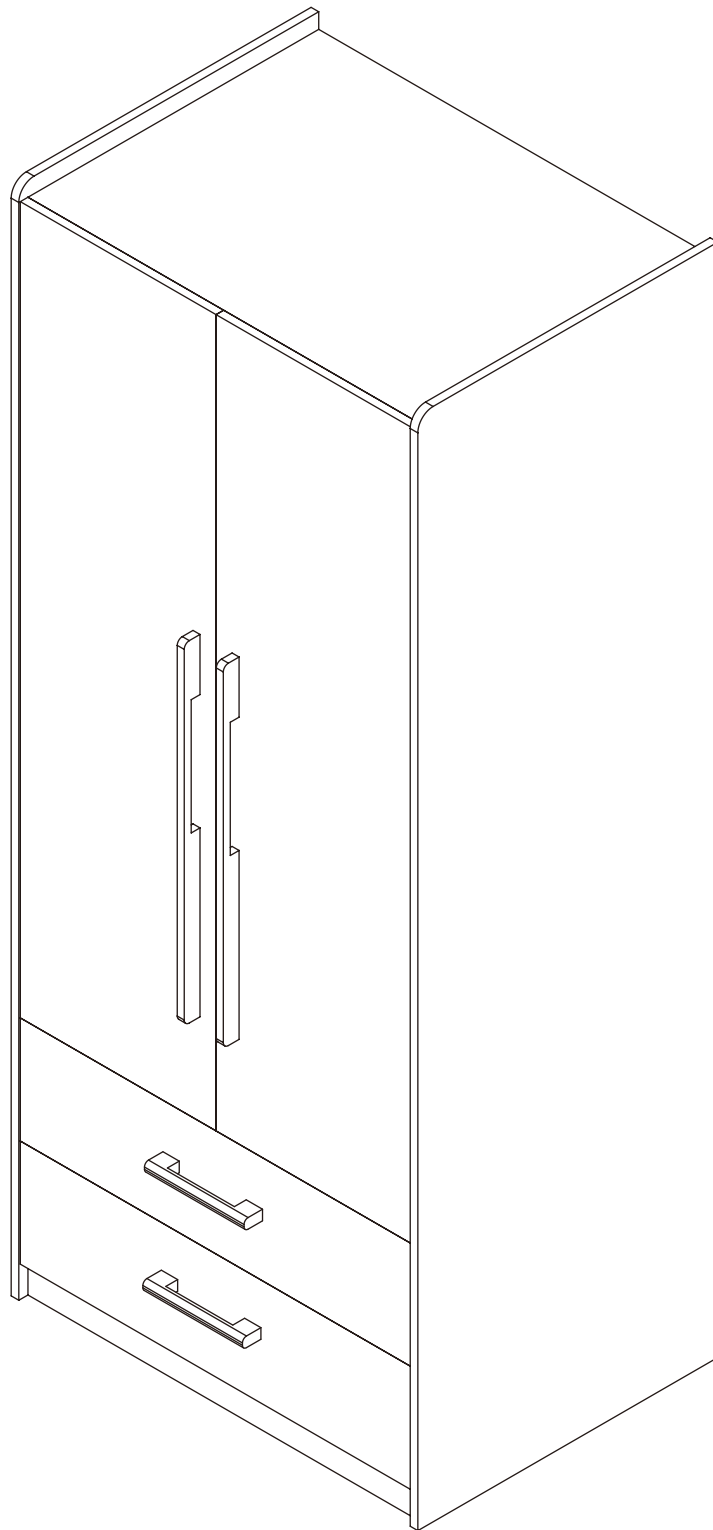


21.

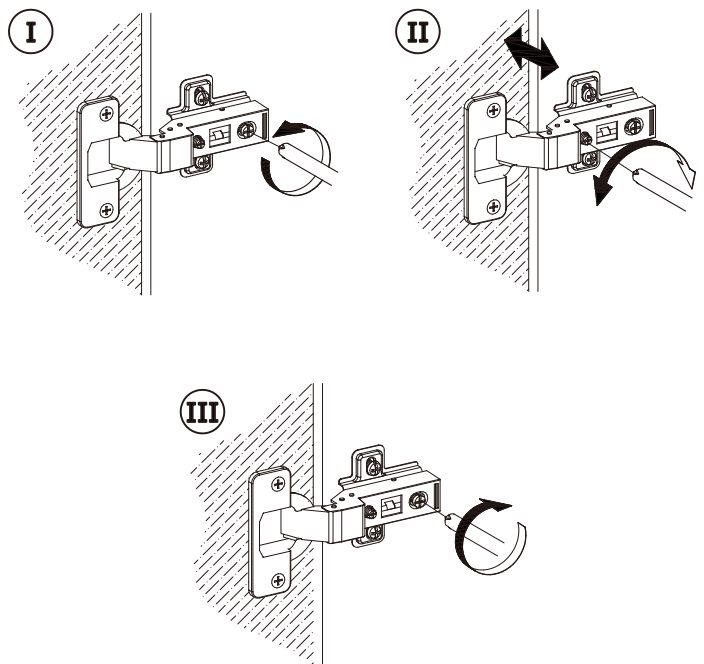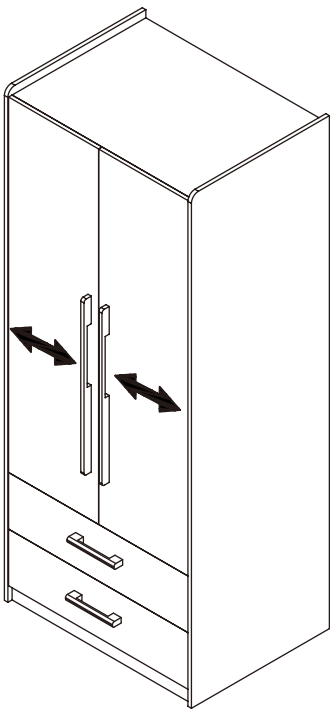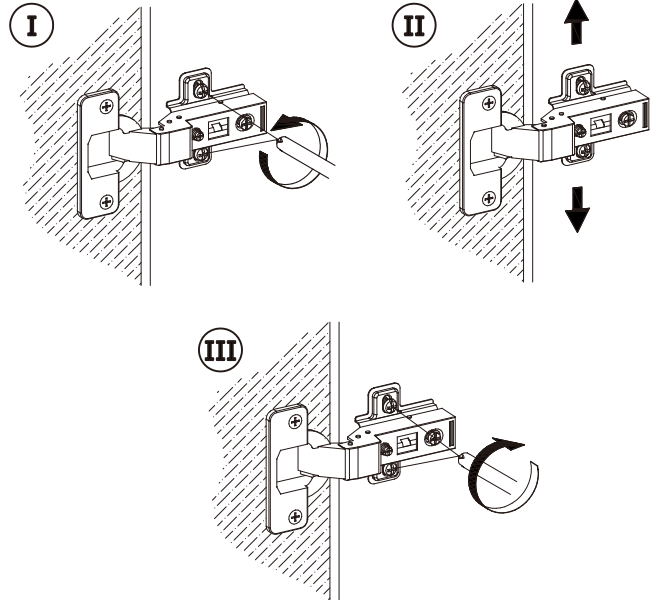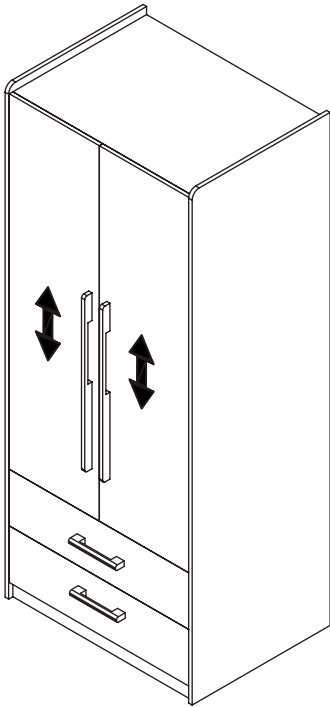



22.

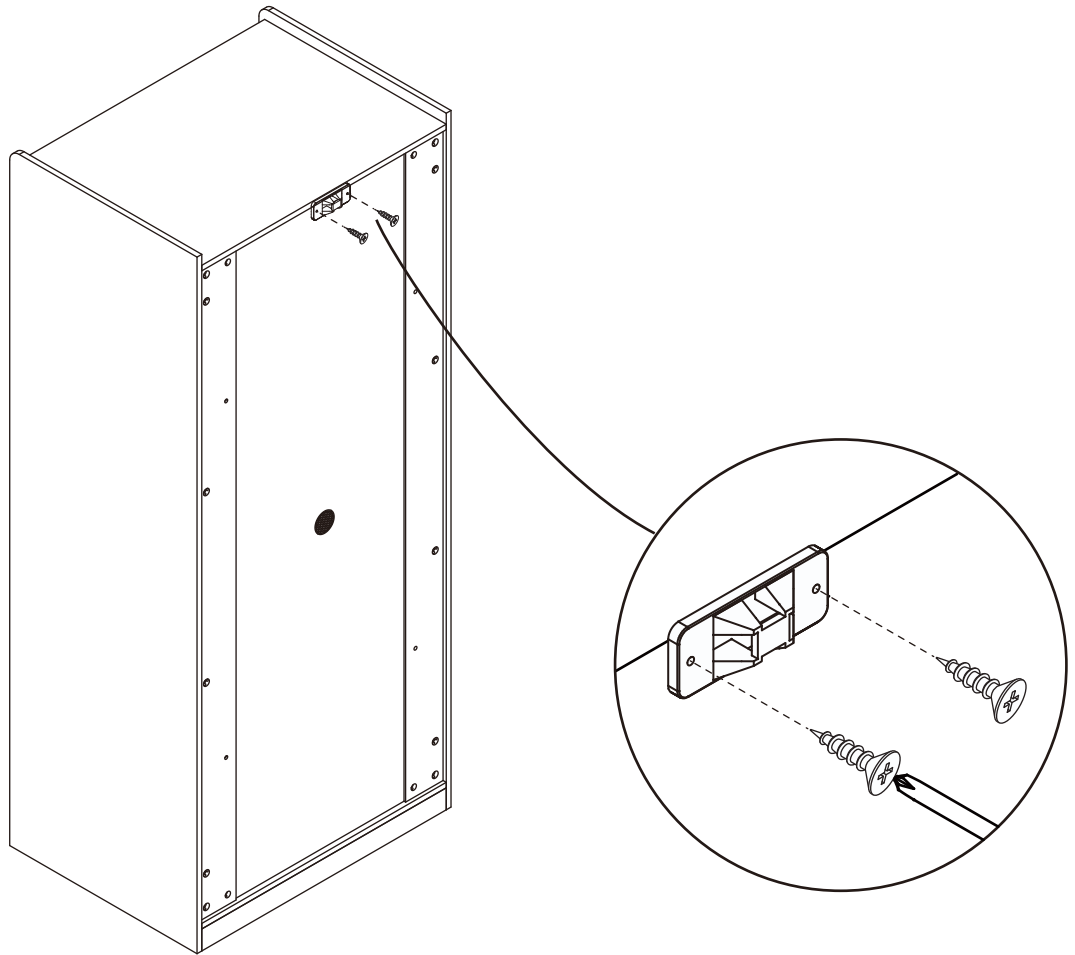

23.

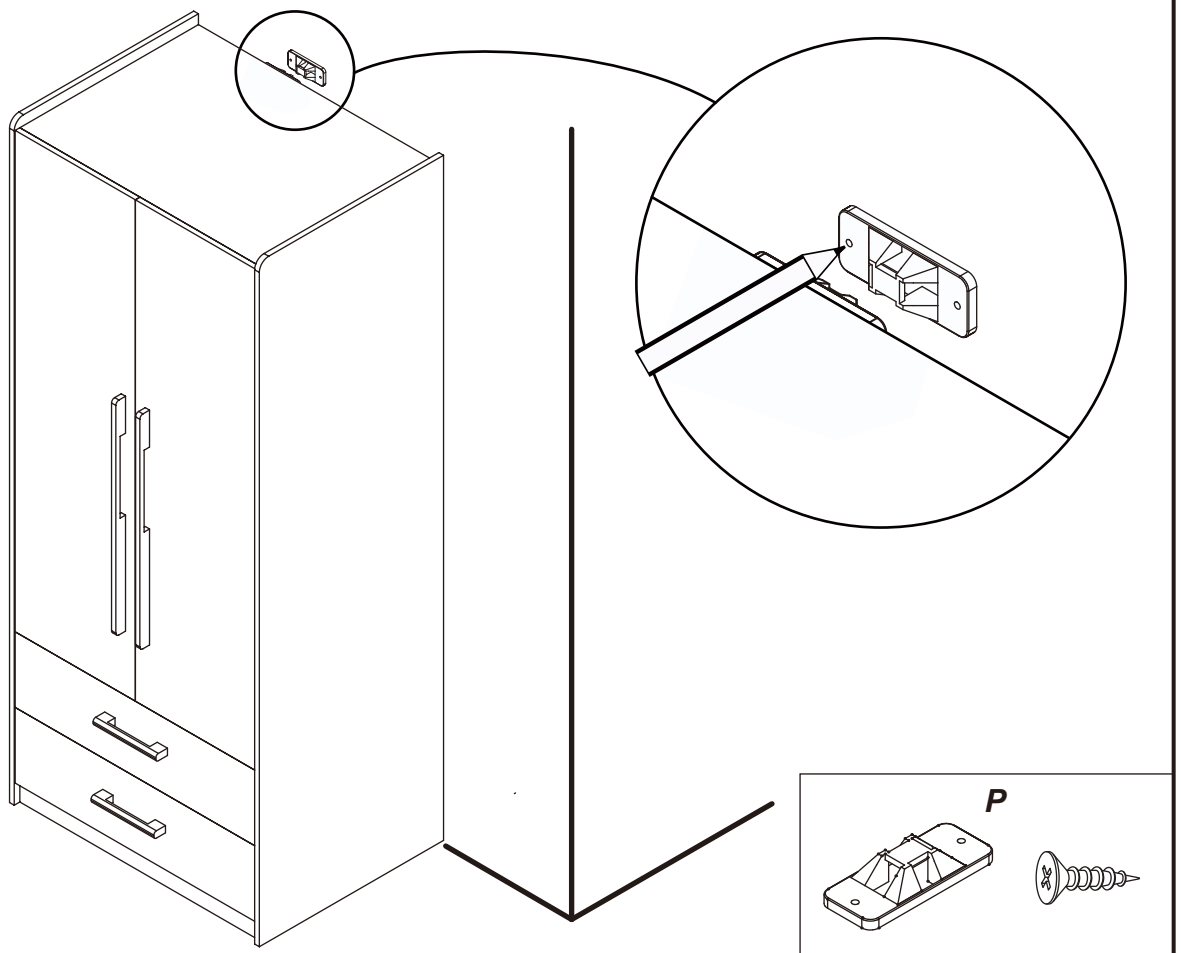

24.

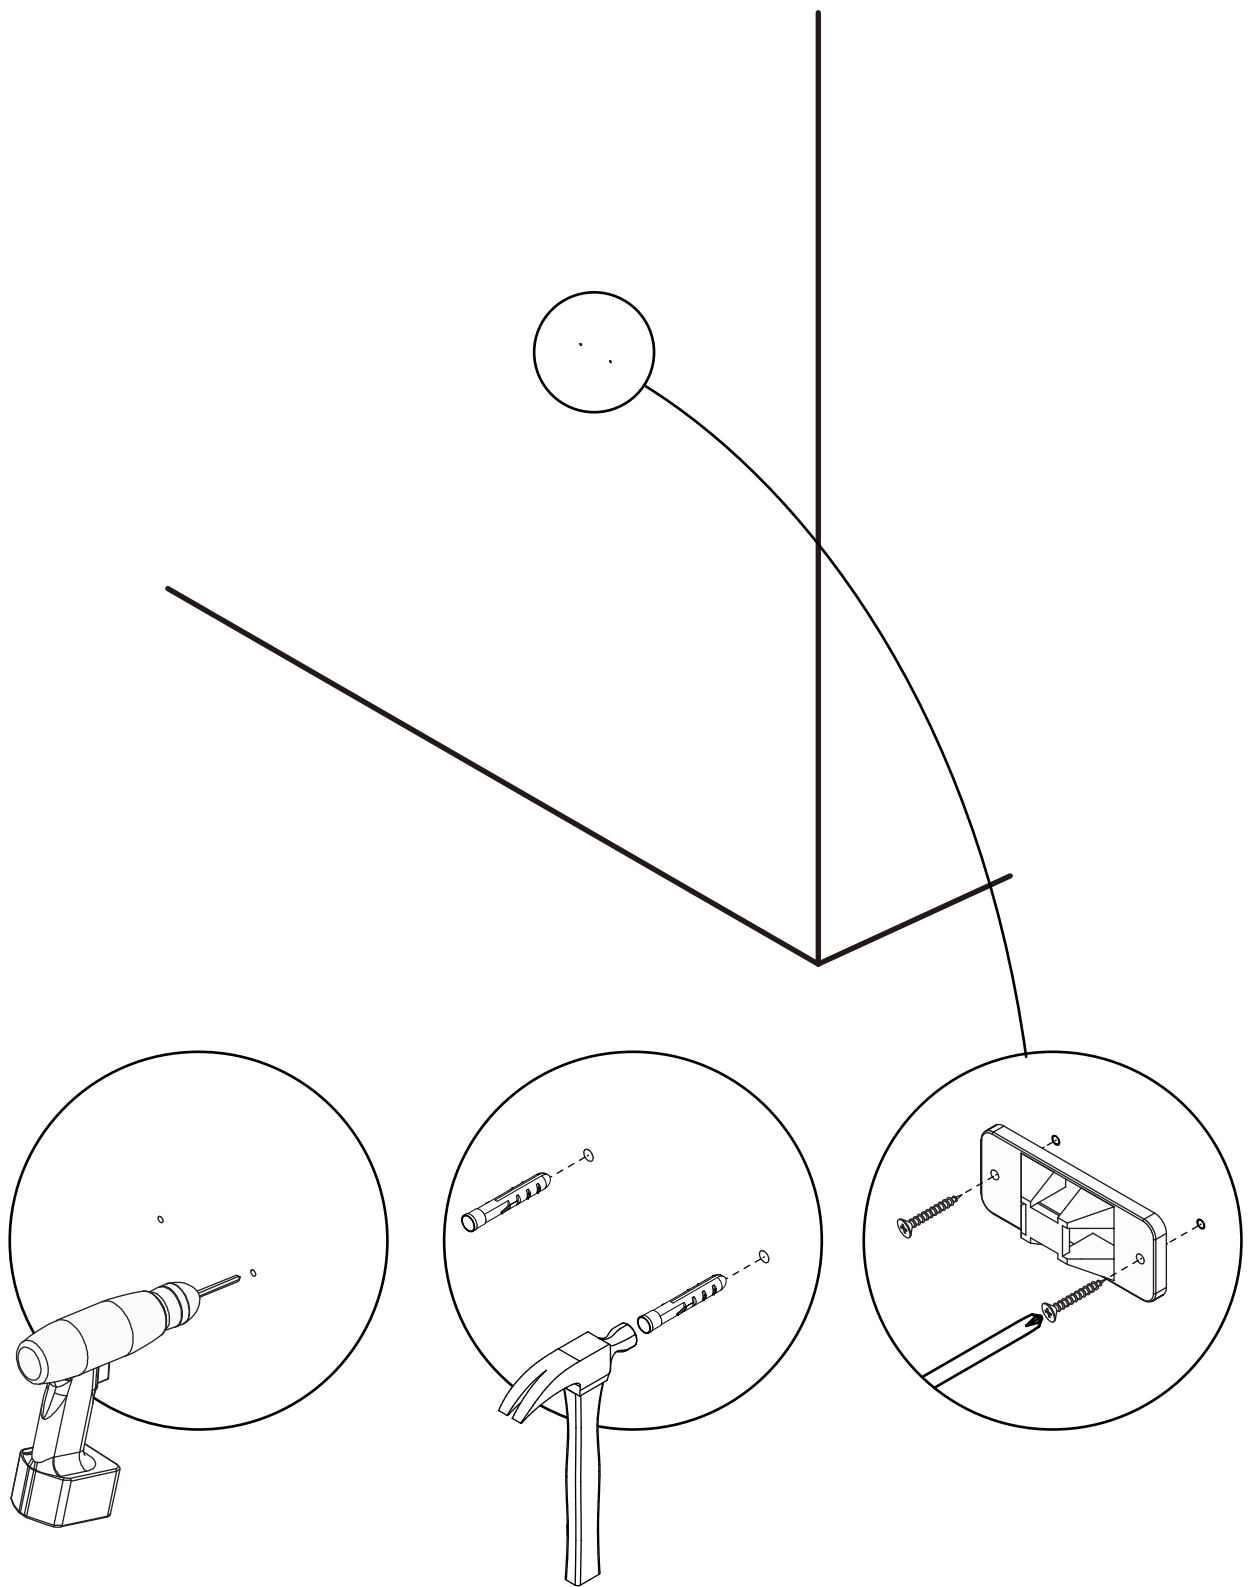

25.

