PlusFloor.

Installation Guide Vero Chevron



Vero Chevron Installation Guide



Preparation

Prior to commencing the installation process, it is imperative to thoroughly peruse these installation guidelines and adhere to them meticulously during the laying procedure. It's worth noting that the warranty will become void if the flooring is not laid in accordance with these stipulated instructions.

It is not recommended to install this product in spaces or residences lacking climate control. It is advised to steer clear of significant temperature disparities. Prolonged exposure to temperatures surpassing 27 degrees Celsius or direct sunlight will result in detrimental effects on the flooring.

Before installation, the flooring needs to be acclimatized for a minimum of 48 hours while still within its sealed packaging. Ideally, this should be done horizontally and positioned centrally within the designated area for installation. It is crucial not to stack more than six boxes atop each other, and it's essential to shield the boxes from heat sources like stoves or direct sunlight. The room temperature must range between a minimum of 18 degrees Celsius and a maximum of 27 degrees Celsius. The relative humidity should not exceed 70%, with an ideal range being between 40% and 60%. The subfloor must adhere to the specifications outlined in the DIN 18365 standard, remaining consistently flat, dry, clean, and structurally sound (without springiness). Thorough assessment for moisture issues in the subfloor is necessary. Although PVC is resistant to water, it is not impervious to moisture. The floor's moisture content should not surpass the following values, as measured using Thecm-Gerät:

Sand/cement: Less than 2.5% Anhydrite: Between 0.3% and 0.5%


Magnesite: Less than 0.3% Cold bitumen: Less than 2%


It's imperative to ensure the evenness of all subfloors, as even the slightest unevenness will become evident over time. Regarding specific inquiries about adhesive usage, consulting your materials supplier is recommended. If employing an MDF or other floating wooden subfloor, it is obligatory to use a PE foil with a thickness of at least 150 micrometers at all times. Ensuring proper expansion space all around is also of paramount importance.




Installation Method

Determine Room

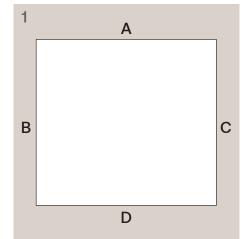


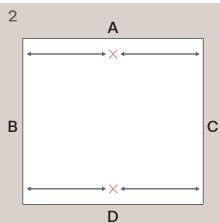

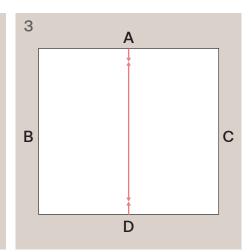


Determine the position of the columns


Establish the starting line

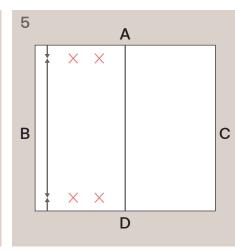

Measure and cut the starting column

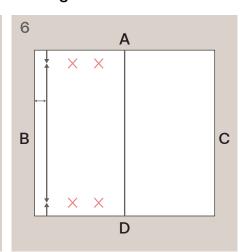


Separate the planks

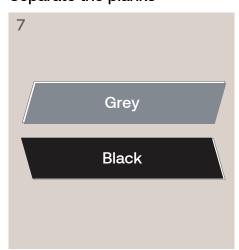






Installation Method


Install first, second, third and forth planks

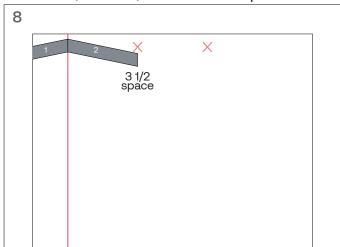

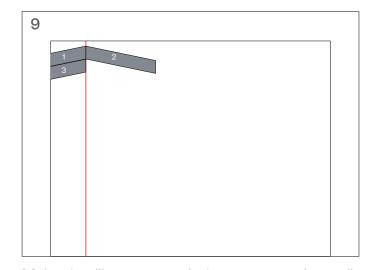

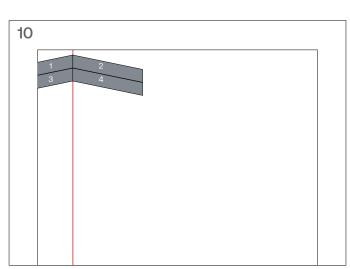

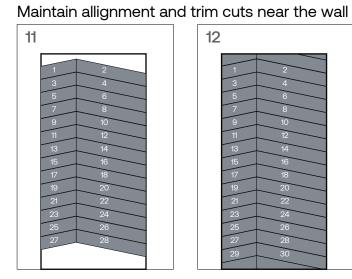

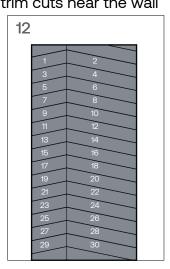




Installation Method

Subsecquent columns

1 2 1 2 3 4 3 4 5 6 5 6 7 8 7 8 9 10 9 10 11 12 11 12 13 14 13 14 15 16 15 16 17 18 17 18 19 20 19 20 21 22 21 22 23 24 23 24 25 26 25 26 27 28 27 28 29 30 29 30	13			
3 4 3 4 5 6 5 6 7 8 7 8 9 10 9 10 11 12 11 12 13 14 13 14 15 16 15 16 17 18 17 18 19 20 19 20 21 22 21 22 21 22 23 24 23 24 25 26 25 26 27 28 27 28		1 2	1 2	
7 8 7 8 9 10 9 10 11 12 11 12 11 12 13 14 13 14 15 16 16 15 16 17 18 17 18 19 20 19 20 21 22 21 22 21 22 21 22 23 24 23 24 23 24 23 24 25 26 25 26 27 28 27 28				
11 12 11 12 13 14 13 14 15 16 15 16 17 18 17 18 19 20 19 20 21 22 21 22 23 24 23 24 25 26 25 26 27 28 27 28				
15 16 15 16 17 18 17 18 19 20 19 20 21 22 21 22 23 24 23 24 25 26 25 26 27 28 27 28				
17 18 17 18 19 20 19 20 21 22 21 22 21 22 25 26 25 26 27 28 27 28				
21 22 21 22 23 24 23 24 25 26 25 26 27 28 27 28		17 18	17 18	
25 26 25 26 27 28 27 28				
27 28 27 28				
29 30 29 30		27 28	27 28	
		29 30	29 30	

Final columns

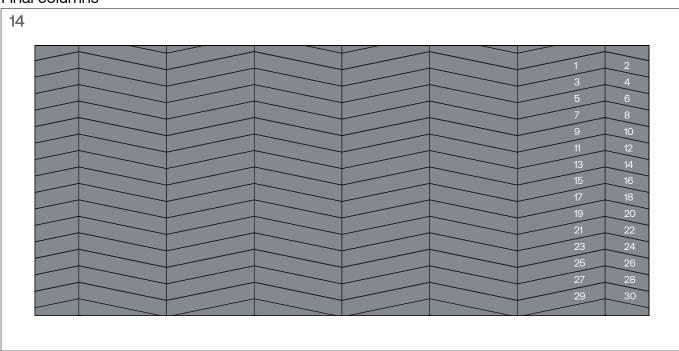

Vero Chevron Installation Guide



Advice for Maintenance:

- Place suitable doormats made from materials other than rubber in front of doors to prevent a large amount of dirt from entering the living space.
- Utilize felt pads beneath furniture and chair legs. For rolling office chairs, ensure they have PVC floor-friendly castors without plasticizers, with treads that are at least 2 cm wide.
- Exercise caution to prevent scratching the floor when moving objects across it.
- Maintain the floor's appearance by cleaning it at least twice a week using a vacuum cleaner or mop. In cases of heavy usage, more frequent cleaning will be necessary.
- Refrain from using harsh cleaning agents that could harm the floor's integrity.
- Keep pets with lengthy nails off the floor, as their nails can create deep scratches that damage the surface.
- Minimize exposure to direct sunlight, as most floor types tend to fade due to this influence. This is also important due to potential local temperature variations (see general guidelines).
- To prevent color discrepancies, it's advisable to rearrange furniture periodically.
- For unoccupied homes, it's recommended to maintain natural ventilation or regular air conditioning.

Product Guarantee:

Starting from the production date, the manufacturer of this PVC flooring offers a warranty covering any concealed manufacturing defects that might reduce the product's lifespan.

The warranty solely pertains to the product's purchase value and is valid only if installation adheres to the provided installation regulations.

In cases where a valid complaint is identified by the technical service, a deduction in value due to usage is taken into consideration. The purchase value decreases to zero by the end of the warranty period.

PlusFloor.

01524 481 118 info@plusfloor.com plusfloor.com

> London Showroom 23 Pear Tree Street, Clerkenwell, London, ECIV 3AP

Innovation + Distribution Centre 11 Oakwood Way Carnforth Business Park Carnforth, LA5 9FD