


2013-2018 RAM 1500

OEM Bumper Compatible Skid Plate

INSTALLATION INSTRUCTIONS

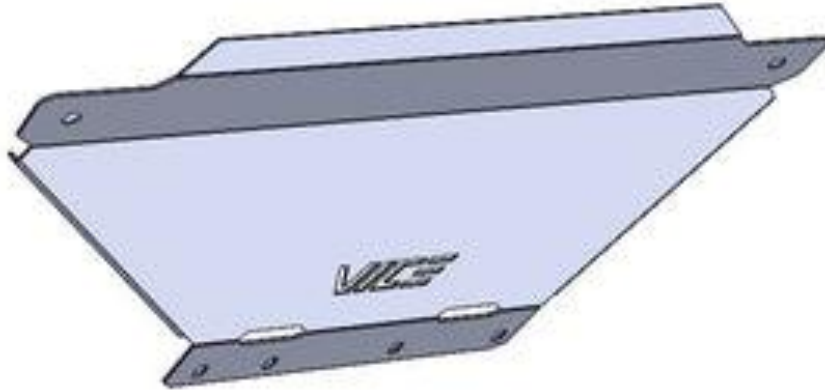

Your safety is extremely important to us. Working on vehicles has ever-present hazards which require precautions at all times to avoid injury or death. We've outlined some precautions to take below in order to help you make informed decisions about your safety before installing this product. This is not an exhaustive list, and you must use your own good judgment before performing any work in each step of this installation.

ALWAYS:

- wear eye protection
- use tire blocks and emergency brake
- disconnect battery(s)
- use care when moving components
- route electrical cables away from moving parts
- identify all pinch points
- wear gloves
- identify slipping and tripping hazards
- wear steel toe footwear
- understand proper use of tools before use
- work on a flat surface
- use care when lifting components
- insulate cables
- jack your vehicle from the OEM's lifting points
- torque all fasteners to suggested specs
- remove any hazards before starting on the job

LIABILITY

All liability for installation and use of this product rests with the owner. Improper installation, maintenance, and operation can result in serious injury or death as well as equipment or vehicle damage. Use this product at your own risk.

Kit Contents

	Description	SKU	Quantity
01	SKID PLATE, 4th GEN RAM, OEM FRONT	100199	1
02	3/8 -16 x1.25 Hex Bolt	240165	2
03	3/8 Flat Washer	240130	2
04	M8 -1.25 x35mm Flanged Hex Bolt	240136	2
05	3/8 -16 U-Nut, 1.125 Throat	240166	2
06	M12 -1.5 x35mm Hex Head Capscrew	240140	2
07	M12 Flat Washer	240141	2
08	OEM Bumper Skid Plate 2013-2018 Ram 1500 Installation Instructions	MN0126	1

Install Process

1. Insert the U-Nuts into the front suspension cross member. Insert from the large oval cutout with the flat part of the nut pointed down. The threaded portion should align with the hexagonal hole.



2. Unbolt the rear bolt on the factory tow hooks (if equipped) and slide the skid plate above the tow hooks. If not equipped install the front of the skid plate using the supplied M12 hardware.
3. Fasten the rear of the skid plate to the U-nuts inserted earlier and use the provided M8 Bolts for the other two holes which pick up on factory locations.