

Step 1

Bottom Panel

Top Panel

Back Panel



Shelve

Side Panel


Side Panel

Front Door

Step 2

Install rails in this configuration


Use 2 screws per rail

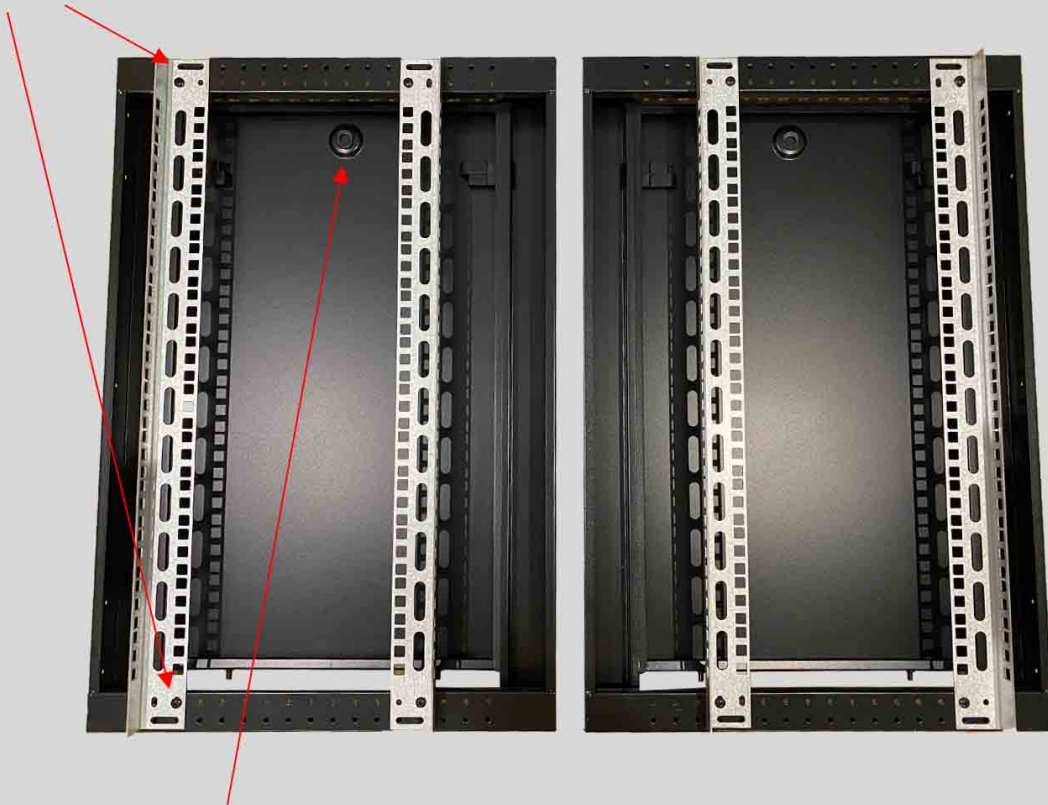

Easil Identify the top of the panel with the rubber grommet`

Step 3

Install side panels to bottom panels

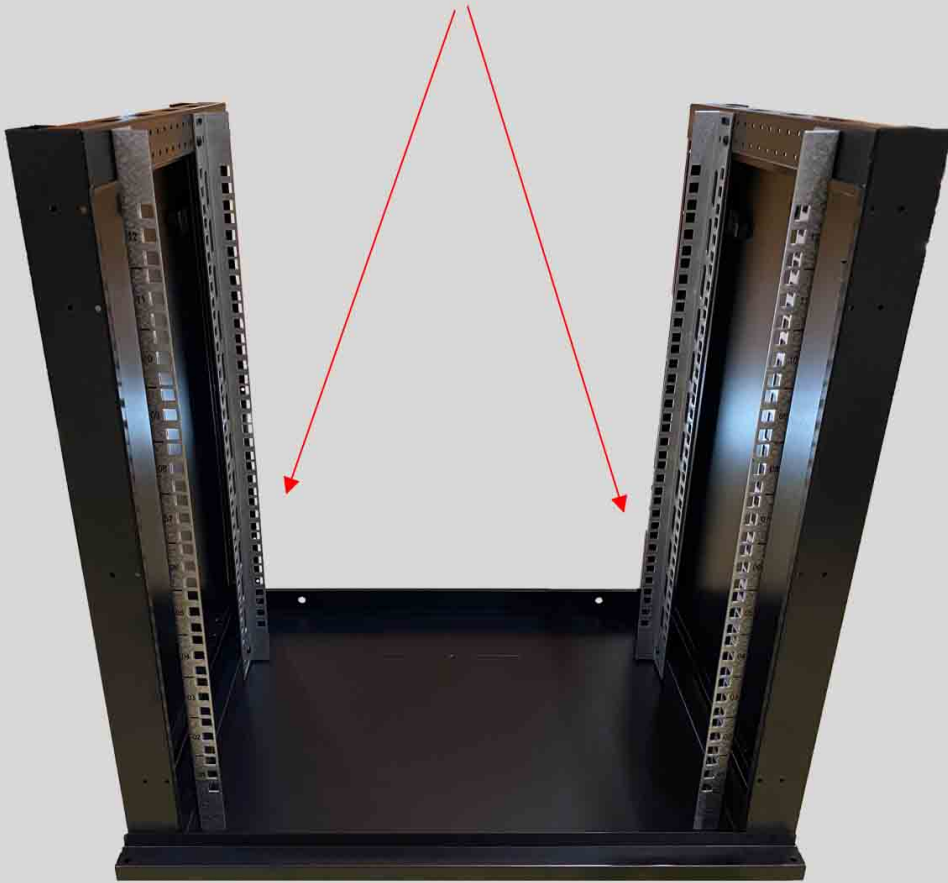


Step 4

Install top panel to side panels




Step 5

Drill 4 screws on top and bottom panel

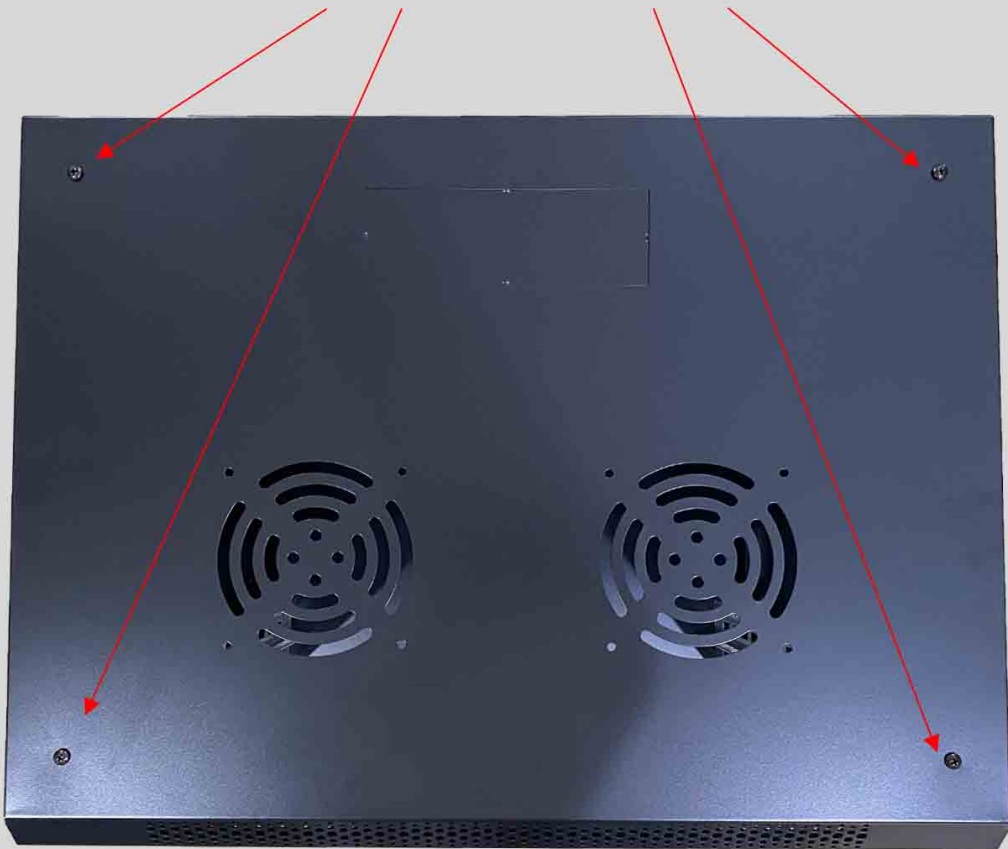


Step 6

Screws Into the face of the cabinet

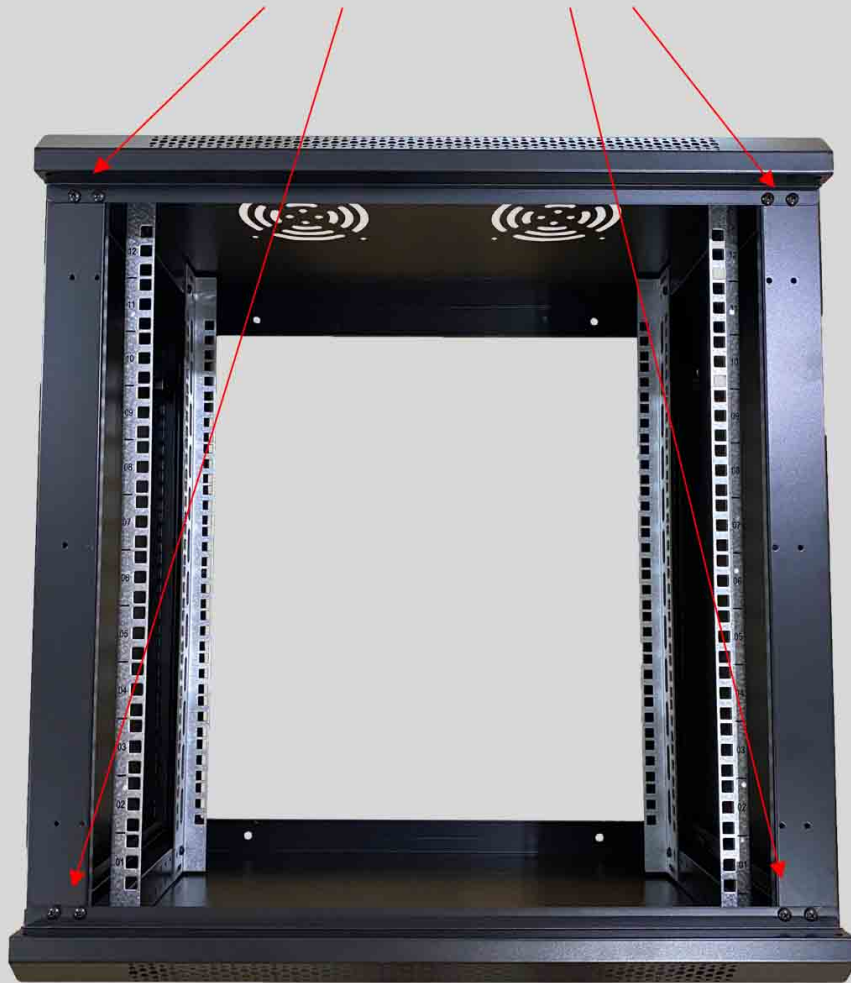

Step 7

Install back panel with 4 screws

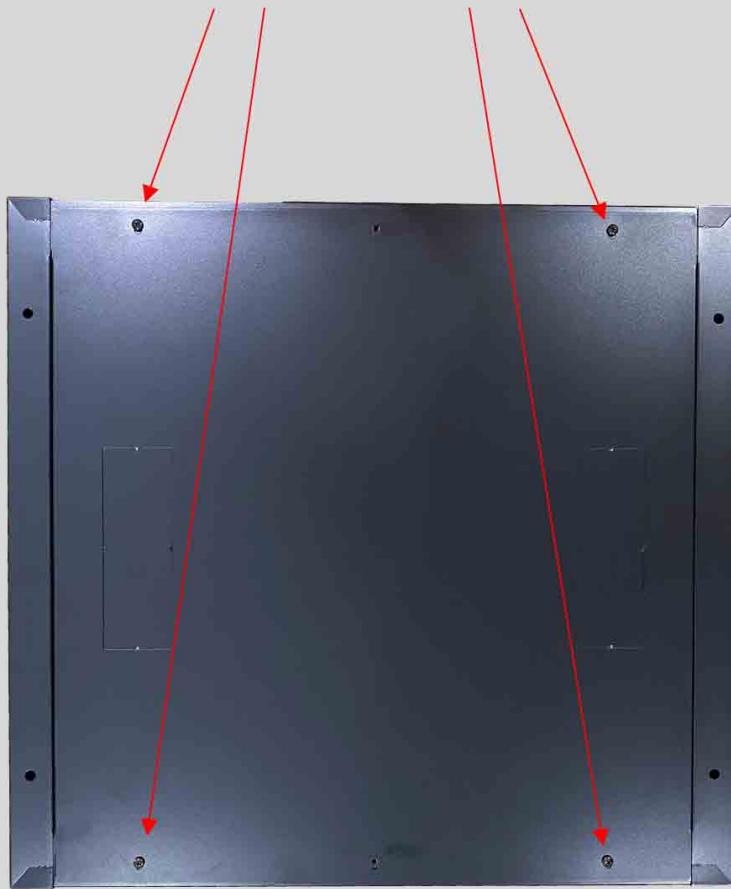

Step 8



Insert the post

Lock installation



Step 10

Clip Spring loaded pin into frame of the cabinet



Connect Door to post