

# MOUNTING THE TRIANGLE™ TO A VEHICLE

## IMPORTANT

Mounting your toolbox on a truck, tractor or other vehicle requires you to drill permanent holes in the vehicle. We are not responsible for any damage to your vehicle or toolbox.

**WARNING:** Before proceeding, measure the thickness of the material where you want to attach the toolbox. You will need bolts long enough to fully pierce the material with room to attach lock nuts and washers.

**CAUTION:** We do not recommend attaching a toolbox to a truck with a truck bed.

## STEP 1

Carefully choose the location where you want to attach the toolbox.

## STEP 2

Remove the four waterproof plugs from the bottom of the toolbox. See Fig. 1.

**WARNING:** Removing the waterproof plugs could affect the weather resistance of your toolbox, as water can enter through the holes in the bottom.

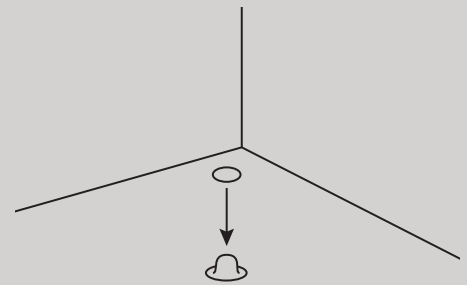


Fig. 1

## STEP 3

Place the toolbox on top of the vehicle in the location chosen. Mark the locations of the four holes in the bottom of the toolbox.

## STEP 4

Drill through the holes in your vehicle.

## STEP 5

Put your toolbox on top of the vehicle, lining up the holes in the bottom of the toolbox with the holes in the vehicle.

Insert each bolt through the top of the toolbox and down through the vehicle. Secure with a washer and locknut. See Fig. 2.

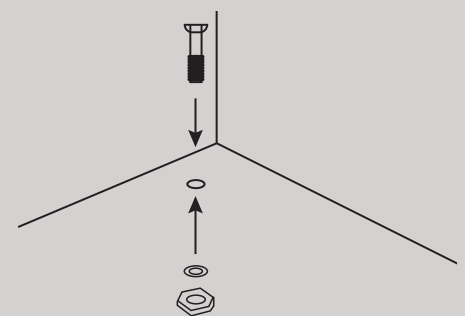


Fig. 2