

PolarityGear Instructions and Tips

Thank you for purchasing the patented **PolarityGear!** We hope you'll agree that it's the best performing paper towel and toilet paper holder ever produced. This unique design, as a self-contained unit, allows us to offer a variety of bases and mounting options. It also allows for more compact shipping and opportunities for future designs.

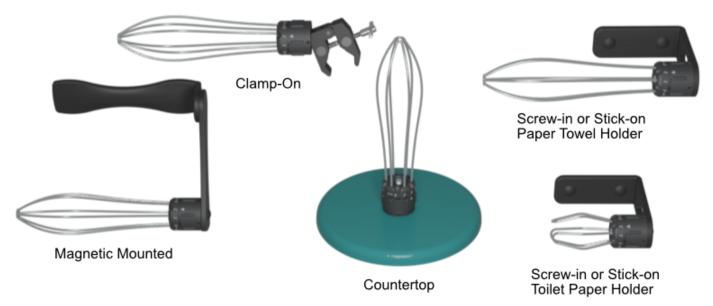

Parts

There are two main parts: the roll holder and the base (countertop, magnetic mounted, screw-in/stick-on, or clamp-on).

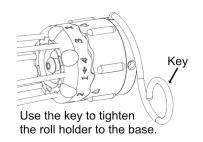

Attaching the roll holder to its base


Use the key as shown to tighten the roll holder to the base **as tight as you can**. Apply thread locker to the threads and retighten if it ever comes loose.

If your base is already mounted to the wall when you attach the roll holder (allowing easy access to drive screws), then support the base as best you can while tightening the roll holder onto the base, otherwise you could risk ripping the base loose from the wall.


The Settings and Numbers

There are four settings for resistance level (1-4). The arrows point to the current setting. To change the setting, move the dial relative to the numbers. **Turn only holding the wires** to feel the resistance at this setting. Change the setting and feel the new resistance.

As the roll gets used and gets closer to the cardboard core, you may get better results by changing to an easier setting, like 1 or 2. Various paper types and brands are also factors that may affect which setting is ideal.

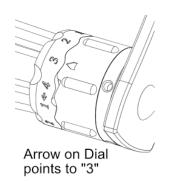

The Base Types

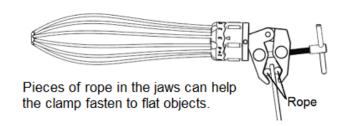


Clamp-On

The Clamp-On base allows for installation just about anywhere. The jaws naturally fit round objects like pipes, but to clamp onto a thinner/flatter object use small pieces of rope or something else in the jaws, like shown.

Mounted (Screw-in or Stick-on)

This base comes with wood screws, drywall screws, and permanent double-sided mounting tape. Mounting putty (small squares) is also included to hold the screw covers in place.

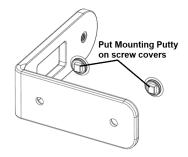


Using Screws:

Attach the roll holder after fixing the base to the wall. This makes it easier to access the screws for installation. Follow the instructions included with the screws. Support the base while you tighten the roll holder with the Key.

Mounting with Double-Sided Tape:

Make sure the wall (or under cabinet) surface is clean. Remove the film from the tape before mounting. Use masking or blue painters tape to tape the base in place (see right image) while the double-sided adhesive cures (24 hours). Alternatively, you can wedge a rod or piece of wood, etc to hold in place while it cures.



Tape or support for 24hrs while curing.




CounterTop


Apply the rubber feet stickers to the bottom of the base in the spaces provided. Keep in mind that if your countertop paper towel holder slides when you use it, either there is dust or lint on the rubber feet and/or the resistance setting is too high. Wipe the rubber feet with a damp cloth and lower the resistance setting to "1" or "2".

More Tips

Put the roll on all the way, covering all of the roll holder parts. Grab a sheet near its side and rip with a motion across towards the other side like ripping a check from a checkbook.



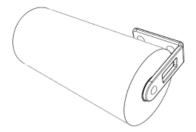

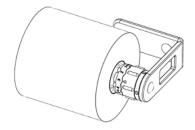

As you get more familiar with your PolarityGear, you'll be able to adjust the resistance level by pulling the roll off slightly while turning the dial.

Because paper rolls vary, it might help to squeeze the wires slightly if the roll is difficult to load.

PolarityGear offers:

- Superior one-handed dispensing
- Adjustable torque resistance
- o Fits ALL consumer roll sizes
- Easy to load and unload
- Engineered to be best in category
- Six wires for better contact (not four)
- No unraveling of paper
- Stainless Steel shaft, wires, and other components



"PolarityGear" is a Registered Trademark of HoldenArt Inc.

US Pat. No. 10,682,023

Visit www.holdenart.com for purchase and support information.