



# Brook Installation Guide

Last edited: 11/25/2023


Each kit includes:

- 1x Mating board
- 1x Ribbon cable
- 4x Adhesive standoffs (for the Light)
- 4x Screws (for the Heavy)

Step 1: Remove the 6 screws on the back panel

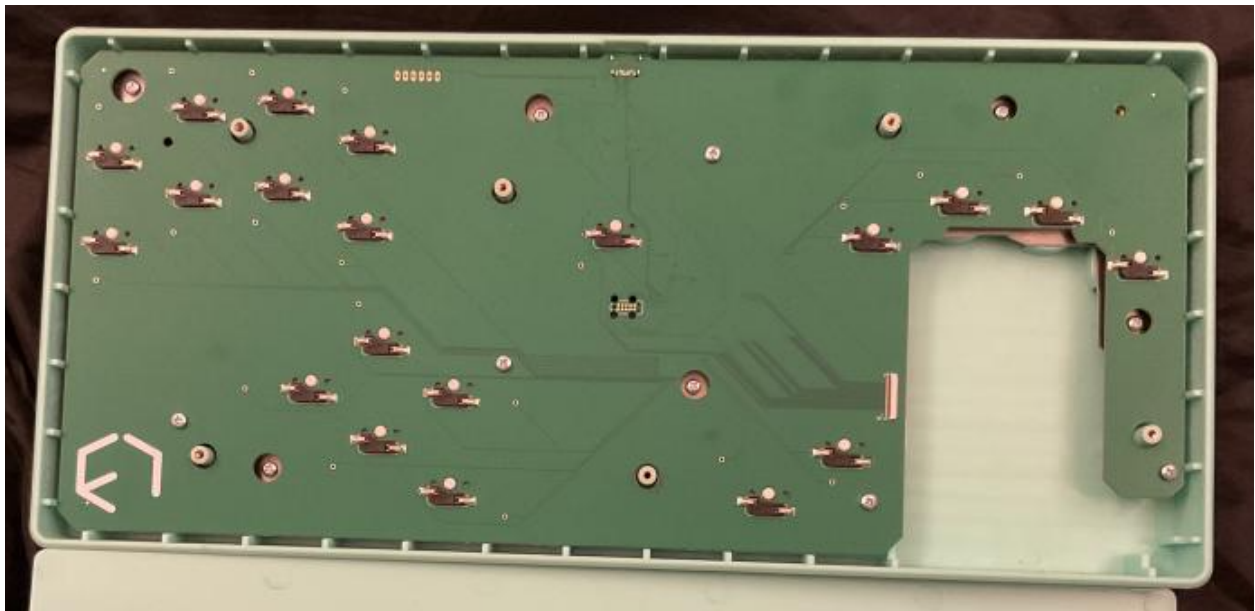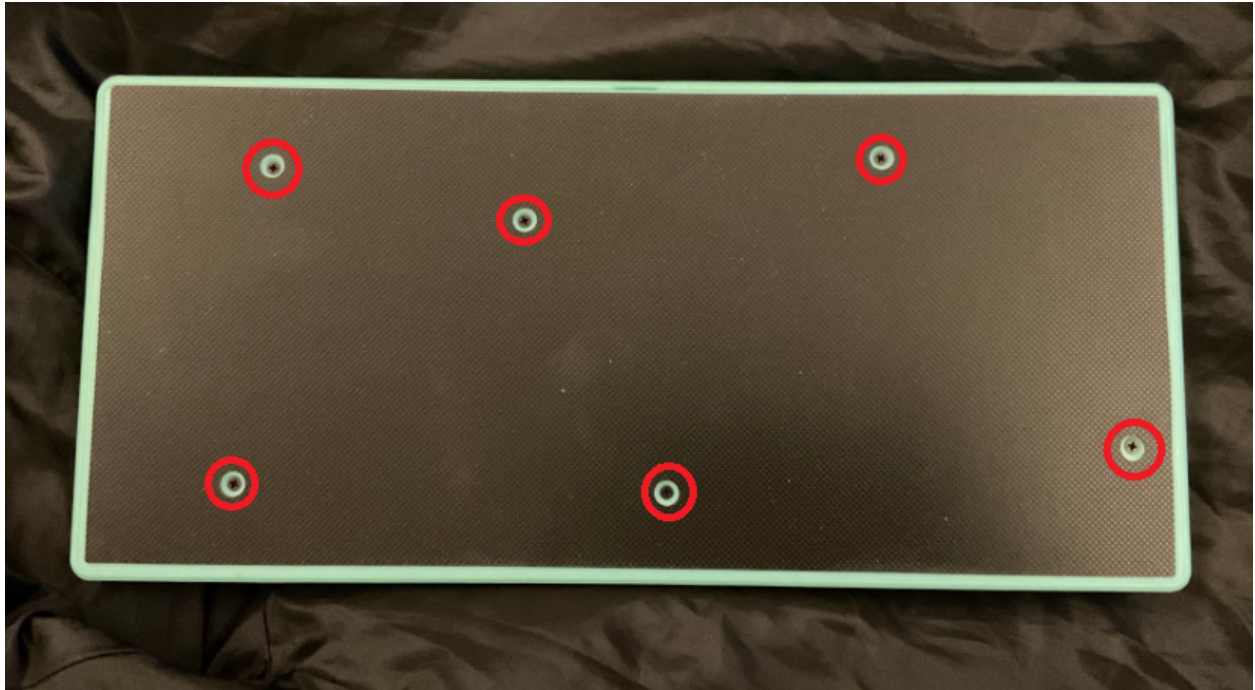


Step 2 (LIGHT ONLY): Secure the 4 standoffs to the holes in each corner of the Brook Board

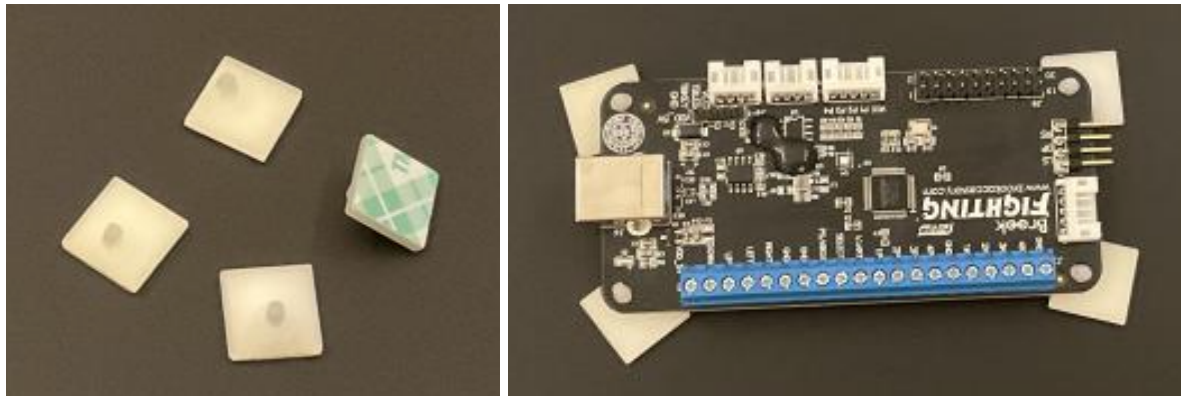


Step 3: Attach mating board

The two-pin connector won't attach to anything unless you're using a PS4+ board. This is normal.

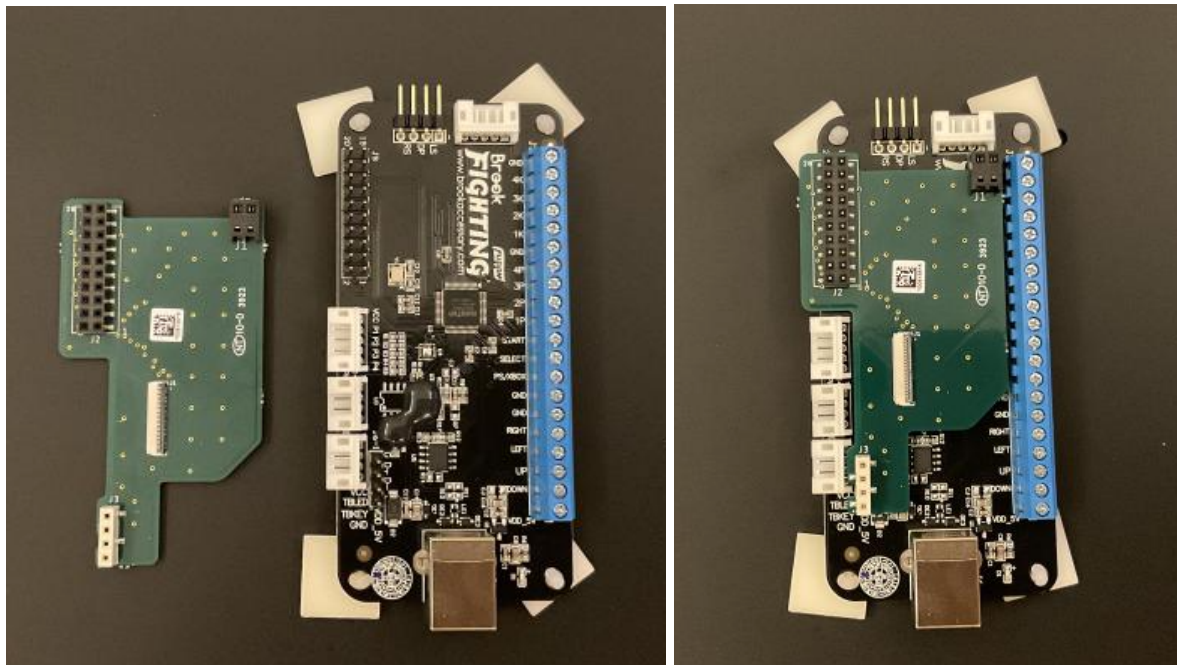

## Step 4: Plugging in the Ribbon cable


Start by lifting the black latch of the connector from the back (right side in this picture). Then, slide the ribbon cable in and secure it by pushing the latch back down.

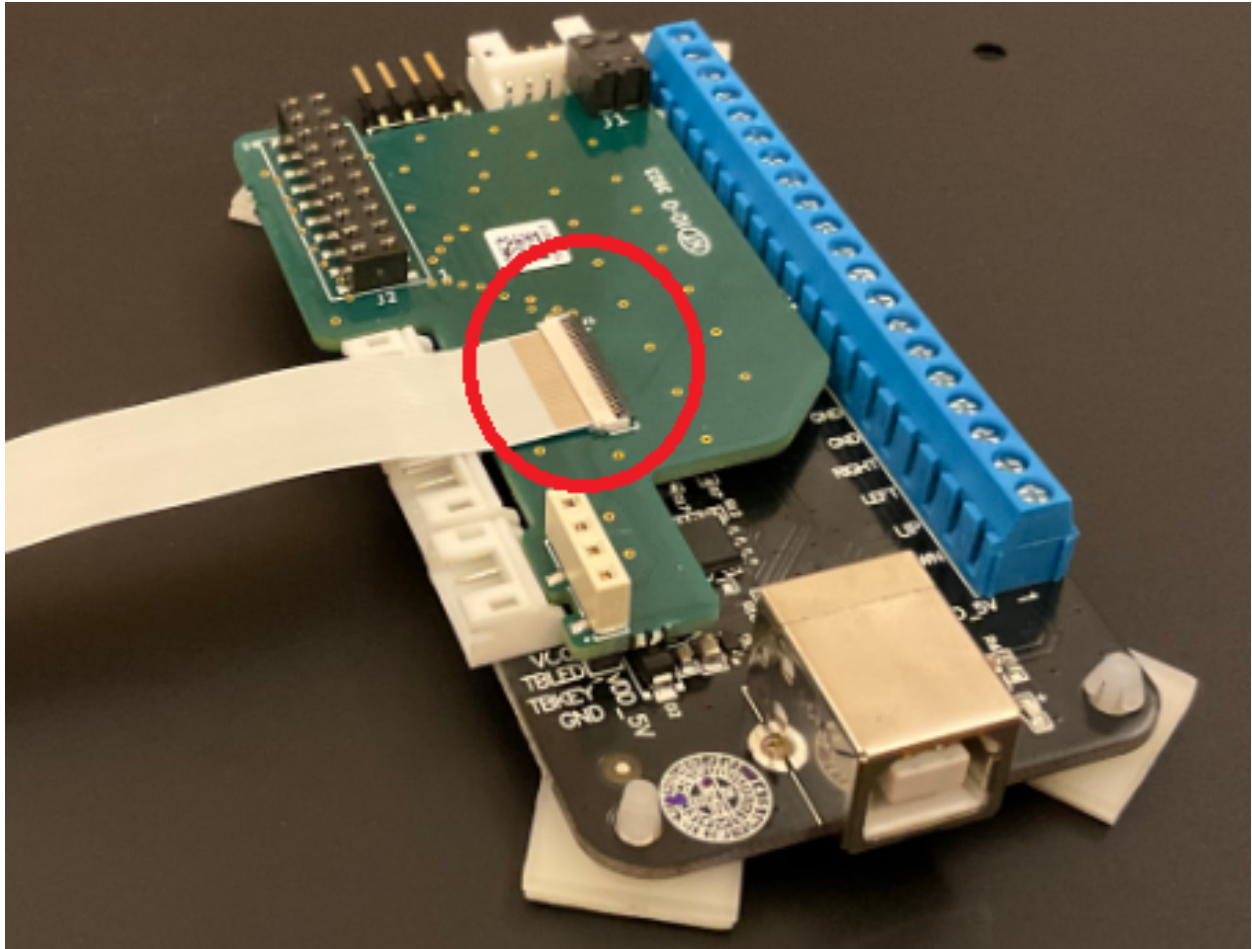

## Step 5 (LIGHT ONLY): Mounting


(Please note: Some of the adhesive pads need to be rotated within a certain range to fit, I recommend placing it inside without taking the adhesive off before doing it for real)

After peeling the adhesive off, stick the brook board inside. Be sure to match the orientation of the picture below.

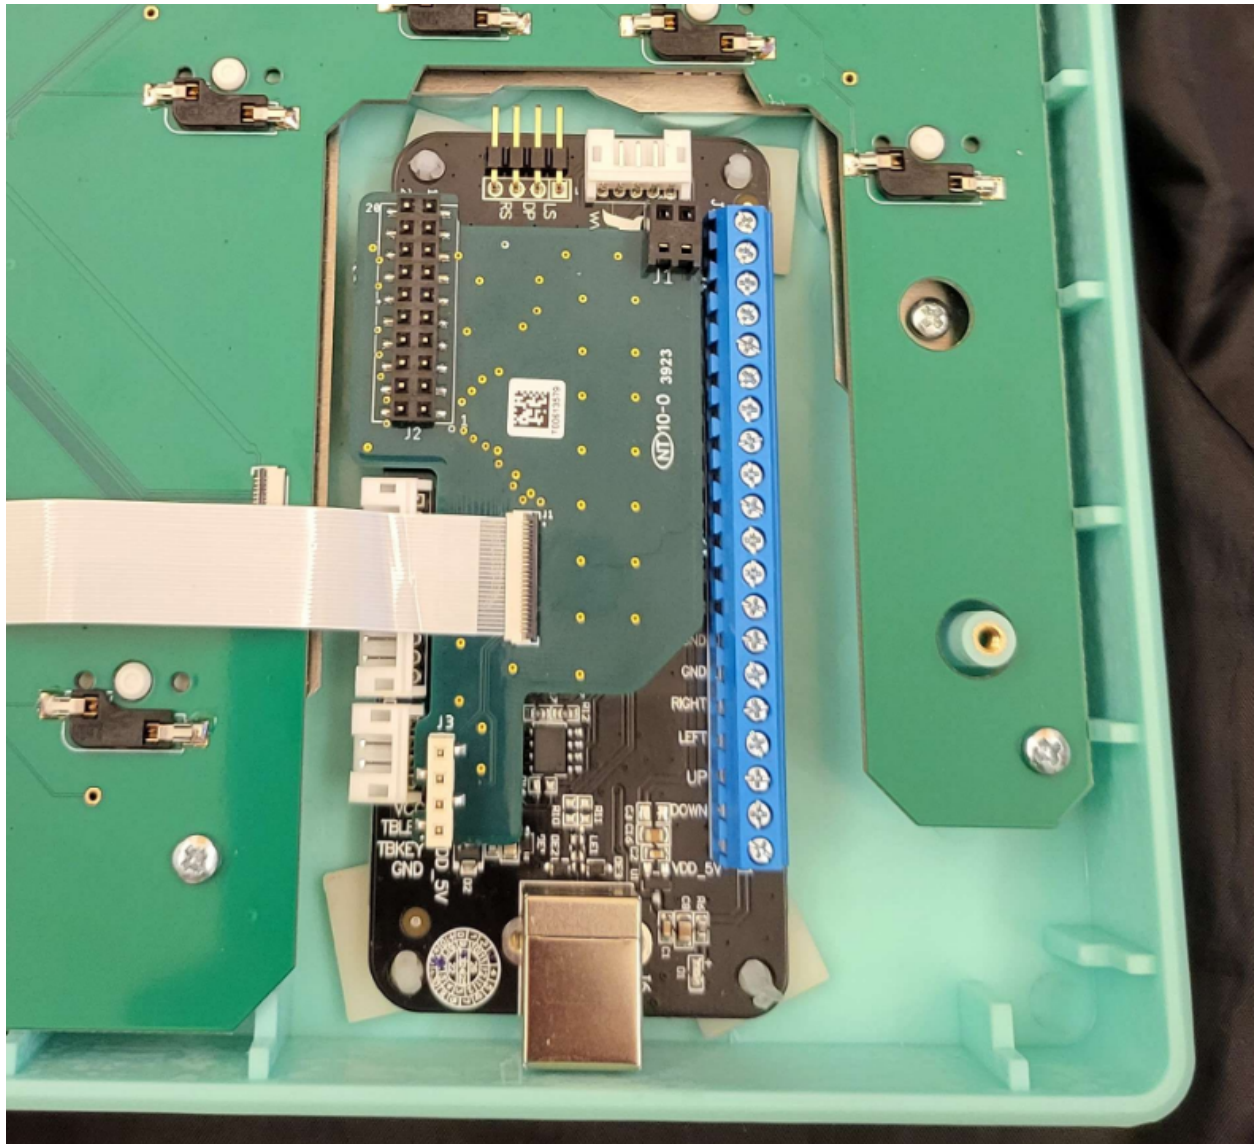


## Step 5 (HEAVY ONLY): Mounting

Screw the 4 screws into the brook board, being mindful of the board's orientation.

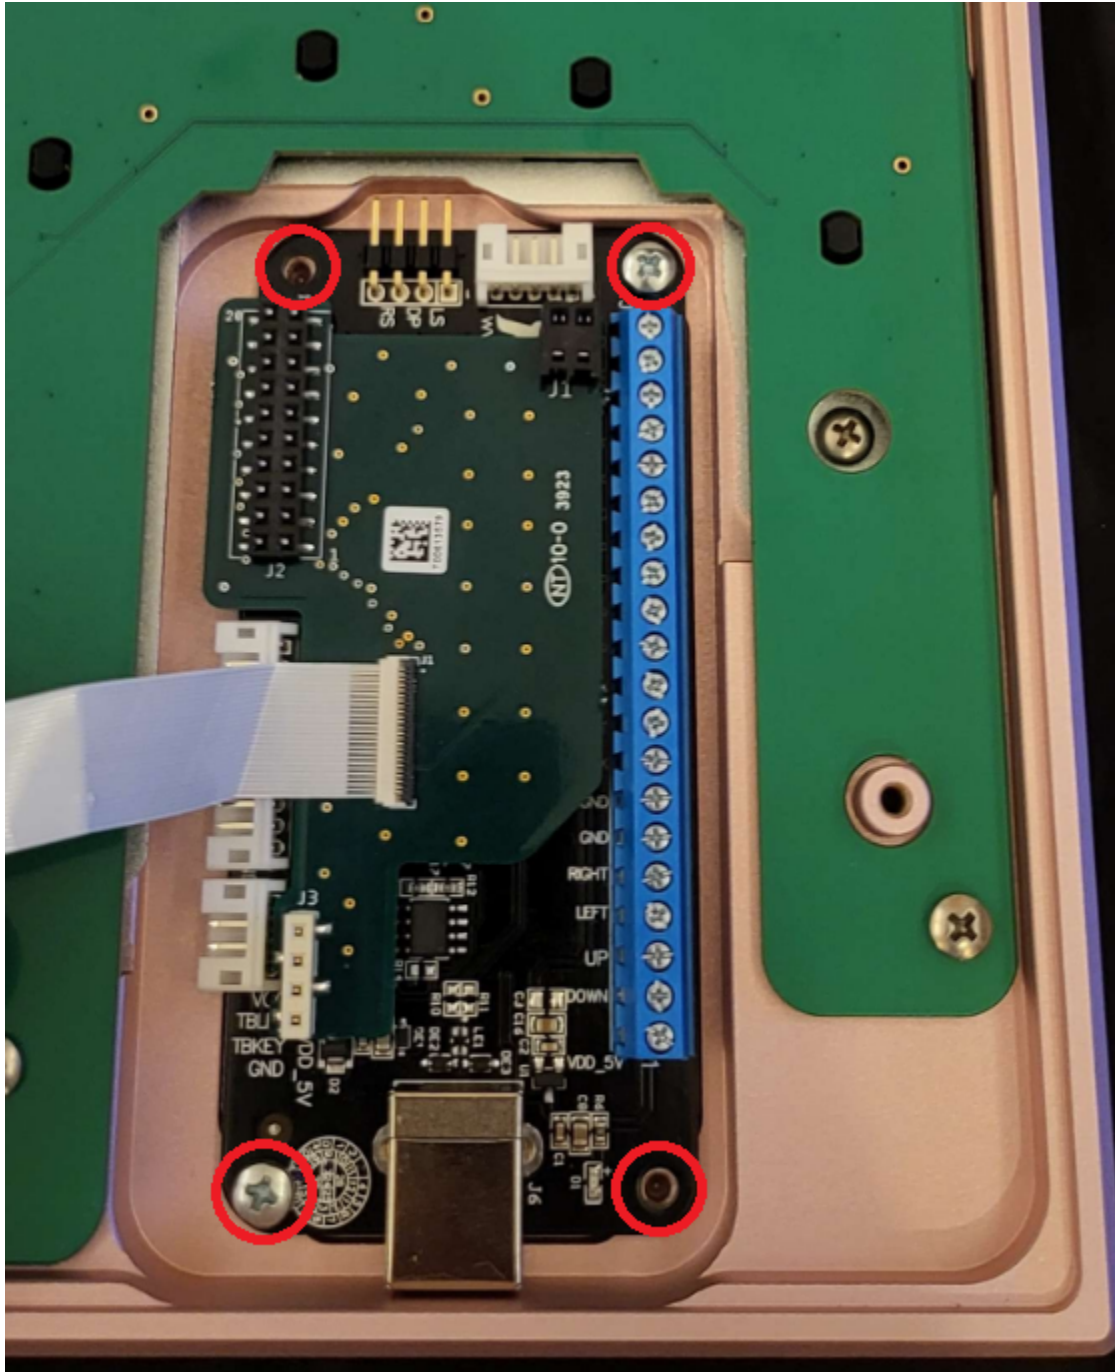

## Step 6: Attaching the Ribbon Cable to the Main Board

Attach the ribbon cable the same way as before (lifting the black tab from the back, sliding it in, and pushing the tab back down). Then, push down and crease the cable to keep it in place

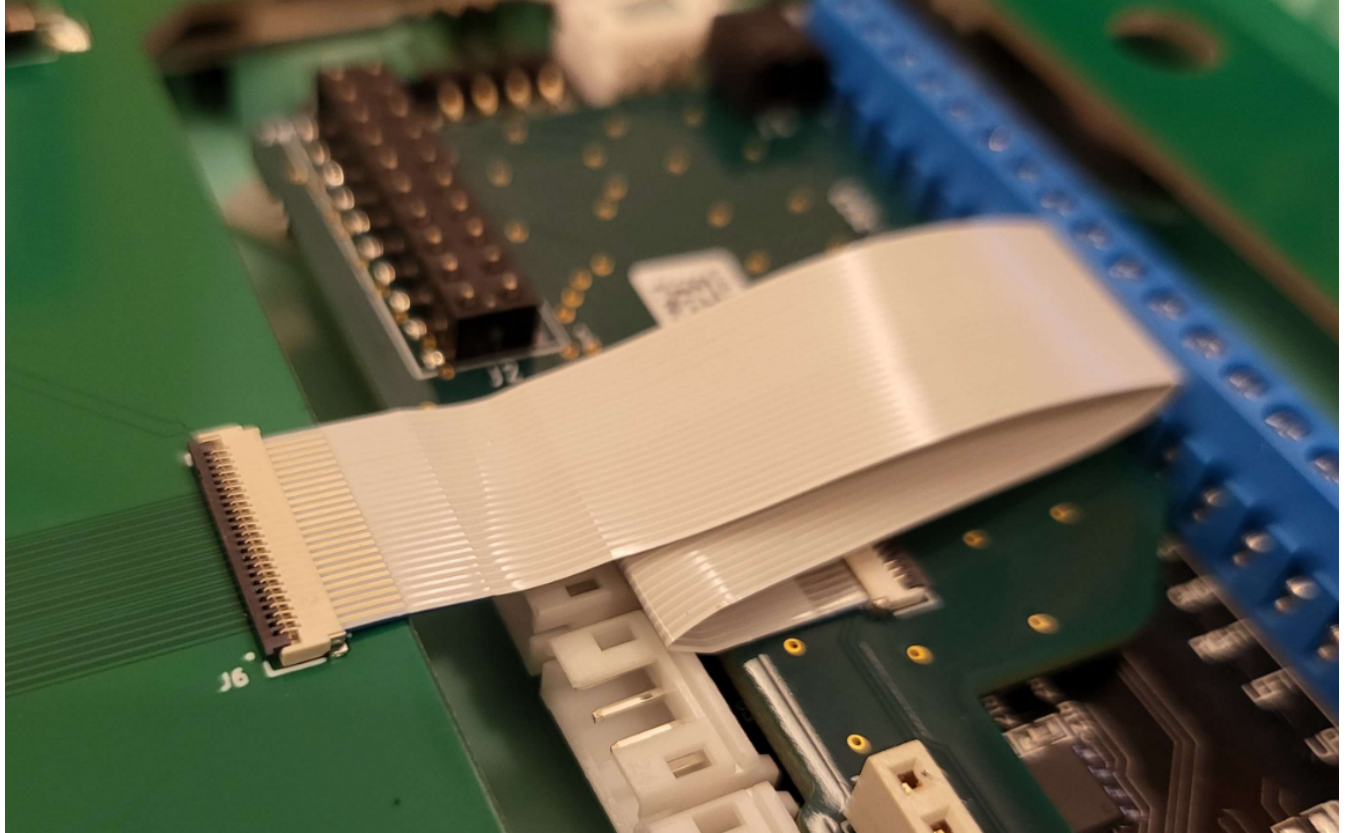

## Step 7: Reassembly

Just the reverse of Step 1. Place the bottom panel back on and screw back in the 6 black screws.