

AGA-7 Assembly Instruction

1、 Open the packing to take out the battery, accessory case, wheels, racks etc..



hardware



Fuel cap



Dust cap



Accessory case



Tool bag



Tools



Rear reflector
Brake lever tip(you may find it already assembled to the brake lever)
Safety kill switch cable



Handlebar foam and cover



manual




Bolt:	M6X20	2pc
Nut:	M6	2pc
Spring wash:	φ 6.5	2pc
Flat wash:	φ 6.5	2pc



Battery bracket:	1pc	
Bolt:	M6X20	2pc
Nut:	M6	2pc
Rubber Strip:	1pc	




Bolt: M10X115	1pc
Bolt: M10X25	2pc
Nut: M10	3pc

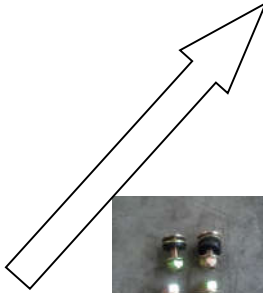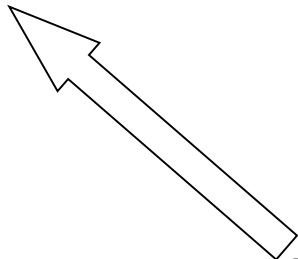

Bolt: M10X65	4pc
Nut: M10	4pc
Bolt: M8X40	2pc
Nut: M8	2pc






hardware



Bolt: M6X20	2pc	
Nut: M6	2pc	
Spring wash:	φ 6.5	2pc
Flat wash:	φ 6.5	2pc
Bolt: M8X15	4pc	



Nut:	M8	8pc
Spring wash:	φ 8	8pc
Flat wash:	φ 8	8pc

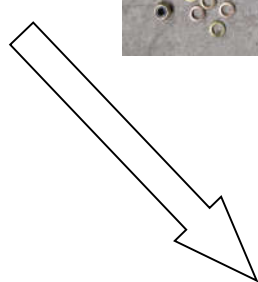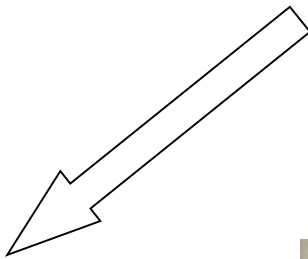

Bolt: M10X20	8pc
--------------	-----




Handlebar clamp:	2 set
Bolt: M8X60	4pc
Nut: M8	4pc




Bolt: M10X45	3pc
Nut: M10	3pc

2、 Lift the vehicle out and place it on a stable and reliable platform, and assemble the front and rear shocks

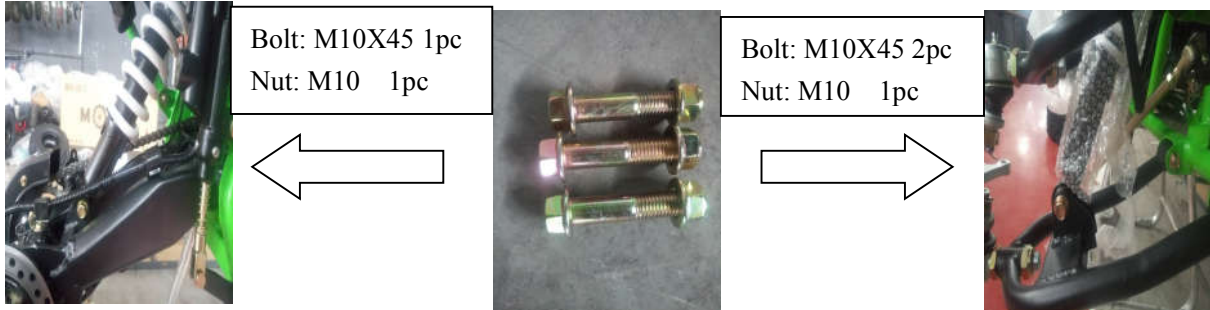


3、 Take out the wheels and inflate the tires.

a. Rear wheel assembly: Assemble the rear wheel to the rear rim bracket with M10X20 bolts. And then, put on the dust cap.

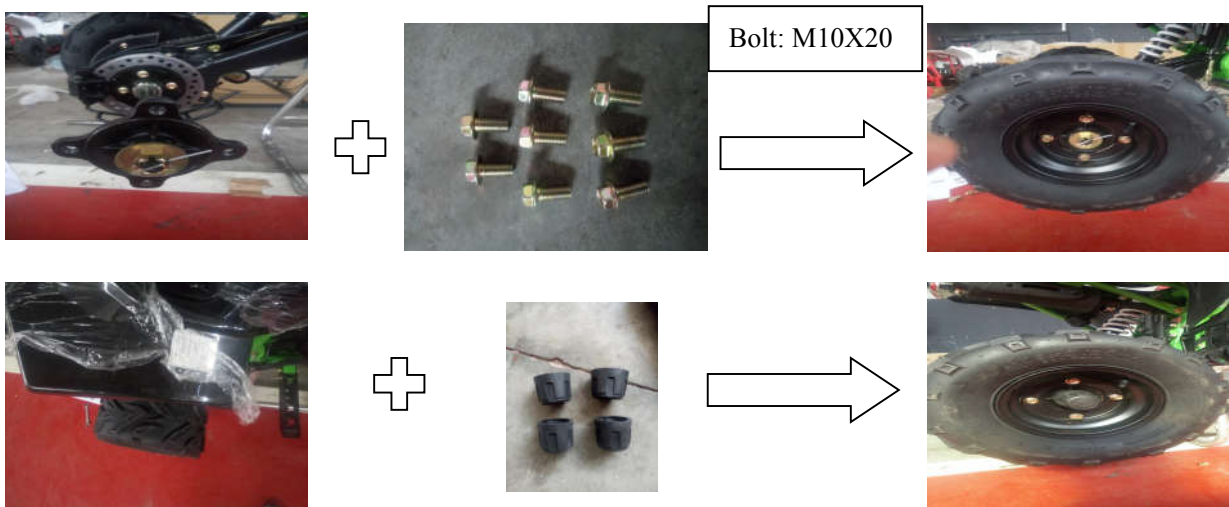


b. Front wheel assembly: After the steering linkage and brake drum assembled, fix the front wheels with M8 spring wash, flat wash and nut.

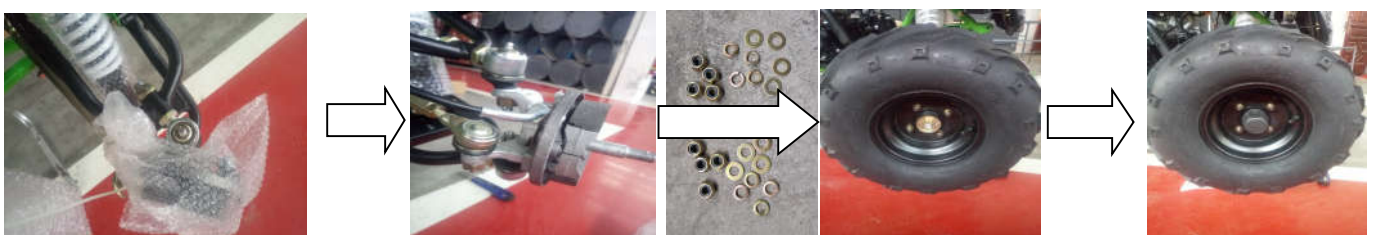

4、Rear Rack and rear fender brackets。


M8X15 bolts 4pcs

Rear Fender brackets
M6 bolts




5、Front bump。

Bolt: M10X115 1pc
Bolt: M10X25 2pc
Nut: M10 3pc



6、Front plastic body bracket



7、Foot Guard.




Bolt: M10X65
Bolt: M8X40




8、 Front nose plastic.




9、 Handlebar.

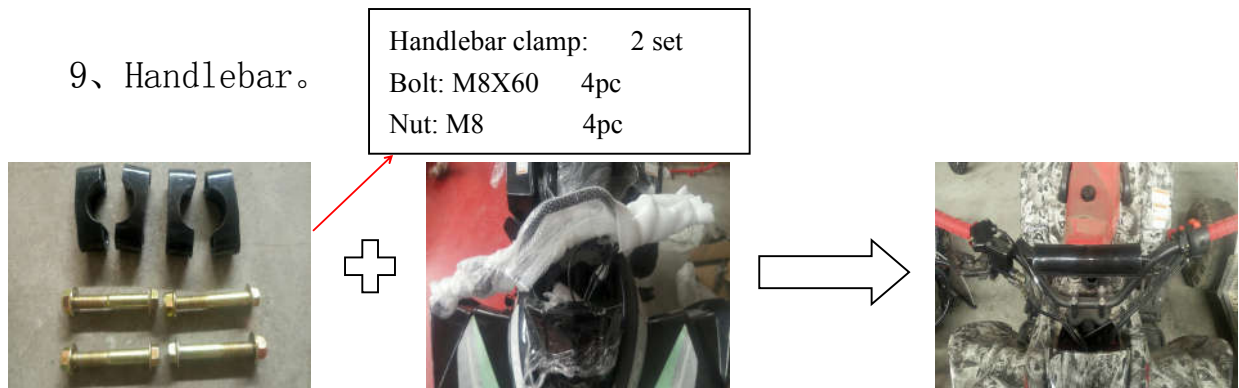


10、 Fuel cap to Fuel tank

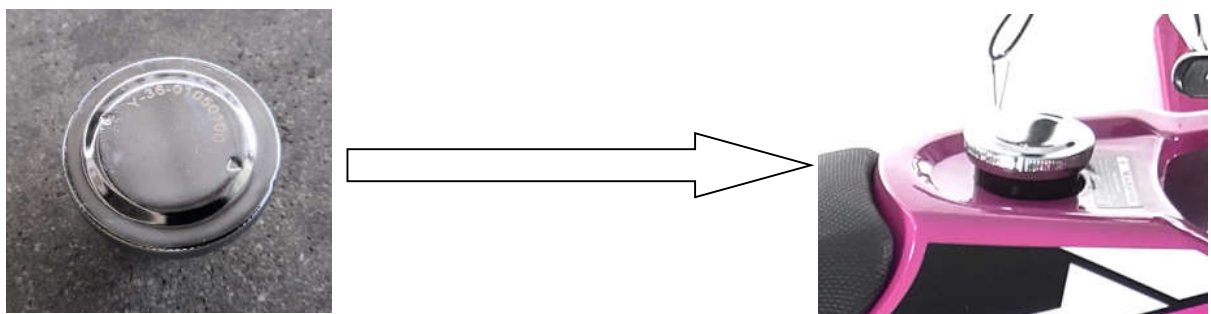

11、 Battery Assembly: Put the electrolyte into the battery as the instruction of the battery manual. The black cable must be connected to + pole and the red cable to - pole.

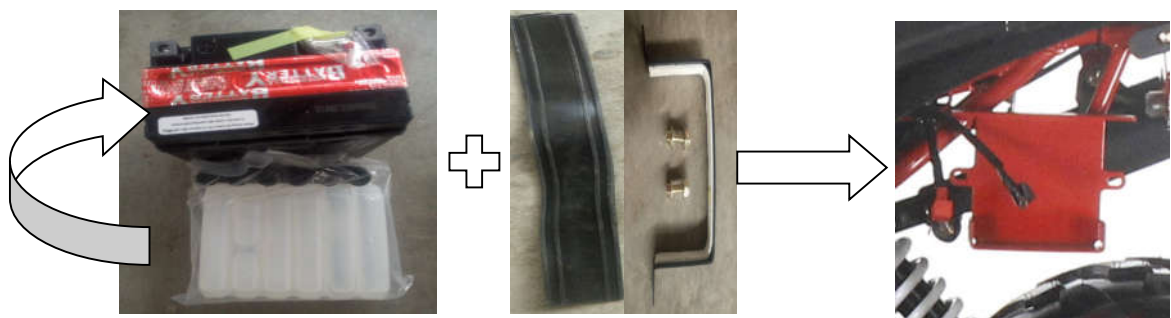

12、 Check the engine vent tube. If the tube is tied, must cut the zip tie tightened the engine vent tube .

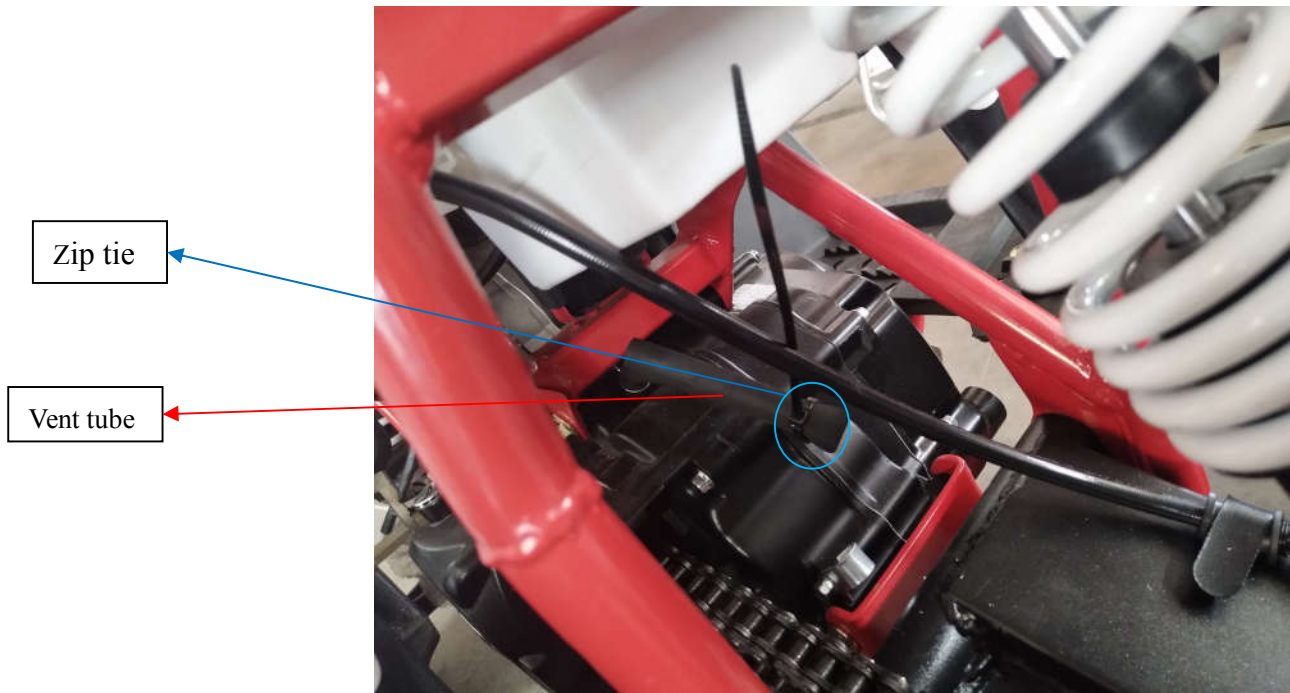

13、 Assembly finished.

