

# **XY200U-C GVX**

## **Installation Instructions**


# Installation Tools

1. Fastening tools
2. The hammer
3. The scissors
4. Phillips screwdriver
5. A wrench (12mm, 17mm)
6. Sleeve head (10mm, 14mm, 17mm)



# Erection Sequence

1. Install the rear fender
2. Install Rear Plate Packing ASSY
3. Install Rear Backrest Support Packing ASSY
4. Install Pedal Packing ASSY
5. Install Support Connecting Tube ASSY
6. Install Foldable Plate Packing ASSY
7. Install Handrail Pipe
8. Install Middle Handrail
9. Tighten the Bolts
10. Install belts

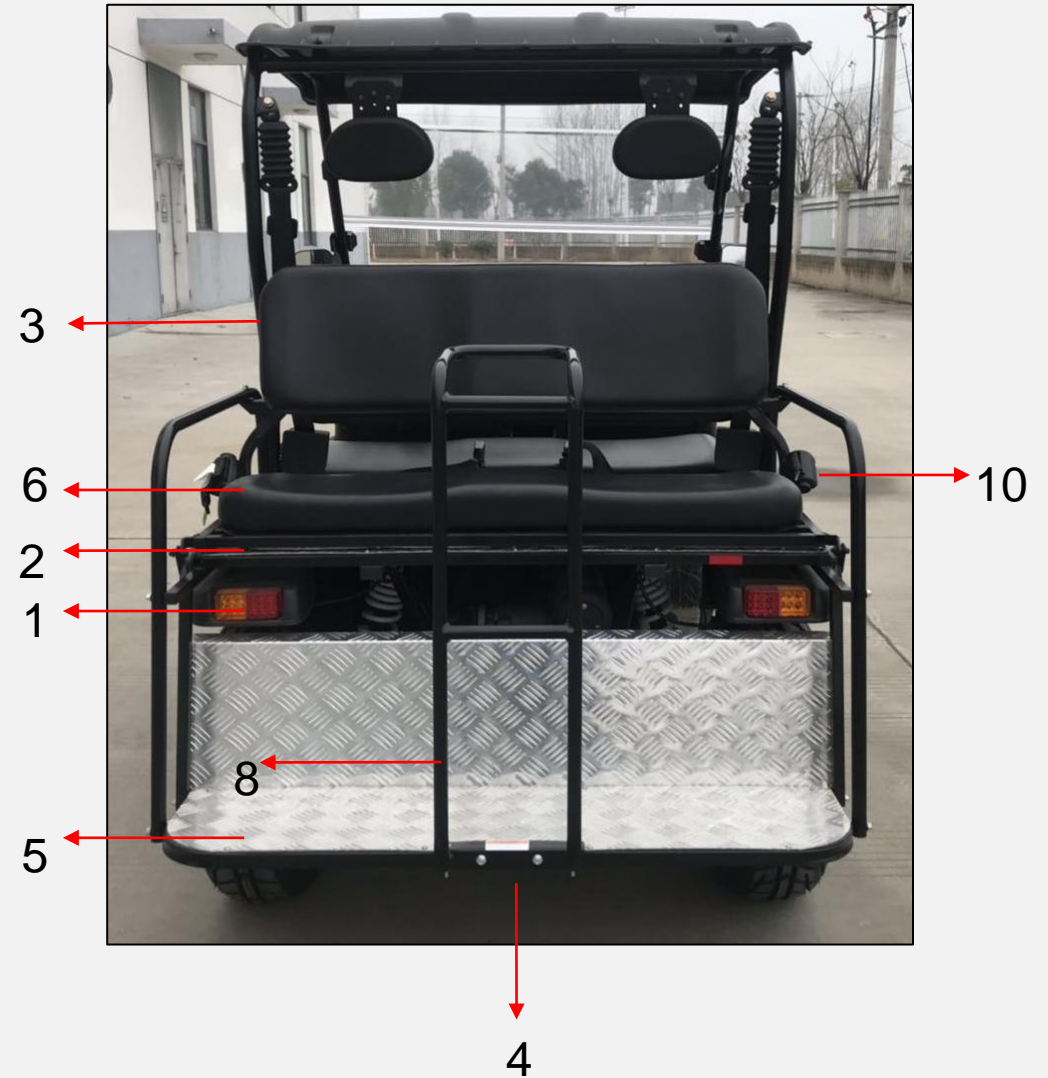

# 1. Install the rear fender

**The installation place**



## **Matters Need Attention:**

1. Do not scratch parts



## **Operation instructions :**

1. Disassemble the packaging bag of 8 screw M8×40 on the reverse side of the rear plate
2. Install the fender rear into the Rear Plate Packing ASSY

## **Tools:**

1. cross screwdriver

## 2. Install Rear Plate Packing ASSY

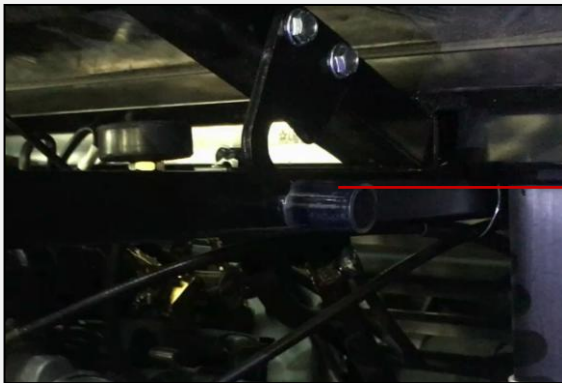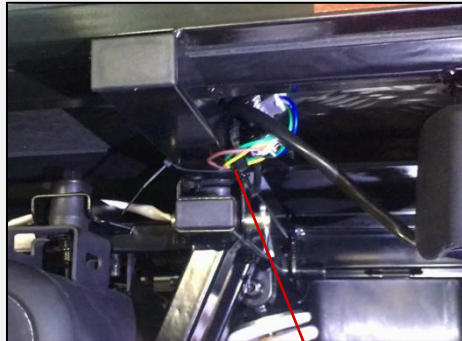

**Tail light connection  
fixed place**

**The rear plate hook shall  
be inserted into the frame**

### Operation instructions :

1. Take out the No.11 standard parts bag and install the rear plate packing ASSY on the rear part of the frame with 2 Pin Axle and 2 B Shape Pin.
2. Take out No. 13 standard parts bag and fix taillight cable inside the rear plate packing ASSY with tie belt.

### Tools:

1. The scissors

### Matters Need Attention:

1. Do not scratch parts

# 3. Install Rear Backrest Support Packing ASSY



**Install in the second mounting hole**

## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole


## Operation instructions :

Use 2 bolts M8×40 to connect the rear backrest support packing ASSY and the rear plate packing ASSY to the second mounting hole from front to back (unfastening).

## Tools:

1. Sleeve head (10mm)

# 4. Install Pedal Packing ASSY

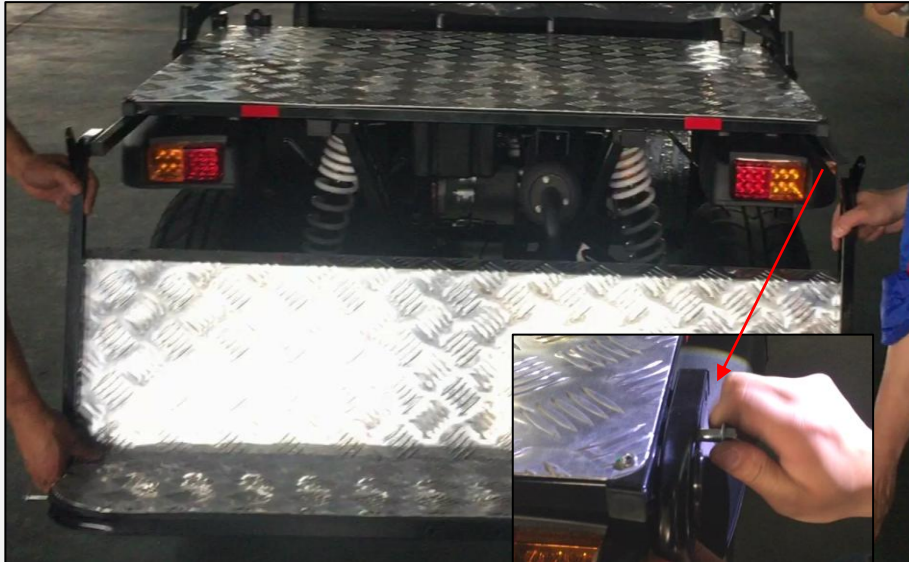

## Operation instructions :

1. Use 2 M8×40 bolts to connect the pedal packing ASSY with the rear plate packing ASSY (unfastening).


## Tools:

1. Sleeve head (10mm)

## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole

# 5. Install Support Connecting Tube ASSY

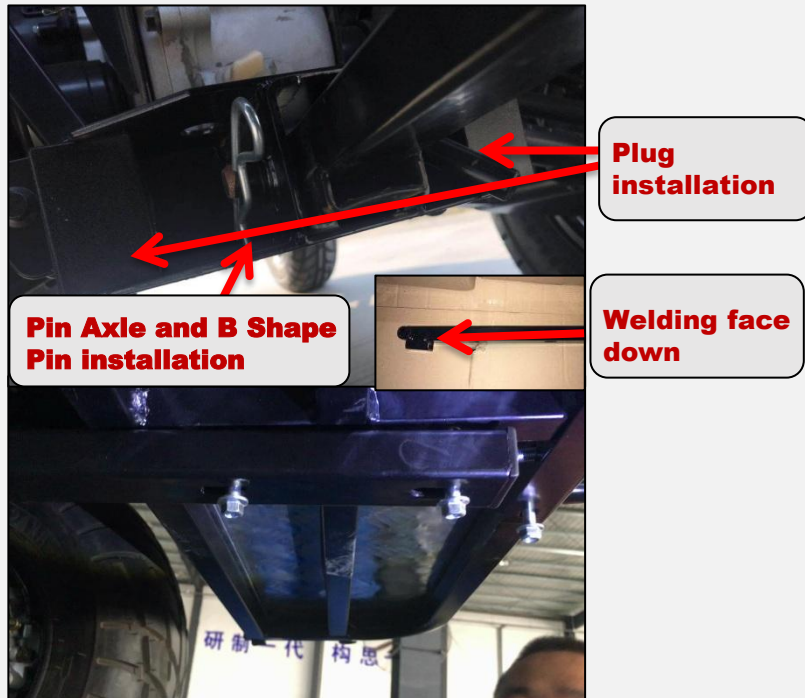

## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole
3. Weld facing down when support connection pipe is installed

## Operation instructions :


1. Take out No. 11 standard parts bag and knock the plug of the frame into the rear bottom of the frame.
2. Take out the No.13 standard parts bag and fix the support connecting tube ASSY with the frame with 1 Pin Axle and 2 B Shape Pin.
3. Take out No. 12 standard parts bag and connect the support connecting tube ASSY with 2 M8×40 bolts. (unfastening).

## Tools:

1. The hammer
2. Sleeve head (10mm)



# 6. Install Foldable Plate Packing ASSY

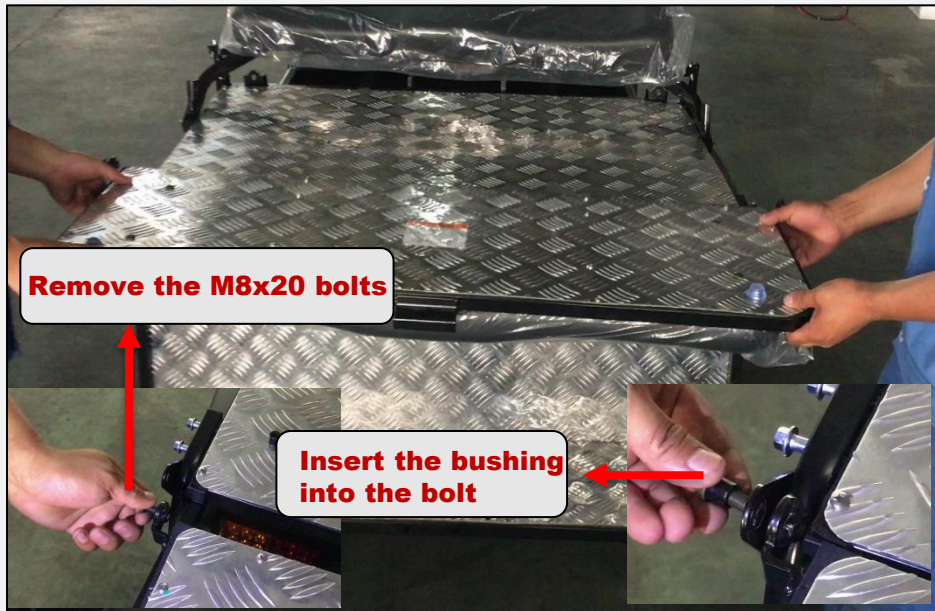

## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole

## Operation instructions :

1. Take out the No.13 standard parts bag, use 2 M8×20 bolts and 2 bushing, and connect the foldable plate packing ASSY with the rear plate packing ASSY (unfastening).

## Tools:

1. Sleeve head (10mm)

# 7. Install Handrail Pipe



## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole


## Operation instructions :

1. Connect the handrail pipe with the rear plate assembly and the rear plate packing ASSY (unfastening) by 8 M8 x 40 bolts.

## Tools:

1. Sleeve head (10mm)

# 8. Install Middle Handrail

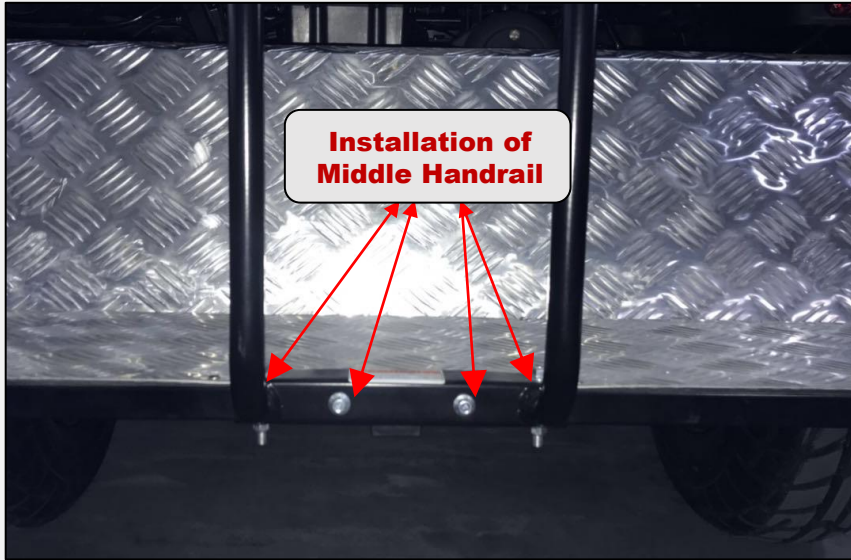

## Matters Need Attention:

1. Do not scratch parts
2. The bolt must be smoothly assembled into the mounting hole

## Operation instructions :

1. Take out No. 12 standard parts bag, and use 4 M8 x 50 bolts and 4 M8 nuts to connect the middle handrail with the pedal packing ASSY and tighten it.

## Tools:

1. Sleeve head (10mm)
2. Wrench (12mm)

# 9. Tighten the Bolts



## Matters Need Attention:

1. Do not scratch parts

## Operation instructions :

1. Tighten all loose bolts (16 in total)

## Tools:

1. Sleeve head (10mm)

# 10. Install belts



**Bolt head outward**

**Seat belt buckle installation**

## **Matters Need Attention:**

- 1. Check the seat belt retractor, pull out the belt and release it, the belt should be able to rebound quickly.**
- 2. Pay attention to the direction of the bolt during installation, and the head of the retractor mounting bolt should be outward**

## **Operation instructions :**

1. Take out the belt and fix the belt retractors on the installation points on both sides of the rear backrest support packing ASSY.
2. Install the belt buckles to the rear mounting point of the seat cushion.

## **Tools:**

1. A wrench (17mm)
2. Sleeve head (14mm, 17mm)

**THANK YOU  
FOR YOUR SUPPORT!**