



## **WORM IT ALL**



## **ASSEMBLY INSTRUCTIONS**

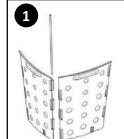

Put two boards side-byside, slide rod into the slots between the boards.

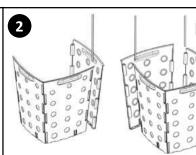

Repeat step 1 for the 3<sup>rd</sup> & 4<sup>th</sup> boards.

Slide bottom board down to the bottom until you hear a "click" sound.

Put the lid, and you are done!
It is that simple.

