

## CONTENTS



Side Panel  
x8



Corner Panel  
x4



Cap, Bolt, Washer  
Set x24




Rubber Edging  
Strip x1



Hand wrench  
x1

## CONFIGURATION

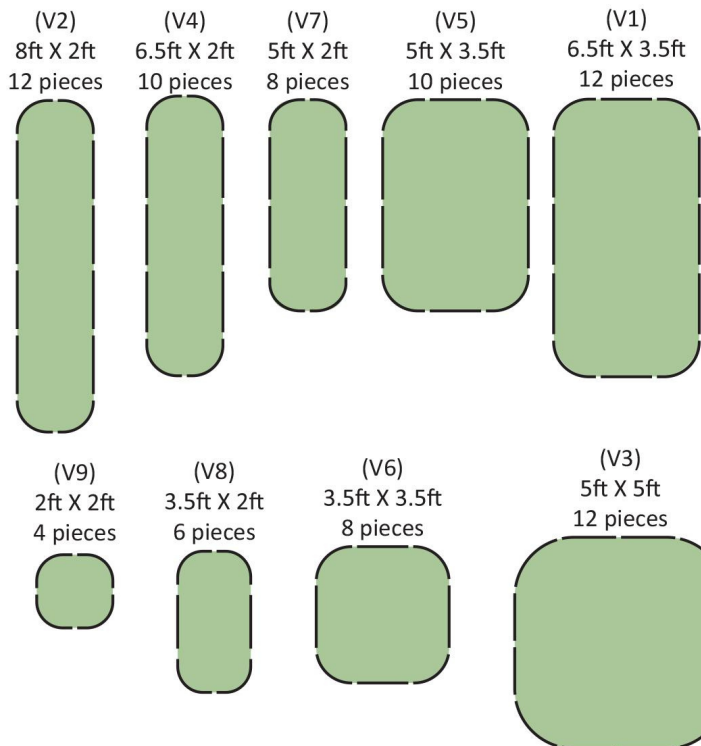

### Configuration Cubic Yards

V1	0.53
V2	0.37
V3	0.58
V4	0.30
V5	0.40
V6	0.28
V7	0.22
V8	0.15
V9	0.08


# ASSEMBLY GUIDE

**Caution:** Metal panels have sharp edges and may cause injury. Using protective gear (gloves, closed toed shoes, etc.) is recommended.


1. Lay in desired configuration on a flat surface (Be mindful that paint may scratch if laid on rough surfaces).



2. Loosely, assemble all straight panels with the bolt, washer and nut. Use the hand wrench to tighten.

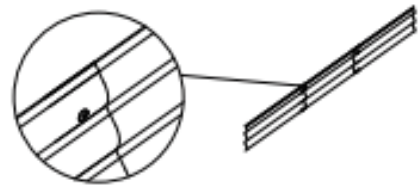

3. Attach corner panels on the outside of the straight panels and tighten all nuts.

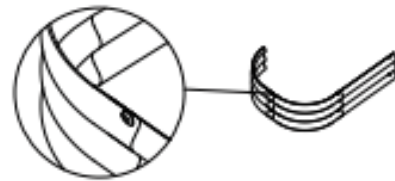

4. Push on rubber edging to the top edge of the box and cut off remainder.

