

300001241/300001245
 300001512/300001513
 300001367/300001368 (Sandbox Canopy/Cover)




SANDBOX

SQUARE


SKU# 300001367 COMBO KIT CONTAINS:

- Composite timbers 4' x 4
- Brackets x 8
- **Stakes x 4
- Plugs x 16
- Caps x 4
- Sandbox Canopy/Cover x 1
- Telescoping Poles x 4

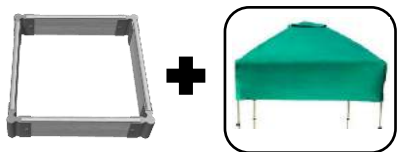


SKU# 300001368 COMBO KIT CONTAINS:

- Composite timbers 4' x 8
- Brackets x 16
- **Stakes x 8
- Plugs x 32
- Caps x 4
- Sandbox Canopy/Cover x 1
- Telescoping Poles x 4

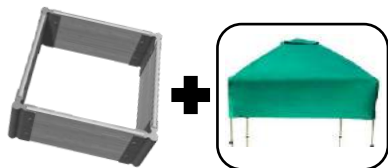


SKU# 300001512 | 300001513 KIT CONTAINS:

- Composite timbers 4' x 8
- Brackets x 16
- **Stakes x 8
- Plugs x 32
- Caps x 4
- Sandbox Canopy/Cover x 1

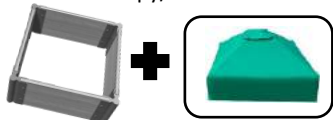


SKU# 300001241 | 300001245 KIT CONTAINS:

- Composite timbers 4' x 8
- Brackets x 16
- **Stakes x 8
- Plugs x 32
- Caps x 4

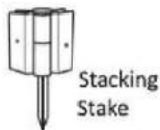

**NOTE

Stacking stakes can be used on all levels and when creating additional levels. **ONLY** Stacking Stakes can stack!

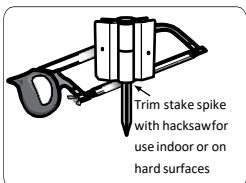

FOR INDOOR & HARD SURFACE:

If you plan to assemble sandbox on a hard surface, use hacksaw to remove the spike of each stake. Use these cut down stakes for the base level only of your sandbox.

Customer Service: 1800-914-9835 | support@frameitall.com

© Frame It All. All Rights Reserved.

ASSEMBLY INSTRUCTIONS




Layout your timbers along the borderline and connect each timber together by inserting the top of the stake through the bracket loops with the stake pointing to the sky. This enables you to freely position your border to get your desired location.

STEP 1:

Assemble the timbers by sliding one end of timber into channel end of one of the brackets. Use plugs to cover the holes on both sides to lock the bracket in place.



Repeat this process on the opposite end of the timber flipping the bracket in the opposite direction (see image). **Repeat for all timbers.**



STEP 2:

Layout the base level of your raised garden in a straight square shape, using 4 timbers. Insert stake through the hole of the bracket and into each of the corners to lock all sides in place.



STEP 2a: For one level, add caps to each of the top corner joints to finish off the raised garden.

HAPPY GARDENING!




ASSEMBLY INSTRUCTIONS – For Product with Two Levels

STEP 3:

For the second level, use 4 timbers and the stacking stakes. Insert one stake through the brackets into the hole on top of the stake beneath it to lock the second level in place.

Lastly, add the caps to each of the top corner joint.

How the Joints Work

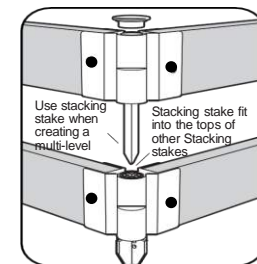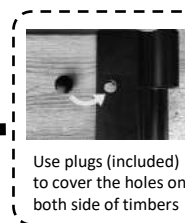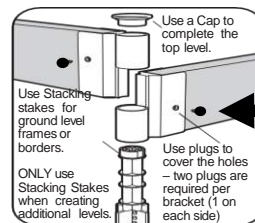


ASSEMBLY INSTRUCTIONS – Telescoping Canopy/Cover

FORMING THE CANOPY DOME

STEP 1: In an open area, position the canopy so that the inside of the canopy (*with canopy supports showing*) is facing up.


STEP 2: Manually expands the canopy spokes evenly in each direction as much as possible.

STEP 3: Using your foot, step on the center hub of the canopy to invert and lock the supports in place. The canopy will ‘flip’ into its proper convex shape and become stable – *refer to image below.*

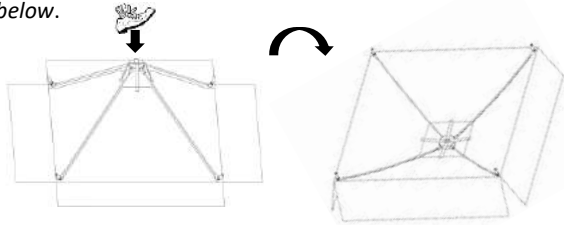


INSTALLING THE TELESCOPING SUPPORT POLES (for


STEP 1: Unlock the clamps on the bottom two of the telescoping pole and extend it to its full length. Lock the clamps to hold it in place.



STEP 2: Remove existing caps from stakes and replace it with caps that have holes to receive the poles.

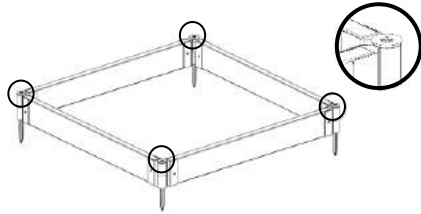

STEP 3: Insert widest end of the pole into recess of staking joint stakes – *repeat with remaining poles.*

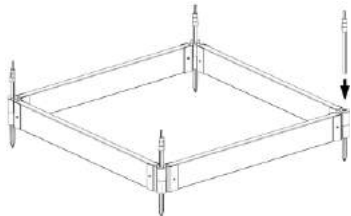

Customer Service: 1800-914-9835 |

support@frameitall.com

© Frame It All. All Rights Reserved.

ASSEMBLY INSTRUCTIONS – Telescoping Canopy/Cover

ATTACHING THE CANOPY (NOTE: 2-person job to make it much easier)

STEP 1: Position canopy top so that canopy connectors are aligned with support poles.



STEP 2: Insert support pole into canopy connector cap (*refer to image on left*). Repeat with remaining poles.

STEP 3: Extend the top telescoping to its full length.

STEP 4: Pull canopy flaps together at each corner and affix with Velcro straps.

TO CONVERT TO SANDBOX COVER

Release the highest clamp on each pole. Canopy will now slide down to the next set of levels. Lock 1st lever, then repeat with each additional level of clamps until the poles have fully telescoped into each other.


TO CONVERT BACK TO CANOPY

Release each bottom set of levers, then extend and lock 1st level of telescoping poles. Repeat with each additional level.

STORING THE CANOPY

STEP 1: Remove canopy from telescoping poles. Place on ground right side up (as it came off the support poles).

STEP 2: Using your foot, step on the central hub to invert and unlock the canopy supports.

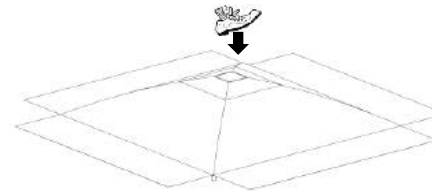

STEP 3: Compress canopy sides together to close.

