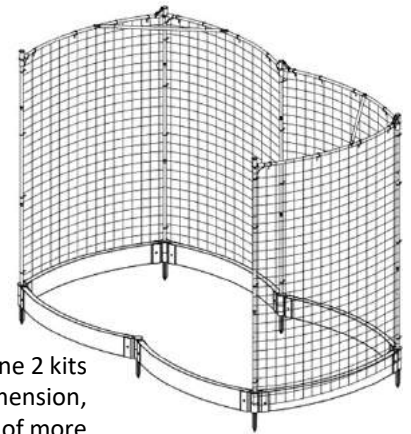


Each kit will include 2 x 4' curved panels, frame, netting and all connectors

VEGGIE WALL

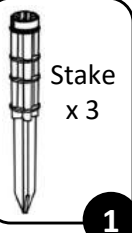
Stack & **Extend

- Used with *curved raised bed




**Extendable – combine 2 kits to expand to any dimension, requires 2 kits of more


KIT CONTAINS:

- 

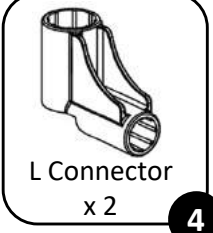
Stake x 3

1
- **Use Stake if you install veggie wall directly in the ground*
- 

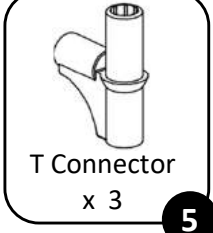
Adapter Caps x 3

2
- 

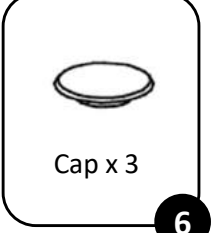
Cotter Pin x 2

3
- 

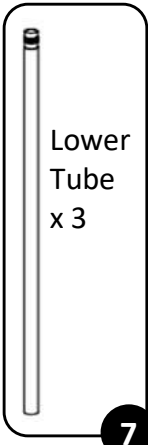
L Connector x 2

4
- 

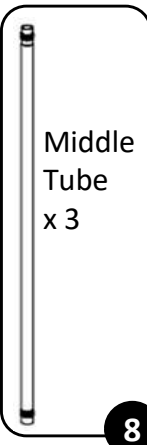
T Connector x 3

5
- 

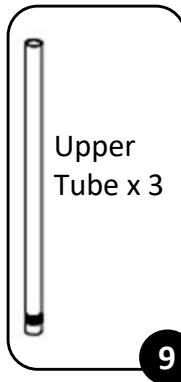
Cap x 3

6
- 

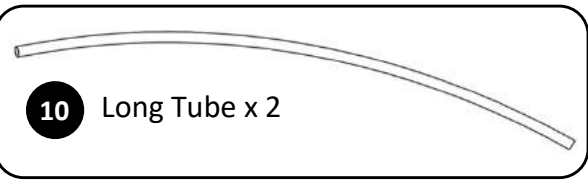
Lower Tube x 3

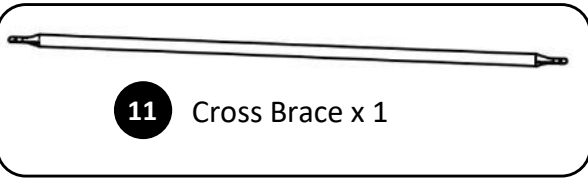
7
- 

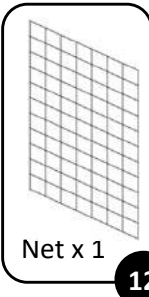
Middle Tube x 3

8
- 

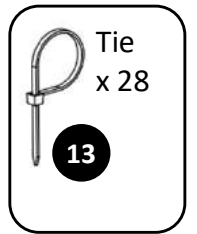
Upper Tube x 3

9
- 

10 Long Tube x 2
- 

11 Cross Brace x 1
- 

Net x 1

12
- 

Tie x 28

13

ASSEMBLY INSTRUCTIONS

STEP 1:

Screw the short upper tube **9** into the middle tube **8** and tighten. Screw lower tube **7** into the connected tubes **8** and **9**, tighten to complete one upright pole. Repeat to build the other two upright poles.

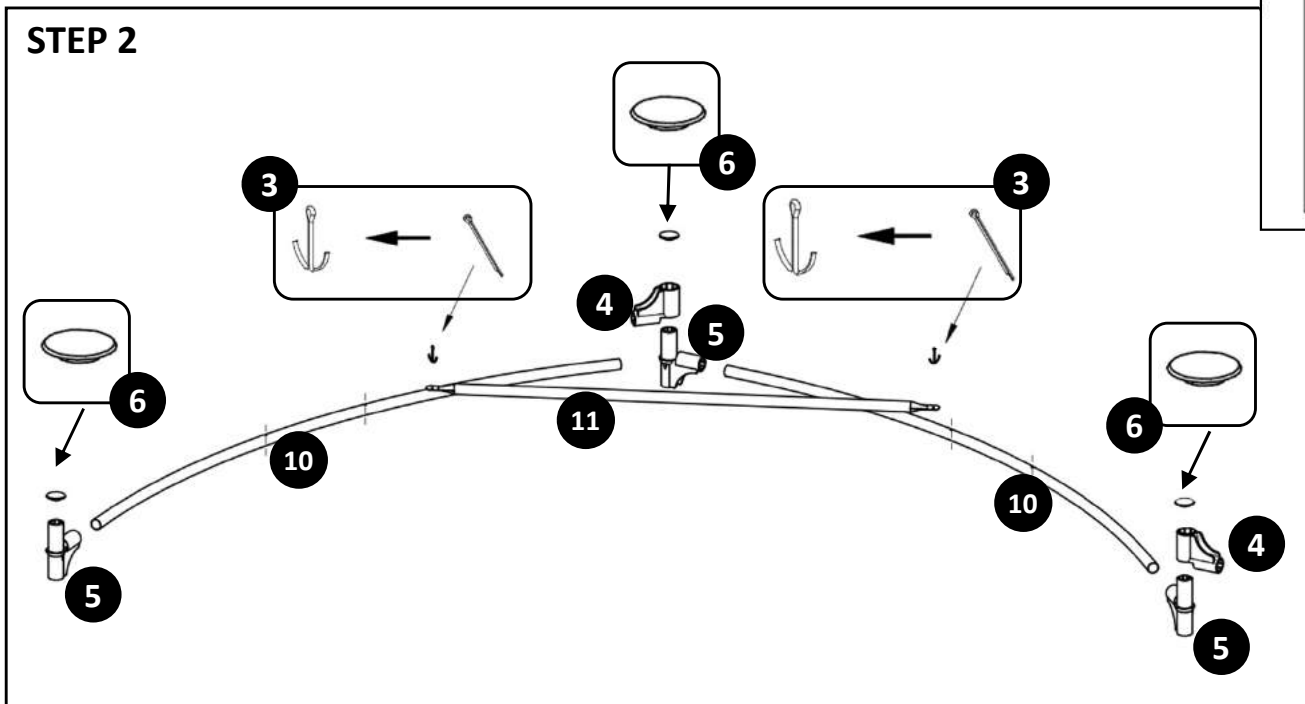
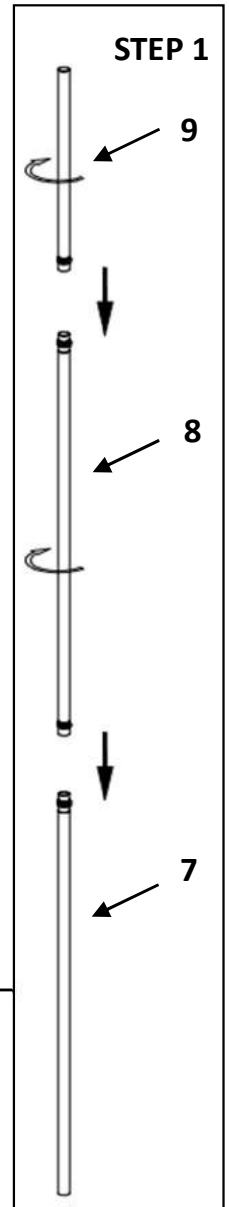
STEP 2:

Place T-connector **5** into one end of each horizontal tube **10**. To connect the two horizontal poles, join T-connector **5** and L-connector **4** to produce the corner hinge. Place the two ends of horizontal pole **10** without connectors into this connection hinge.

Place this assembly onto ground to attach the cross brace **11**. Make sure the open connector holes are facing down. Position cross brace **11** over the pre-drilled holes on both horizontal tubes **10**.

Connect brace **11** onto horizontal tube **10** by pushing the cotter pin **3** through the cross brace and pre-drilled holes in the tubes, then bend the pins to create snug fit.

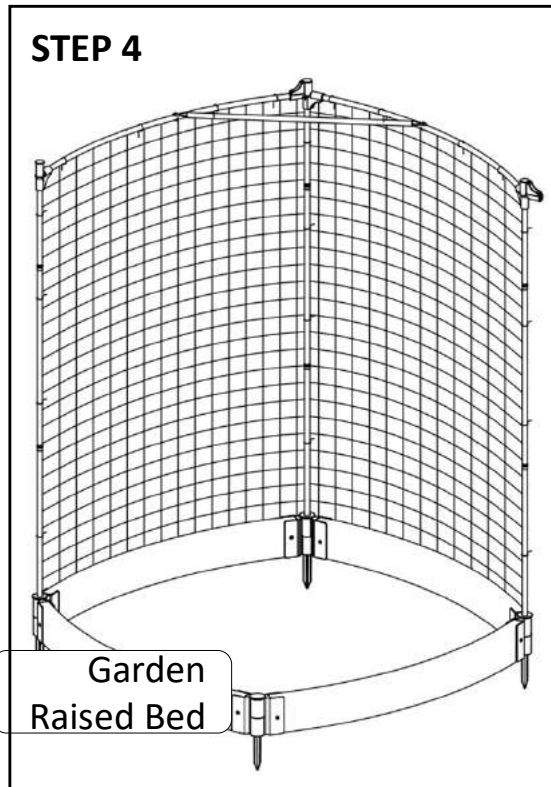
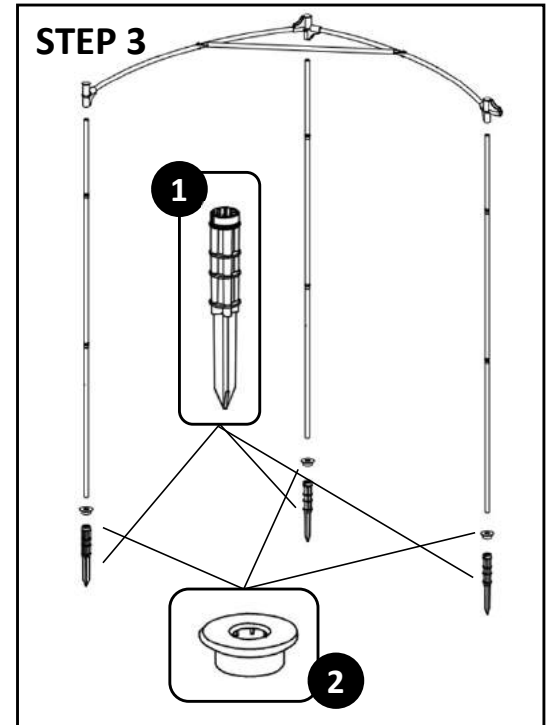
Place the adapter cap **6** on each connection point.



ASSEMBLY INSTRUCTIONS

STEP 3:

Take the entire assembled top frame and insert on top of the 3 vertical poles. If you are placing this into an already built raised garden utilize the stake cover hole **2** and slide the vertical poles through the stake cover into the stake (see STEP 4 Image)



STEP 4:

Open the green net **12** completely. Use cable ties to affix the net onto the frame, making sure to equally space the cable ties along the tubes. Start at the top affixing 5 ties to each of the horizontal tubes and then affixing 6 ties to each of vertical tubes.

OPTIONAL

To attach a second veggie wall to the same garden bed, attach a cap, one L-connector **4** to a T-connector **5** as show in the diagram on the right. When you do this, one vertical tube is not needed.

