

IN+HOUSE

# ASSEMBLY GUIDE


**DESKING** — ALBION FENCE



hello@inhouse.furniture  
+44 (0)20 3780 0710  
www.inhouse.furniture

# Albion fence

## Tool required

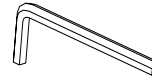


4/5mm  
allen key



Pozi  
screw driver



Rubber  
mallet

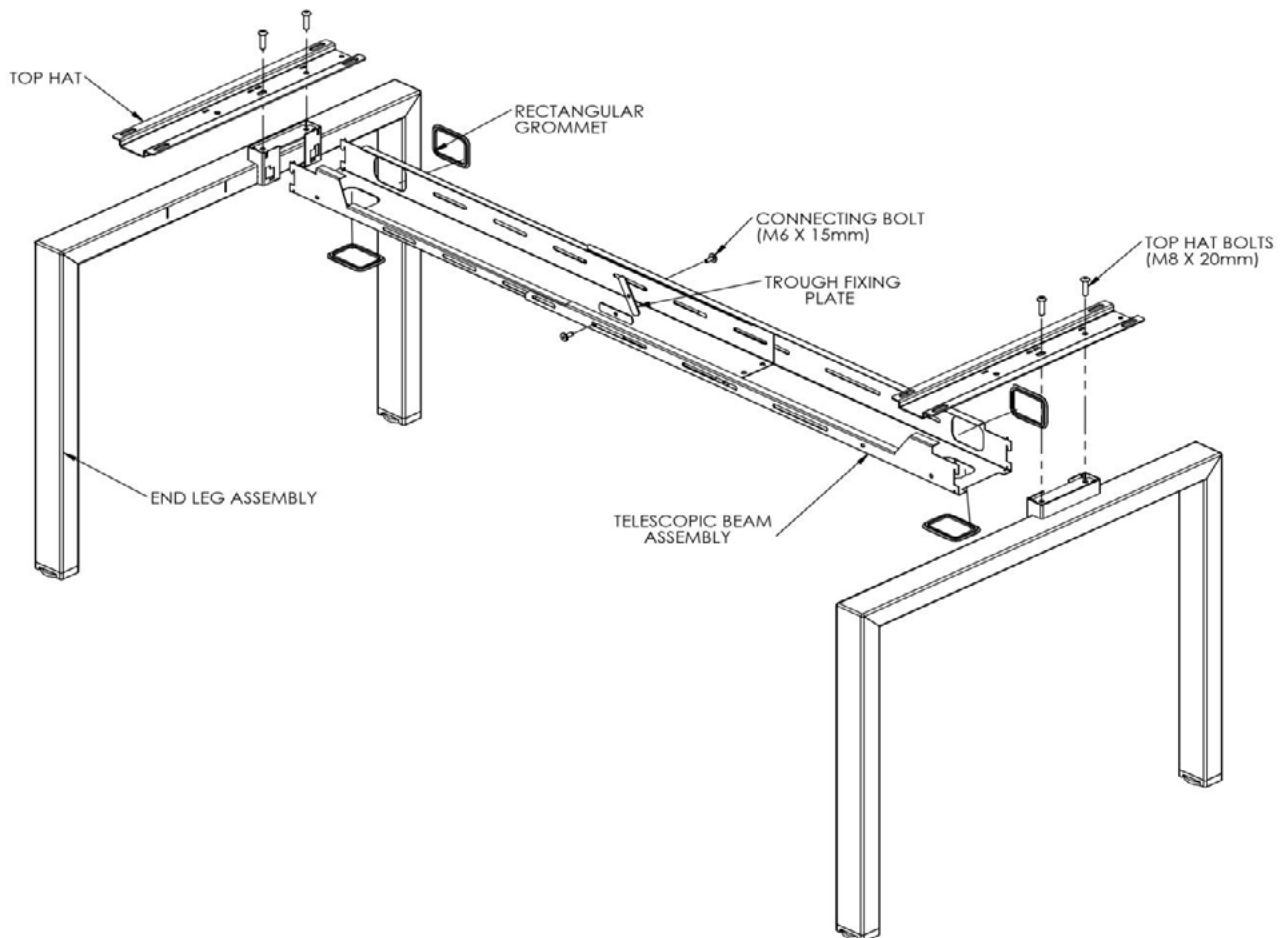

- Insert all cable grommets and feet.
- Insert one end of telescopic beam into end leg (do not fix top hats) - at this point a rubber mallet may be required to knock beam into position (take care not to damage beam).
- Repeat with other end leg.
- Secure top hats with bolts provided and tighten.
- Slide beams to approx distance required to suit top length.
- Hold trough fixing plates on inside of trough and screw in connecting bolts through slots provided and tighten.
- Use fixings supplied with top hats to fix top.

# Albion fence

If you've been supplied a top with multiple inserts (quick ship option), you will be using the highlighted inserts for this framework.

