



HOW TO HANG YOUR HEADBOARD

Your package includes 1 headboard, and 4 screws. You will need to grab a ruler/measuring tape, level, power drill and a pencil to get started.

STEP-BY-STEP


STEP 1: FIND PERFECT PLACEMENT

Grab a friend to help hold the headboard up to find the perfect placement.

We recommend hanging so the bottom of the headboard sits 2" above your mattress.

STEP 2: MARK HEADBOARD CENTER

After finding the perfect height, make sure the headboard is level. Then, mark the top center of each mounting bracket.

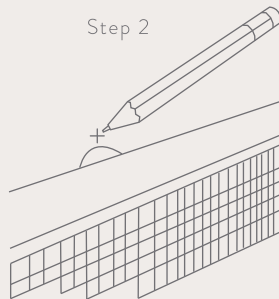

CONTINUED ON BACK OF CARD


STEP-BY-STEP CONTINUED

STEP 3: MARK DRILL HOLES

After removing the headboard, use the pencil mark guides to measure .5" below each mark. Then, make two more marks 19.75" directly below.

STEP 4: DRILL IN SCREWS

Drill the screws into the wall (be sure to use drywall anchors, if needed), leaving $\frac{1}{8}$ " between the wall and the bottom of the screw head. Make sure the keyhole bracket is positioned right-side up, with the circle at the bottom. Then, mount the headboard onto the wall using the keyhole brackets.

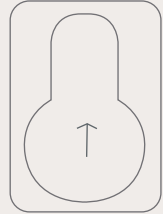

Keyhole Bracket
(right-side up)

THE CITIZENRY

Questions? We're here to help.

1.866.356.4284 // assistant@the-citizenry.com.