


1st STEP

METAL WALL BRACKET , LEVEL AND FIX WITH SIX SCREWS INTO SUITABLE WALL PLUGS

FLANGE ON TOP AND POINTING AWAY FROM WALL

NOTE - MAGNETS ARE HIGH POWERED AND MUST NOT BE BROUGHT INTO CONTACT WITH EACH OTHER

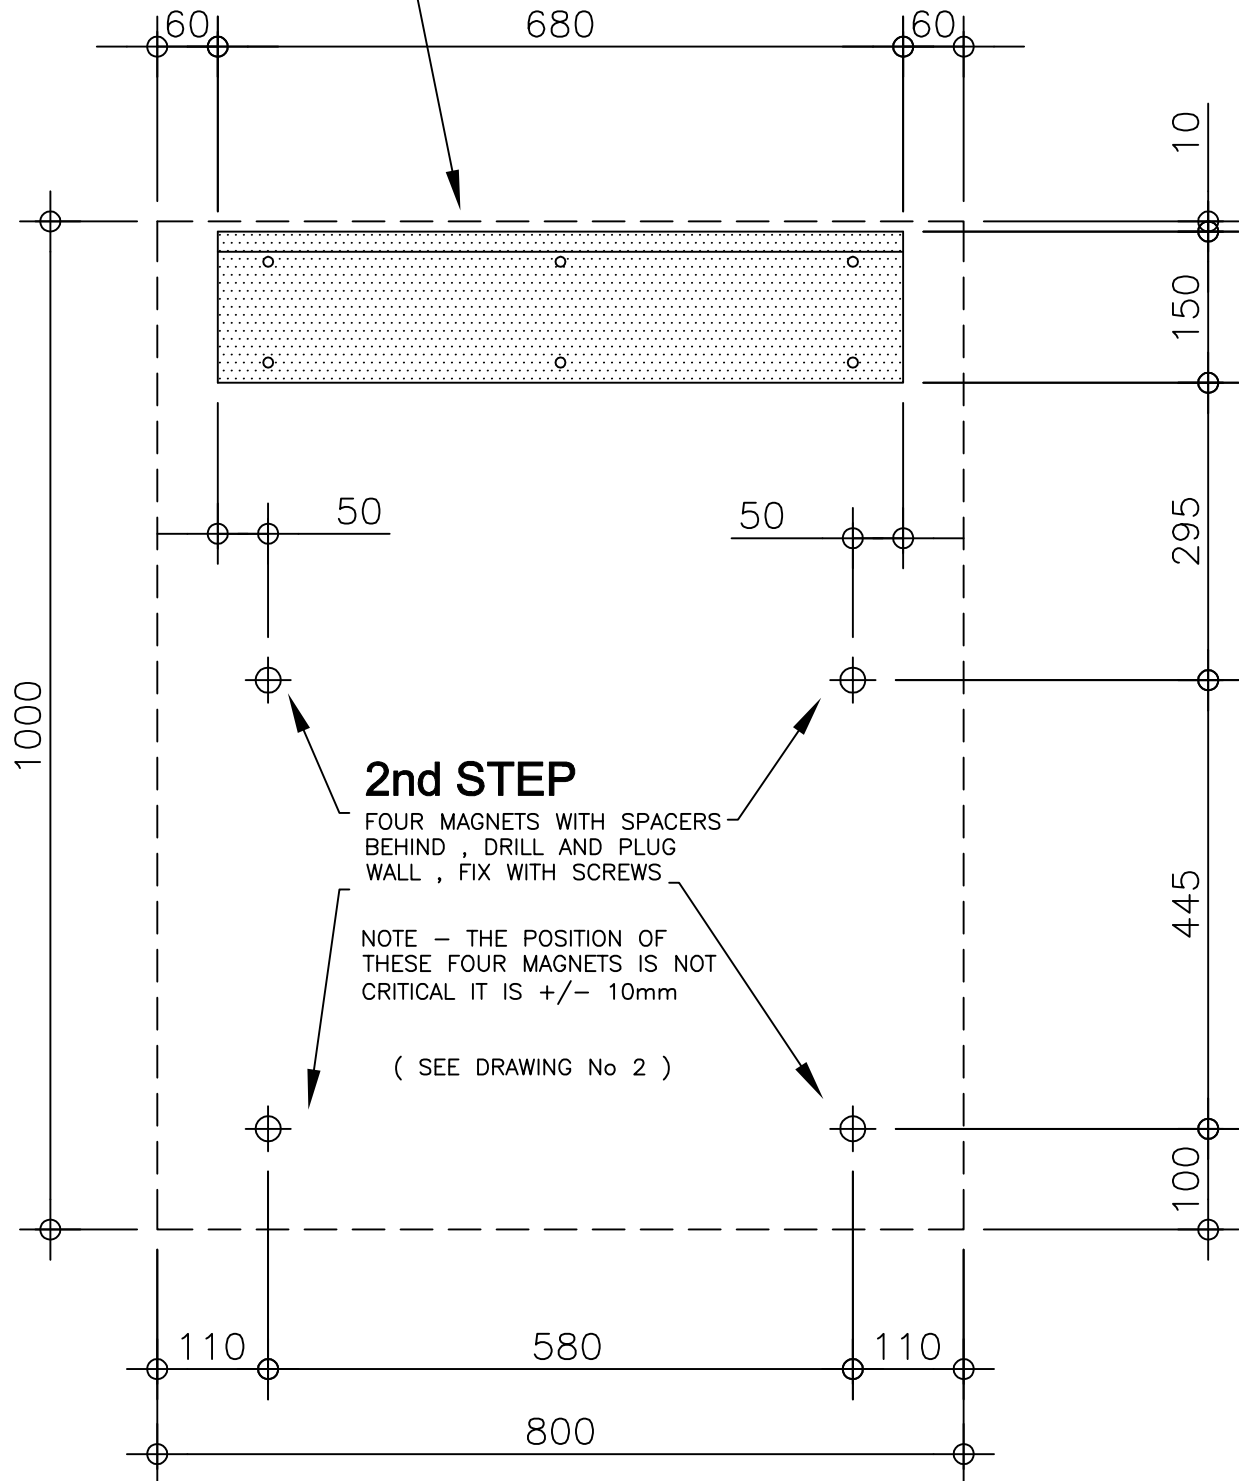


2nd STEP

FOUR MAGNETS WITH SPACERS BEHIND , DRILL AND PLUG WALL , FIX WITH SCREWS

NOTE - THE POSITION OF THESE FOUR MAGNETS IS NOT CRITICAL IT IS +/- 10mm

(SEE DRAWING No 2)

800mmW X 1000mmH

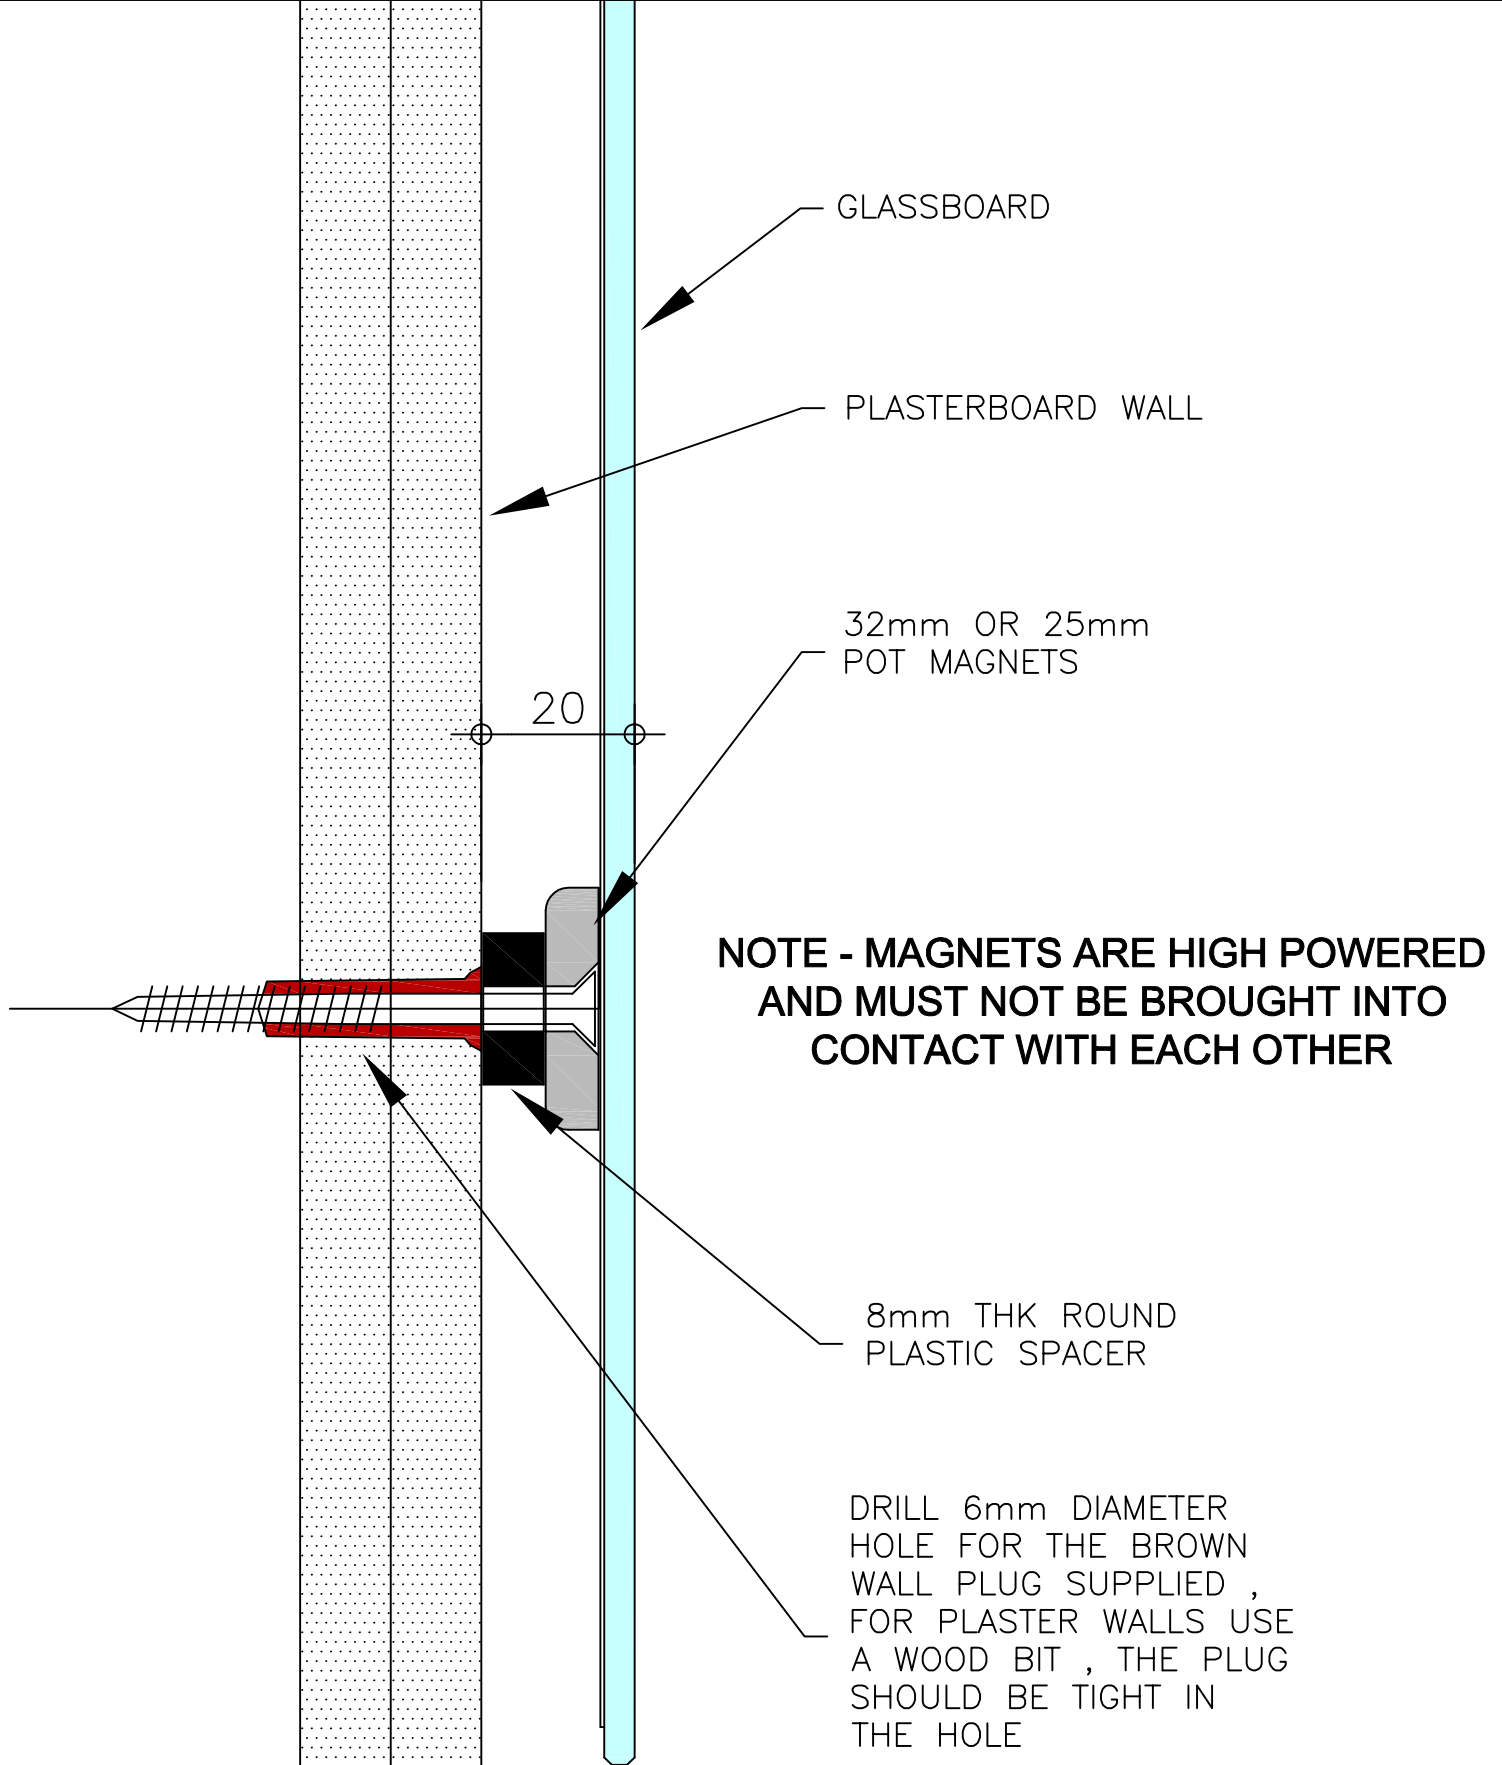

NOTE - this brown plug may not be suitable for all wall types

Onglass Products Ltd

Glass Boards Fitting Instructions - Drawing 2