


# 1st STEP

METAL WALL BRACKET , LEVEL  
AND FIX WITH SIX SCREWS INTO  
SUITABLE WALL PLUGS

FLANGE ON TOP AND POINTING  
AWAY FROM WALL

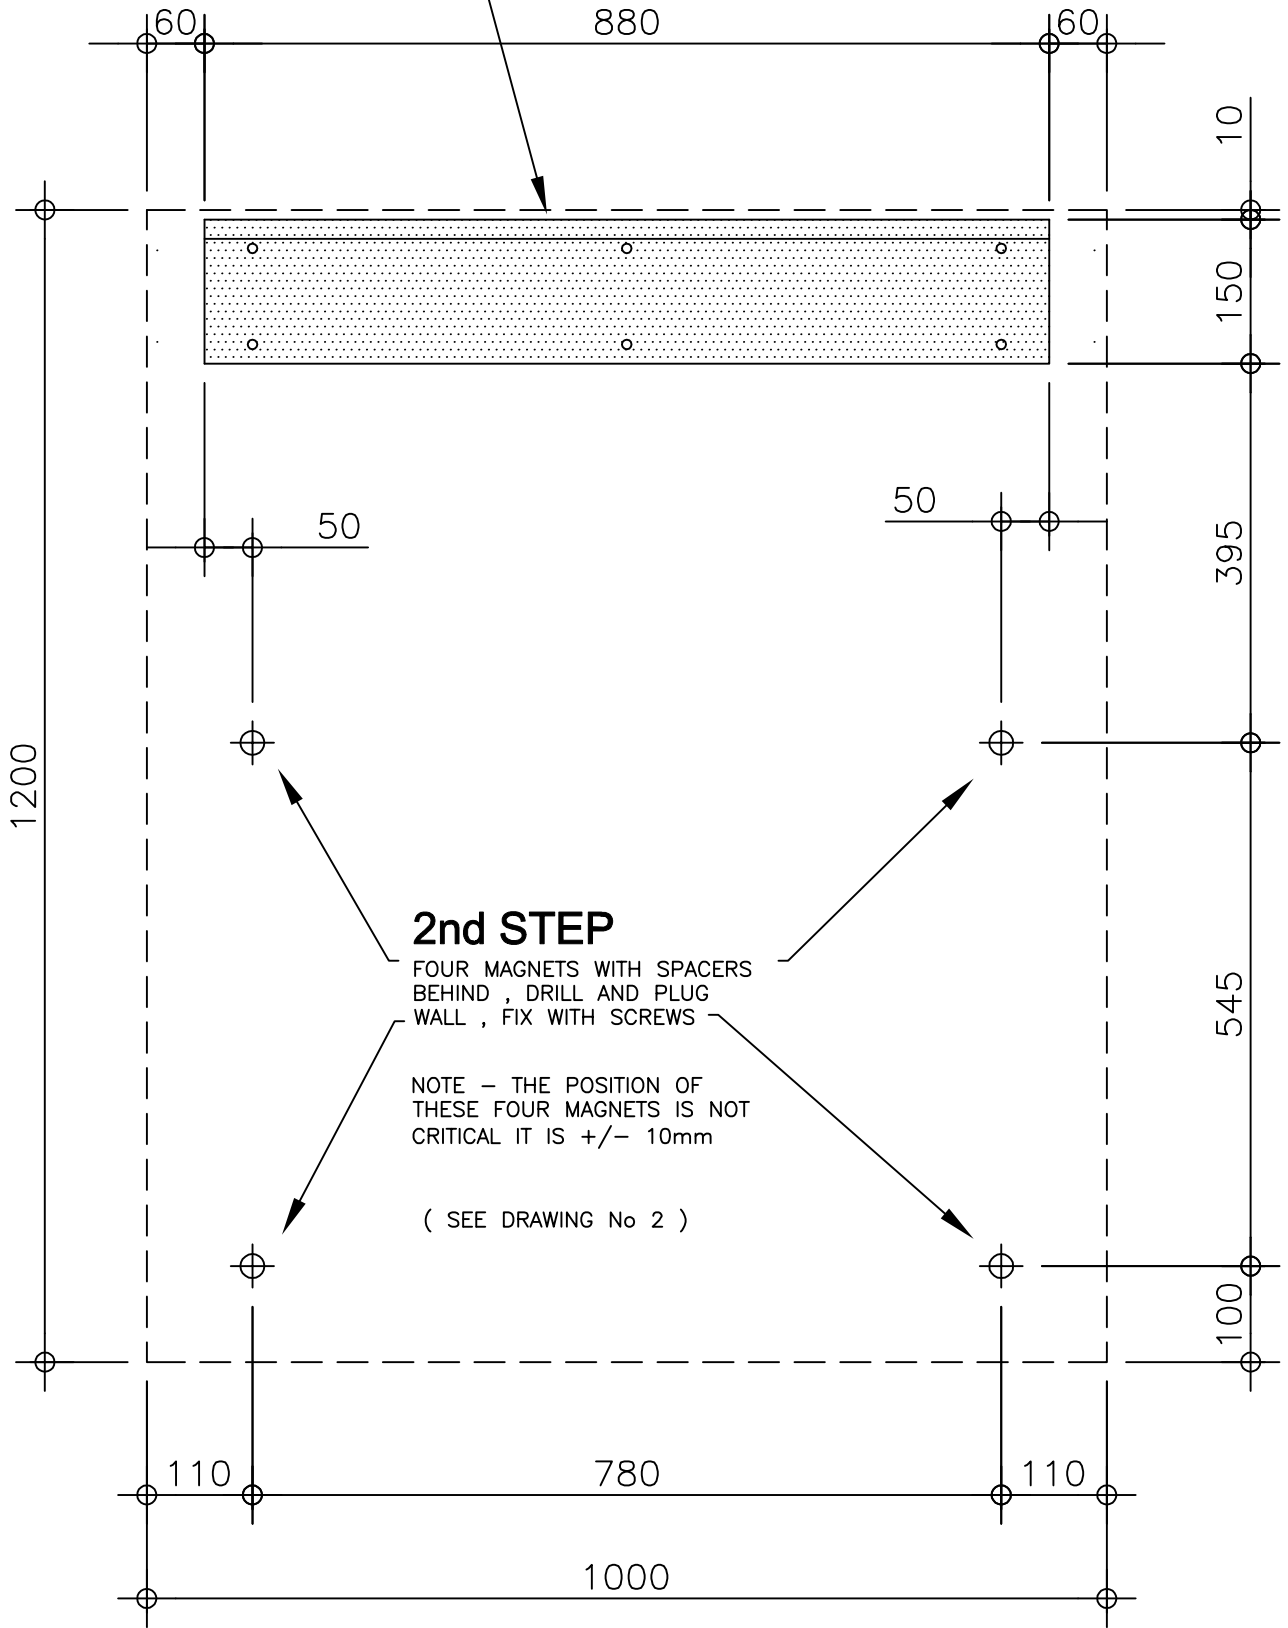


**1000mmW X 1200mmH**

**Onglass Products Ltd**

**Glass Boards Fitting Instructions - Drawing 1**

**FITTINGS D**

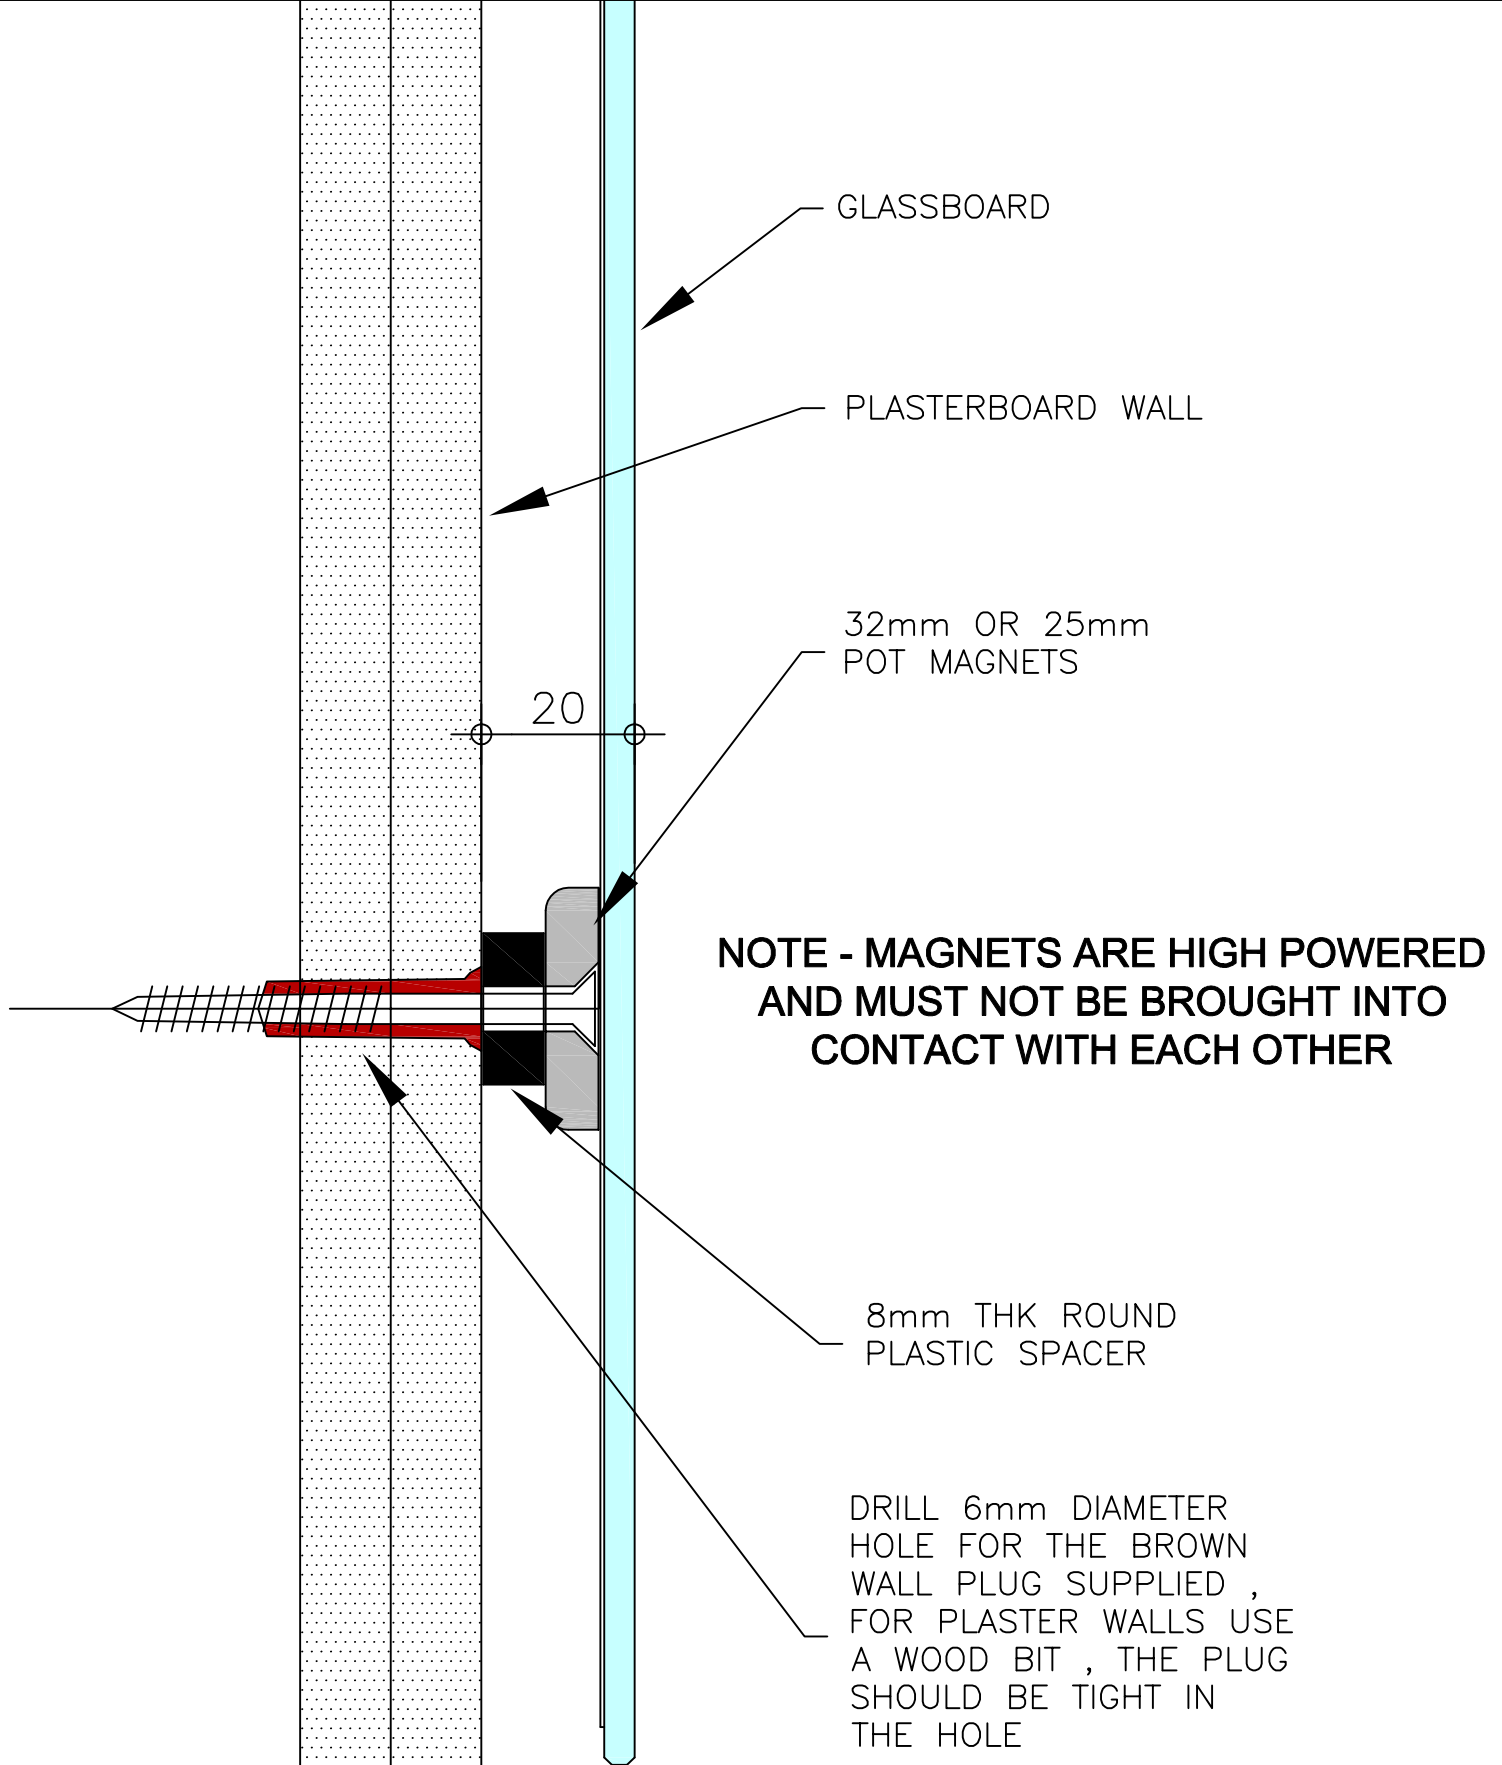

**NOTE - this brown plug may not be suitable  
for all wall types**

**Onglass Products Ltd**

**Glass Boards Fitting Instructions - Drawing 2**