



1st STEP
 METAL WALL BRACKET, LEVEL
 AND FIX WITH SIX SCREWS INTO
 SUITABLE WALL PLUGS
 FLANGE ON TOP AND POINTING
 AWAY FROM WALL

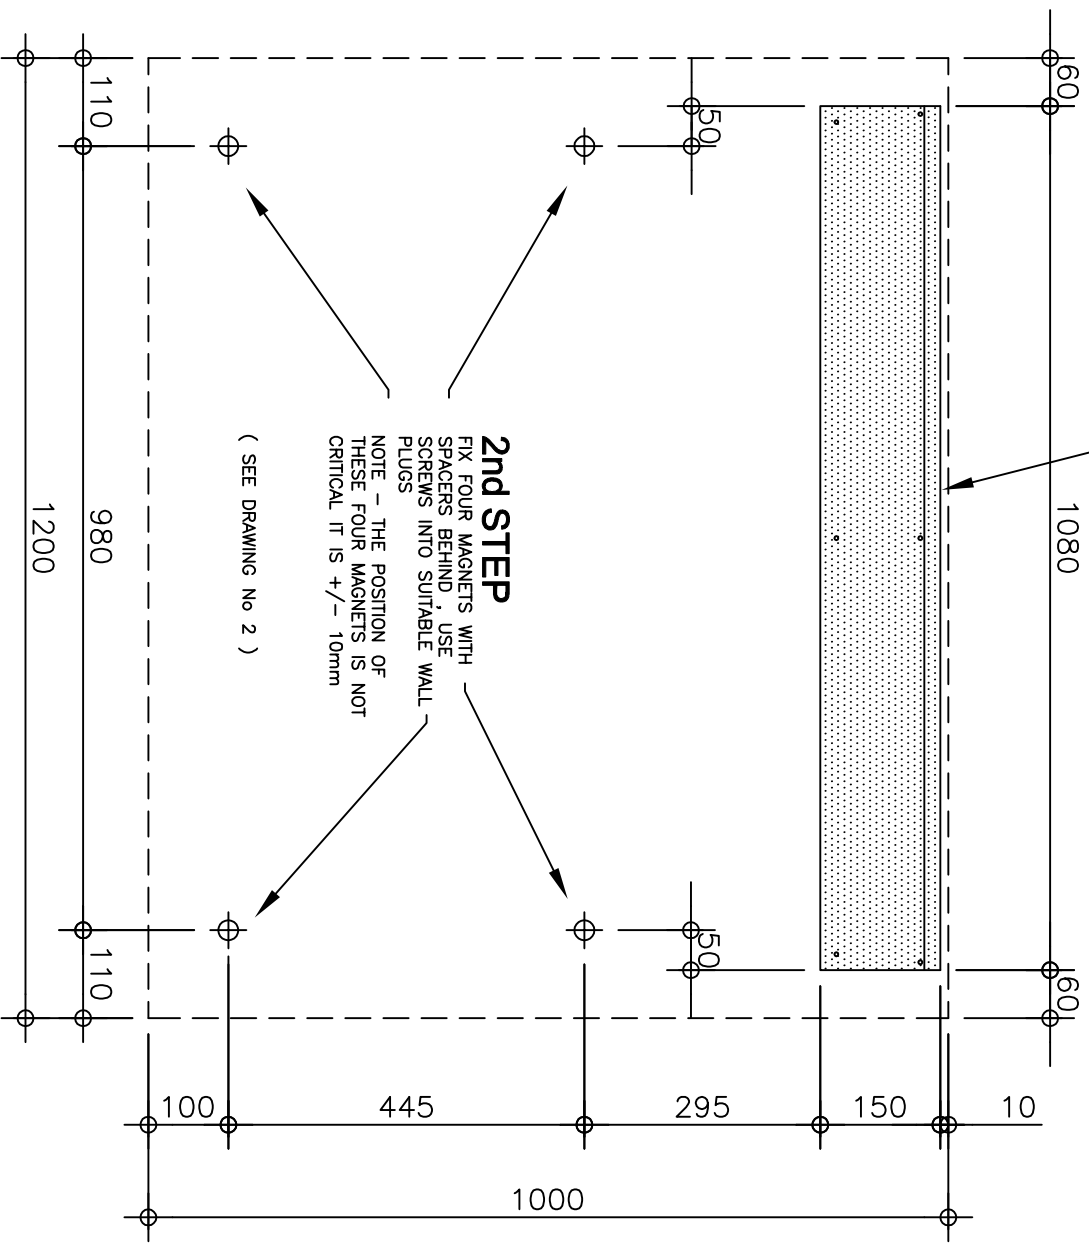

1200mmW X 1000mmH

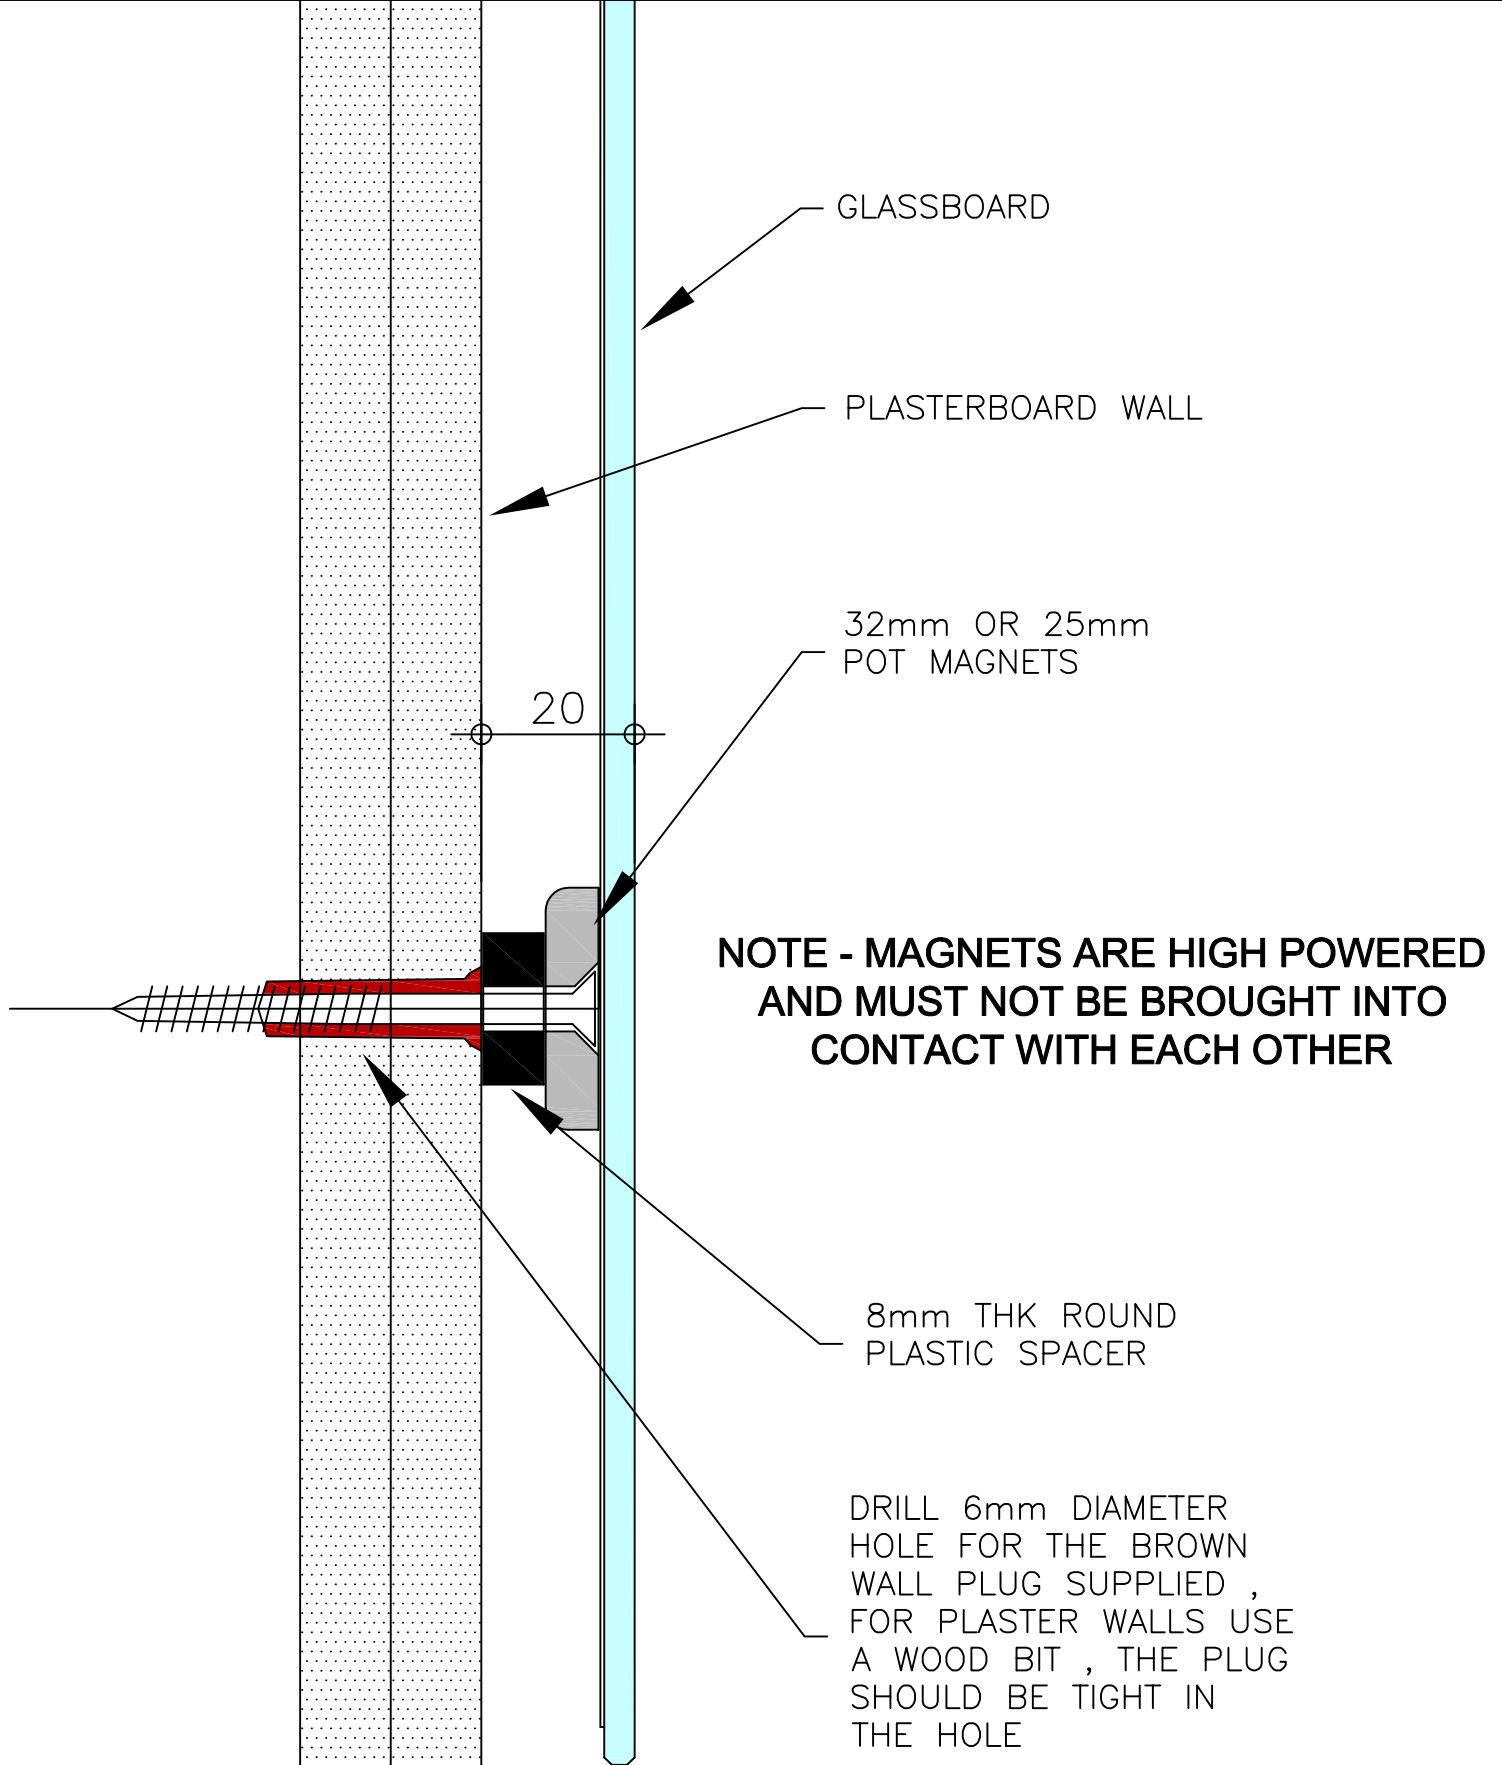

NOTE - this brown plug may not be suitable for all wall types

Onglass Products Ltd

Glass Boards Fitting Instructions - Drawing 2