


### 1st STEP

METAL WALL BRACKET, LEVEL AND FIX WITH SIX SCREWS INTO SUITABLE WALL PLUGS FLANGE ON TOP AND POINTING AWAY FROM WALL

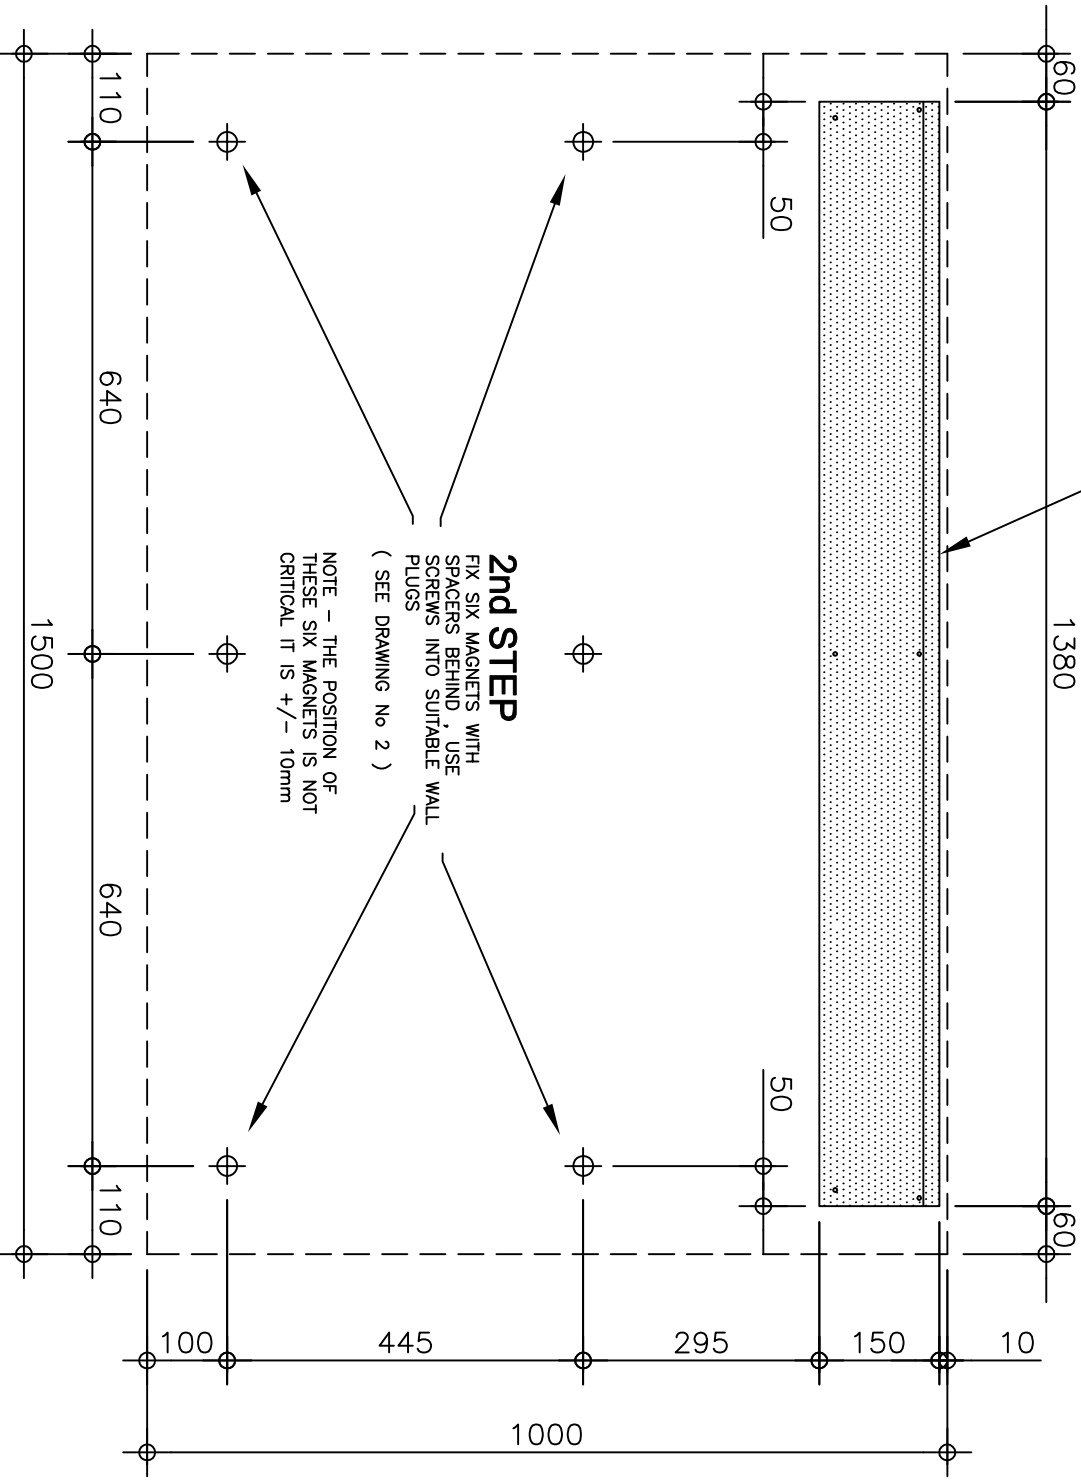


### 2nd STEP

FIX SIX MAGNETS WITH SPACERS BEHIND, USE SCREWS INTO SUITABLE WALL PLUGS ( SEE DRAWING No 2 )

NOTE - THE POSITION OF THESE SIX MAGNETS IS NOT CRITICAL IT IS +/- 10mm

# 1500mmW X 1000mmH

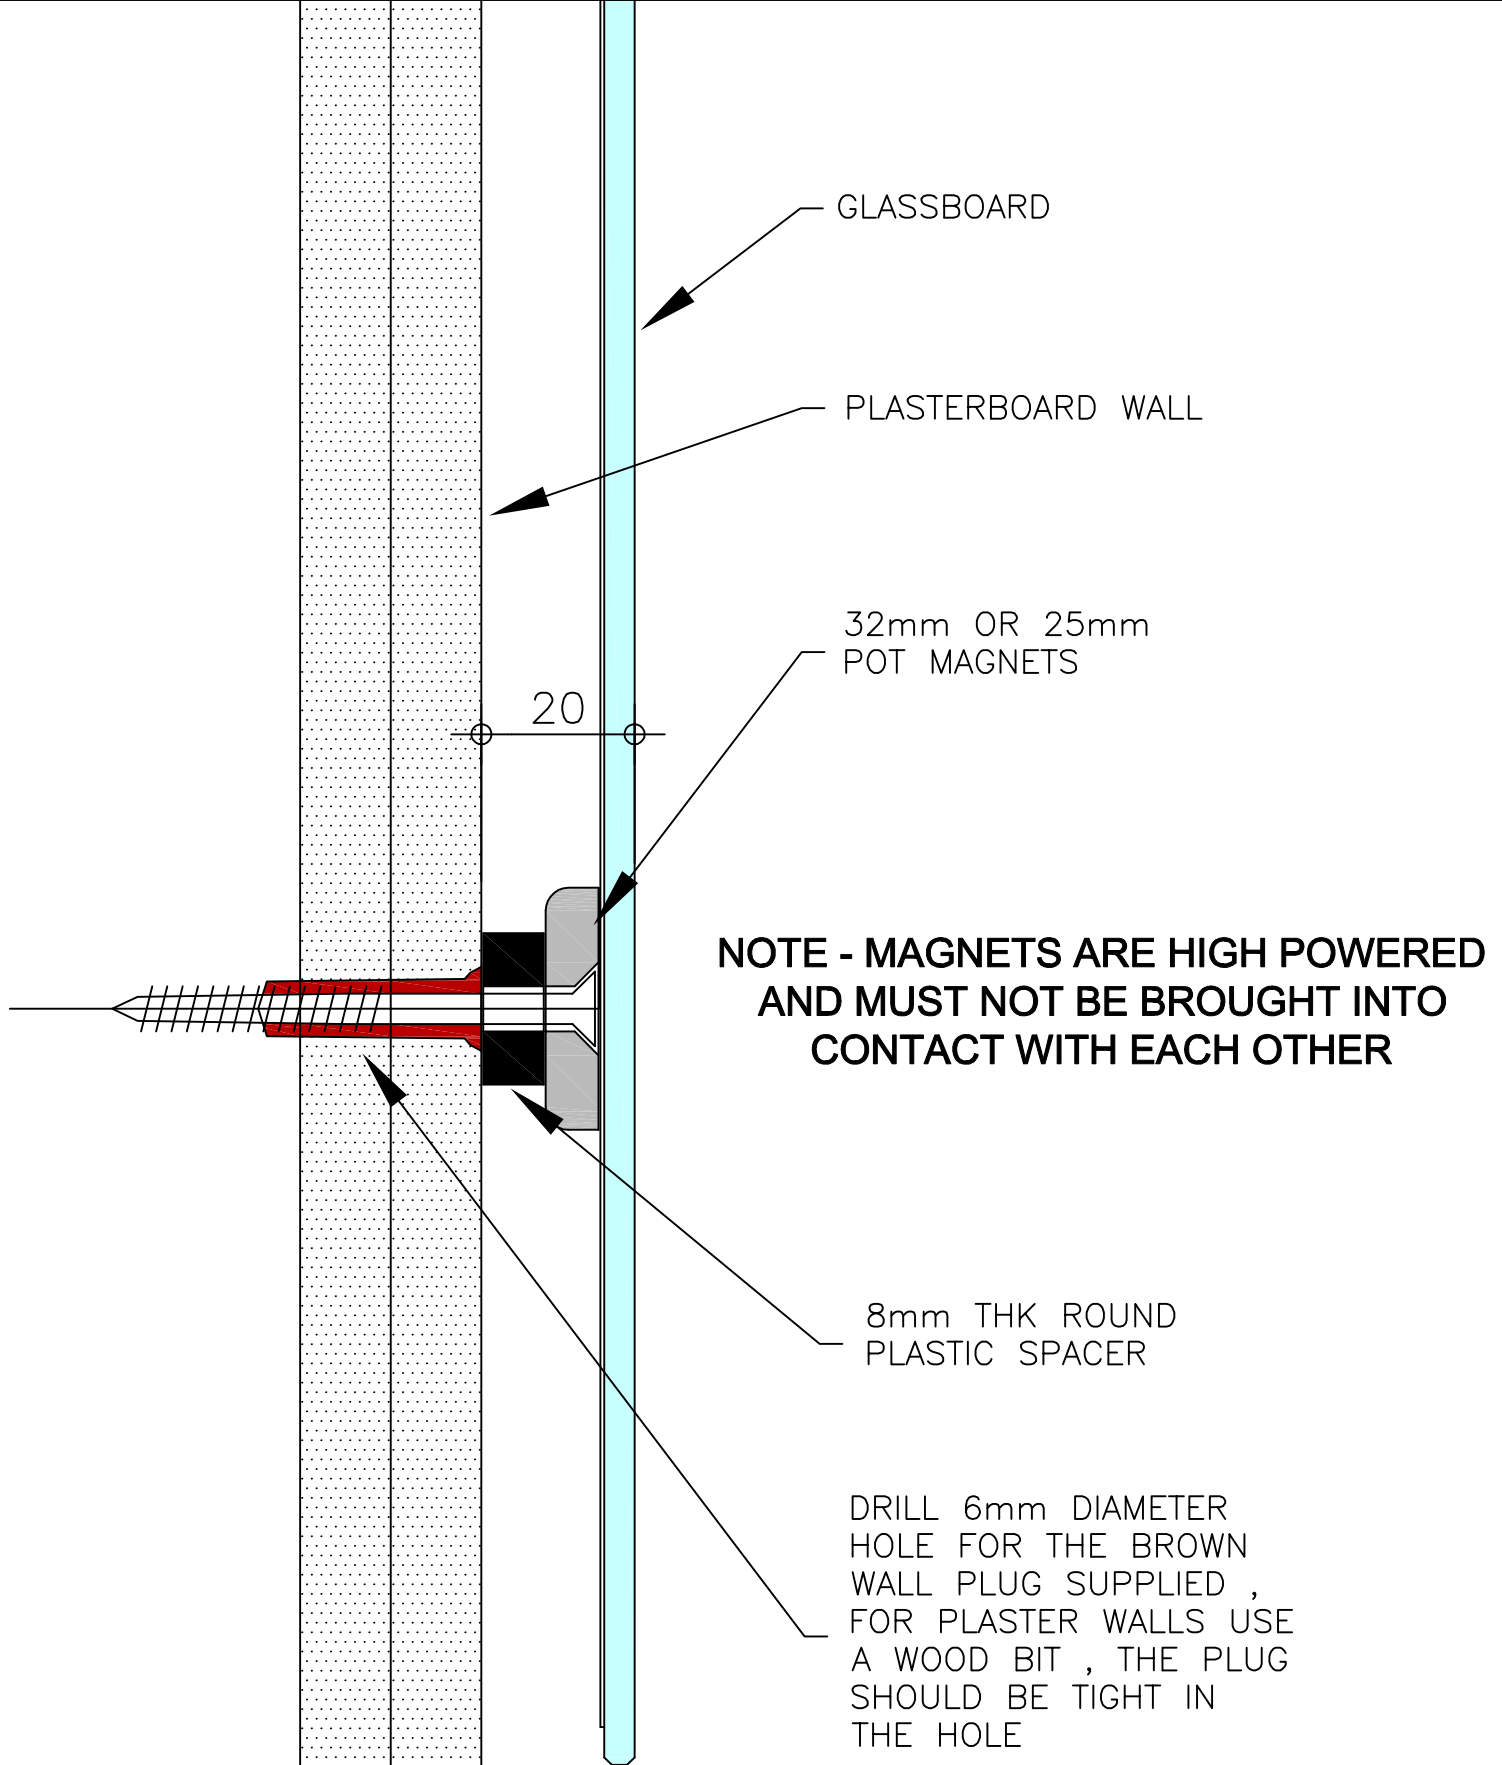

**NOTE - this brown plug may not be suitable  
for all wall types**

**Onglass Products Ltd**

**Glass Boards Fitting Instructions - Drawing 2**