


1) In your Polycom phone navigate the settings menu as follows:

Option 3 (settings) -> Option 1 (basic) -> Option 1 (preferences) -> Option 2 (analog mode [or hookswitch mode]). In this screen, select 'Jabra' mode.

- 2) Unplug the power cord from the headset base. Set the RHI /DHSG switch on the bottom of the base to "RHL"
- 3) Set the compatibility switch to "1"

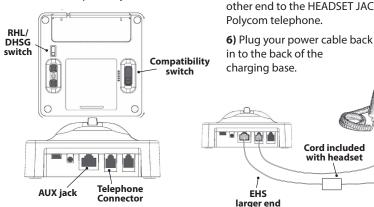

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Want more help? Call 1-800-432-3738 Mon-Fri 6:00-4:30 Pacific Time for free support!

Electronic Hookswitch Quick Start Guide

- 4) Connect the larger end of the Electronic Hookswitch (EHS) to the AUX jack on the back of the headset base. Connect the 5-pin end to the AUX jack on the back of the Polycom phone.
- 5) Take the cable that came with your headset and plug one end into the Telephone Connector jack on the back of the headset base. Connect the other end to the HFADSFT JACK of the

