




DESIGN


Freestanding Christmas Tree with Ornaments





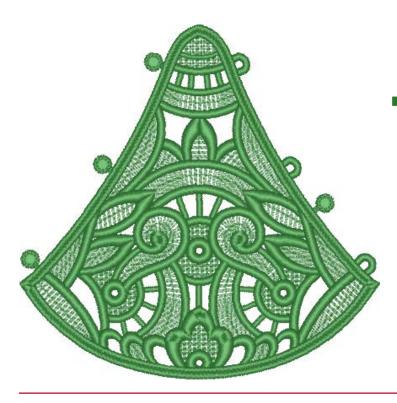

12757-01 Branches 1 FSL

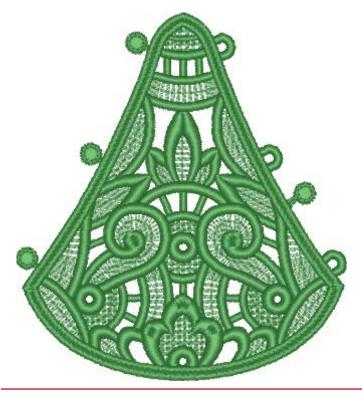

12757-02 Branches 2 FSL

 Size Inches:
 Size mm:
 Stitch Count:


 3.44 X 3.83 in.
 87.38 X 97.28 mm
 18,257 St.








12757-03 Branches 3 FSL

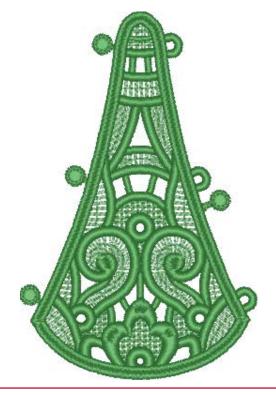


12757-04 Branches 4 FSL





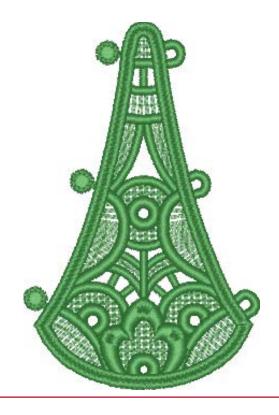

12757-05 Branches 5 FSL

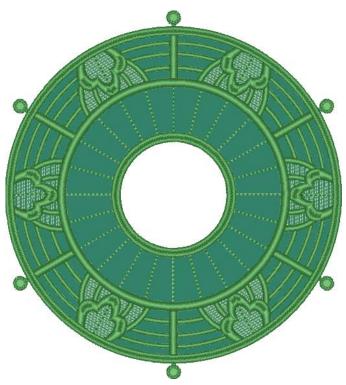

12757-06 Tree Base FSA


Size mm:

Size Inches:

Stitch Count:





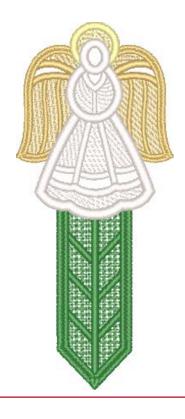

12757-07 Angel Topper FSL

				Stitch Count:
1.96 X 4.59	9 in. 49	.78 X 116.59	mm	11,722 St.
1. Tab				5722
2. Wing	JS			0741
				0741
4. Halo				7008
5. Halo	Outline			0520
☐ 6. Dres	s and Head	t		0015



12757-08 Tree Skirt Doily FSA

Size Inches:		Size mm:	Stitch Count:
4.35	X 4.35 in.	110.49 X 110.49 mm	26,307 St.
□ 1.	Placement	Stitch	0015
2. Cut Line and Tackdown			0015
☐ 3.	Lace Linev	vork	0015
4 .	Lace Cove	r Stitch	0015







12757-09 Ornaments FSL

Size Inches:	Size mm:	Stitch Count:
3.86 X 8.55 in.	98.04 X 217.17 mm	21,291 St.
1. Light Red L	ace	1521
2. Light Yellow	0520	
3. Dark Red C	1904	
4. Light Blue L	3730	
5. White Detail	1	0015
6. Dark Blue C	Cover Stitch	3722
7. Light Yellow	/ Lace	0520
8. Dark Yellow	Cover Stitch	0622



12757-10 Garland FSL

MATERIALS



Stabilizer

- Aguamesh WashAway
- StabilStick TearAway

Supplies

- · Embroidery thread
- · Fabric for applique
- Embroidery machine
- Optional -
 - alligator clamps, tweezers, hemostats, stiletto or a tiny crochet hook
 - Expert Embroidery Tape TearAway and WashAway
 - Pixie Lights/Pixie Lights Multi-Colored

Isacord Thread Colors

0015 White

0520 Daffodil

0622 Star Gold

0741 Wheat

1521 Flamingo

1904 Cardinal

3722 Empire Blue

3730 Something Blue

5722 Green Grass

7008 (S11) 10 kt. Gold

SUMMARY



Freestanding Christmas Tree with Ornaments

Requires 6 Branches 1 FSL - 12757-01

Requires 6 Branches 2 FSL - 12757-02

Requires 6 Branches 3 FSL - 12757-03

Requires 6 Branches 4 FSL - 12757-04

Requires 6 Branches 5 FSL - 12757-05

Requires 1 Tree Base FSA - 12757-06

Requires 1 Angel Topper FSL - 12757-07

Requires 4 Tree Skirt Doily FSA - 12757-08

Requires 2 Ornaments FSL - 12757-09

Requires 2 Garland FSL - 12757-10

Thread: most used

5722 - Tree, Base and Angel Tab - 4 spools

1521 - Ornament Light Red (makes 10) - 1 spool

1904 - Ornament Dark Red (makes 10) - 1 spool

3730 - Ornament Light Blue (makes 10) - 1 spool

3722 - Ornament Dark Blue (makes 10) - 1 spool

0520 - Ornament Light Yellow and Angel Halo (makes 10) - 1 spool

0622 - Ornament Dark Yellow (makes 10) - 1 spool

0015 - Skirt (one color) and Angel dress- 1 spool

7008 - Angel Halo- 1 spool

0741 - Angel Wings- 1 spool

Fabric:

Green (base) - 6" x 6"

White (tree skirt doily) - 1/8 yd

Final Height: 12"

Garland tip:

* If using metallic thread, use an embroidery thread close in color for the bobbin.

*After washing out the garland, to achieve a spiral look, tape one end of the garland to a flat surface and on the other end, twist continually until the spiral look is achieved, then tape that end down and let dry.

Skirt tip:

*To aid in the sewing of the four tree skirt pieces use WashAway tape on the back side, taping each piece tightly together.

*Recommended Four 4" strips of WashAway tape.




EMBROIDERY



STEP 1

- Prep fabric by applying 2 sheets of StabilStick TearAway to the wrong side of the fabric.
- Note this stabilizes your fabric so it isn't too limp and produces a nice, crisp project.

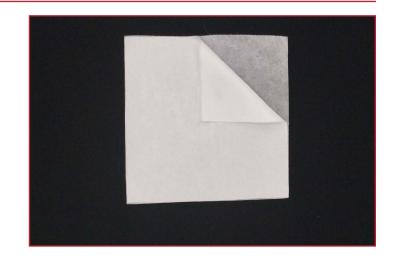


STEP 2

- · Hoop two sheets of Aquamesh.
- Sew placement stitch.



STEP 3

- Place fabric over placement stitch and make sure to cover stitches completely.
- Stitch cut line and tackdown.
- **Optional** use TearAway tape to hold items in place.

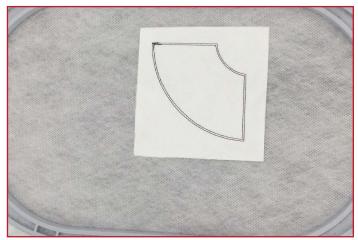


EMBROIDERY




STEP 4

- · Remove tape, carefully.
- Remove hoop from machine, **DO NOT** unhoop fabric/stabilizer.
- Trim along cut line.

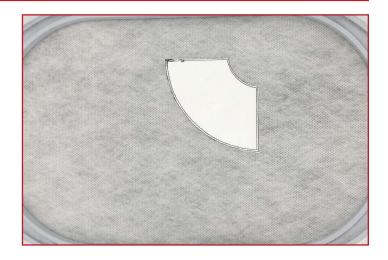

STEP 5

- Stitch lace and inner design work.
- Stitch remaining lace and cover stitch.

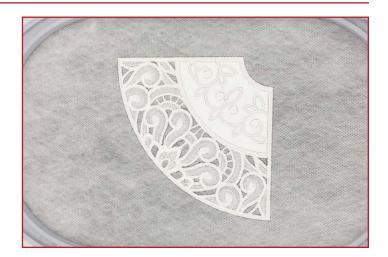

STEP 6

- Remove from hoop, trim Aquamesh ¼"-½" away from fabric.
- Wash away stabilizer and let dry.
- **Note** for instructions and tips, see last page.



ASSEMBLY




STEP 1

- Assemble the lowest section of the tree (Branches 1 FSL 12757-01). Begin by inserting
 the upper, middle, and lower buttonettes of the branch panel into the eyelets of the next
 panel of branches. Continue constructing until a fan of six branch panels is completed.
- **Note** repeat this for the next four levels of branch panels (Branches 2 FSL 12757-02, Branches 3 FSL 12757-03, Branches 4 FSL 12757-04, and Branches 5 FSL 12757-05).
- **Note** make sure the fabric is right sides together when attaching tree base sections.
- Attach Tree Base FSA 12757-06 buttonettes to the lower level of tree Branches 1 FSL 12757-01 eyelets.





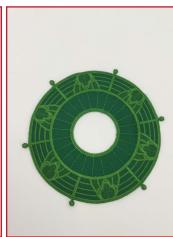



STEP 2

Connect the lowest level of branches (Branches 1 FSL 12757-1) buttonettes to the next level
of branches (Branches 2 FSL 12757-02) eyelets. Repeat this process with branches 3, 4 and 5.







ASSEMBLY




STEP 3

- Note see page 8 for garland and skirt tips.
- Insert Angel Topper FSL.
- Insert Ornaments FSL and Garland FSL into the provided eyeletes
- Assemble the tree skirt by laying the pieces (12757-08) flat next to each other, aligning the straight edges.
- Connect quarters together with a zig-zag stitch.
- Place the completed tree over the tree skirt doily.





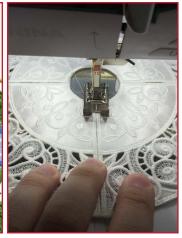



• We used 2 strands of pixie lights to achieve a well-lit tree. Use your alligator clamps or tweezers to pull the strand through the inside of your tree.



INSTRUCTIONS



General Freestanding Lace Guidelines

Supplies:

Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle. **Needles:**
- Use an Organ 80/12 Titanium needle for extended needle life. **Stabilizer:**
- Use OESD AquaMesh stabilizer.

Handy Hints:

For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a "stiffer" lace.
 Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

For Very Soft Lace:

 Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. NOTE: If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

Drying Lace:

 The lace looks best when left to dry completely. Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl. Be sure to flatten the piece out entirely and allow ample time to dry.

General Instructions

- 1. Hoop two layers of OESD AquaMesh Stabilizer.
- 2. Attach the hoop to the machine and select the design of your choice.
- 3. Stitch the design.
- 4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
- 5. Rinse away remaining stabilizer and allow it to dry.

Handy Hints:

For 3D Lace Projects:

- If item becomes too limp to work with, iron the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.
- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of "buttonette" and "eyelet".)
- Insert the tip of the alligator clamps, tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet. Or a stiletto could be used to push the buttonette through the eyelet.

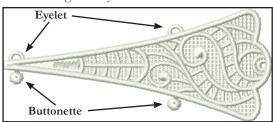


Diagram 1