

STRANGE

25-07-2016

1.0 LED

LED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 90° 0,3m TE 35°/35° 355°

white texture
black texture

131161W_
131161B_

LIGHT COLOUR

2700K | >90CRI | 420-590lm | 18Vf

3

3000K | >90CRI | 470-640lm | 18Vf

5

1800-2850K | >90CRI | 320-440lm | 18Vf

9

ALWAYS USE

plaster kit
for power supplies see our catalogue

90017116

1.0 PAR16

PAR16 max. 35W | GU10 | 220-240VAC | 50-60Hz

CE IP20 90° 0,9m 35°/35° 355°  DO NOT COVER

white texture
black texture

131120W0
131120B0

ALWAYS USE


plaster kit

90017116

OPTIONAL

for PAR16 lamps see our catalogue



plaster kit (has to be ordered separately)





1.0 LED

1.0 PAR16




①



②

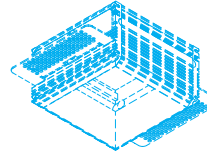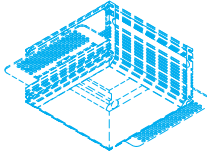


④

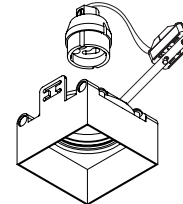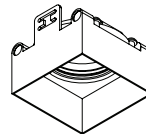

DIMENSIONS

1.0 LED



1.0 PAR16




MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the upper part of the fixture into the ceiling and plaster the borders seamlessly

POWER CONNECTION


- ③ SERIAL CONNECTION - for LED
Always use **POWER SUPPLY** according to the specifications of the LED-module



PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.
- ⑤ SAFETY DISTANCE FOR HALOGEN LAMPS

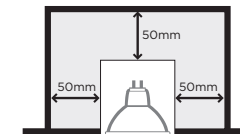

WEVER & DUCRÉ
LIGHTING

www.weverducre.com

INSTALLATION
INSTRUCTIONS