
LUXURY PATTERNED WALL FABRIC

Wall fabric

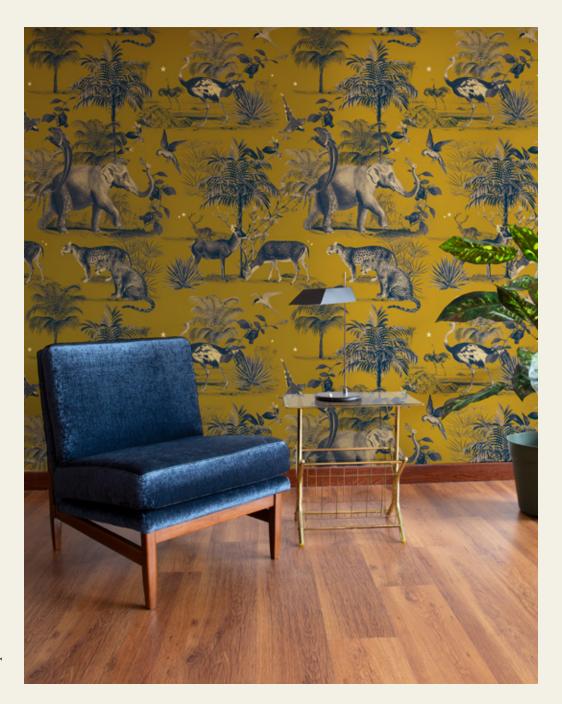




Wall fabric


Our magnificent wall fabrics are used to upholster any space, bring character and design statement rooms with visual interest, stamped with our iconic Muzaluci patterns each textile is customed to suit your space measures and needs, this product may be disassembled, washed and reused as material to create decorative pieces for your home.

•

¿How much fabric do I need?

We design each wall fabric vertical panel on this measures:

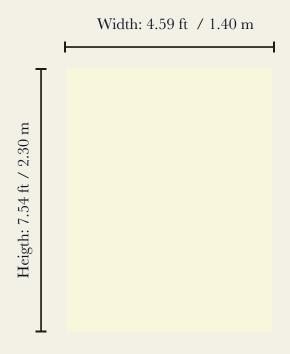

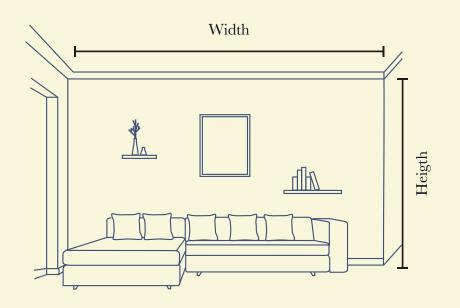


01 Measure

Measure the width and height of the wall including the baseboard the modulation of panels will depend on this.



VERTICAL INSTALLATION



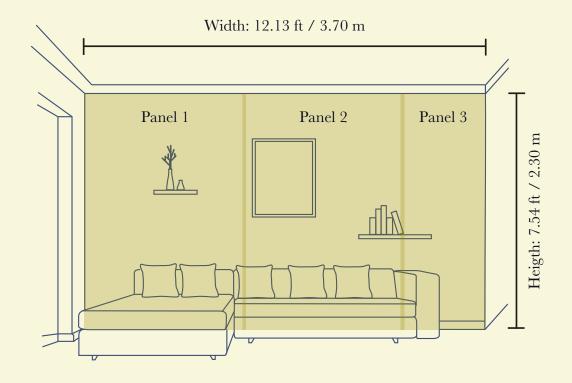

To cover this wall we will need 3 panels, each one: Width: 4.59 ft / 1.40 m x Heigth: 7.54 ft / 2.30 m

Vertical Installation

The vertical installation is the most common, it is used to cover the entire wall. Being an artisanal process of printing on fabric, the joint of the panels is inevitable.


It is visually imperceptible at distance.



Circus Wall Fabric

HORIZONTAL INSTALLATION



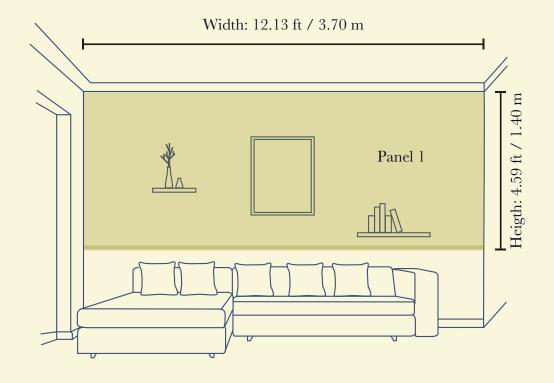

To cover this wall we will need 1 customed horizontal panel Width:12.13 ft / 3.70 m x Heigth: 4.59 ft / 1.40 m

Horizontal Installation

The horizontal installation is used when you want to intervene the wall with paint or wooden paneling in the same shades as the fabric. To cover the joint between the fabric and the wall is recomended to use a wood molding for a polished finish.

How to make the glue?

The most effective way to stick your fabric to the wall is using homemade glue with corn starch and boiling water, which is applied abundantly on the wall with the help of a paint brush, this method allows the fabric to slide and move to ensure neat splices and also prevents detachment from the wall.

We do not recommend using another type of glue.

Ingredients



This proportion will be enough to cover a wall: 13.12 ft /4 m wide by 8.20 ft / 2.5 m high.

Preparation

- In a bowl dissolve the half cup of corn starch in just over half a cup of cold water and stir constantly until a homogeneous mixture is obtained. Check that there are no lumps.
- STEP 2 In a pan over medium heat bring the rest of the water to boil and slowly add the corn starch mixture. Stir little by little.
- As you gain temperature, you will see that the mixture will thicken. STEP 3 Stir the mixture with a spoon so there are no lumps. Turn off the heat and let cool.
- When the glue is ready, store it in a container with a lid. Now you can start applying it directly on your wall with a brush to install the wall fabric. We recommend that two people do the installation.