




Part number 1898-7028-01

2018-19 Ford Mustang

RTR Decklid Panel

Component Identification


1. RTR Decklid Panel 1

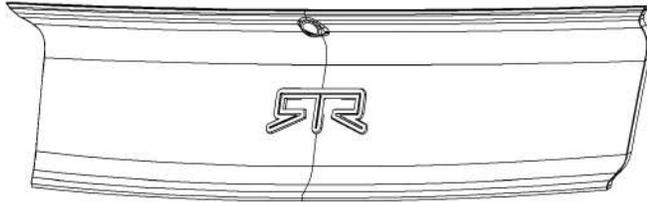

NOTE: In addition to common hand tools, this installation requires the use of 5.5mm or 7/32" socket.



1. Please read through these installation instructions in their entirety before beginning the installation. RTR recommends the use of a fender cover or protective film over the rear bumper.

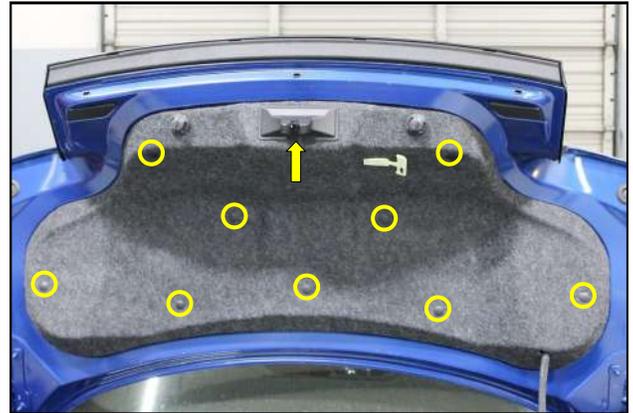


2. Using a panel removal tool, remove nine plastic rivets circled in yellow. Unscrew two trunk bumpers, and remove the latch cover by releasing the tension snap at the bottom. Fish the trunk release through the trunk cover and remove from the vehicle.



3. Remove the access covers and remove four screws using a 7mm socket.



4. Unplug the backup camera.

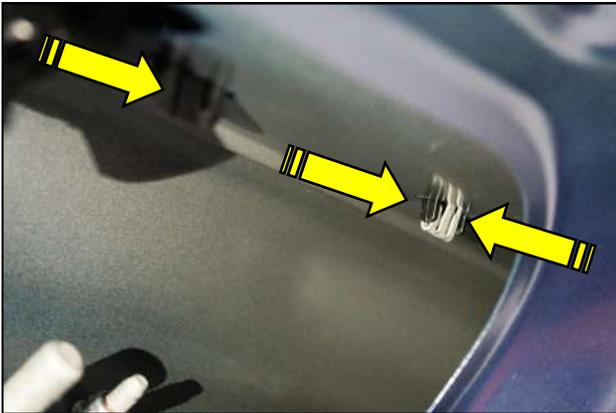

5. With a helper lightly pulling the stock decklid panel in a downward direction away from the trunk, release the clips using needle nose pliers and a flathead screwdriver.



6. Use a 5.5mm or 7/32" socket to remove the backup camera from the factory decklid panel and transfer to the RTR Decklid Panel, paying attention to the orientation.




7. If you are installing the RTR Decklid Panel on a 2018 Mustang, you will need to remove two tabs from each side as shown.




8. Using diagonal cutters, cut flush with the surface to remove the four tabs.




9. Make sure the trimmed tabs do not protrude enough to inhibit installation of the RTR Decklid Panel, then proceed with the installation.

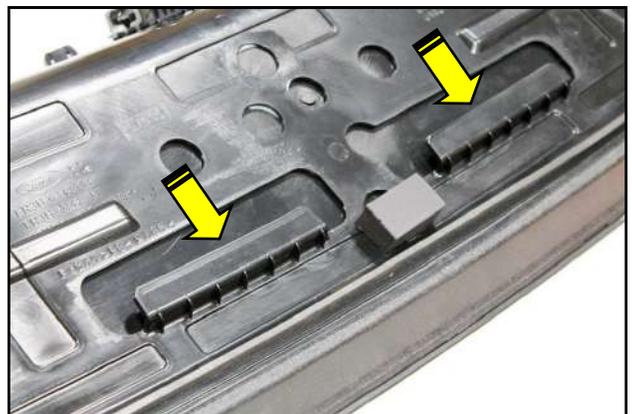

10. To install the RTR Decklid Panel, the two tabs shown will need to hook into the trunk, as shown in the next step.

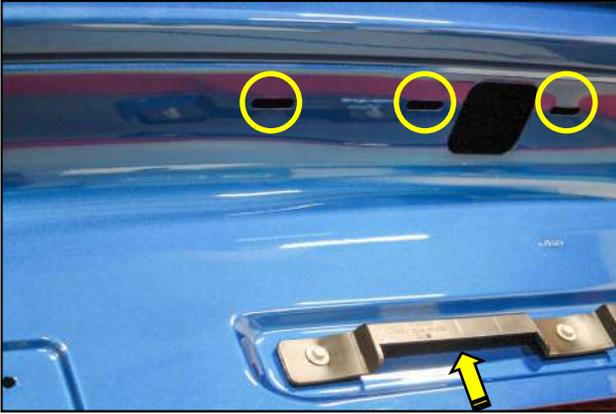

11. Align the tabs shown in the previous step with the bracket shown, while aligning the snap tabs with the oval slots in the trunk, then press upward to install the RTR Decklid Panel.

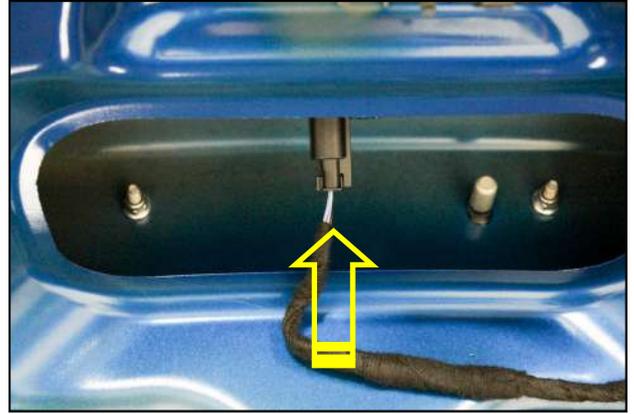

12. Plug in the backup camera.



13. Reinstall the four screws using a 7mm socket and reinstall the access covers.



14. Fish the trunk release and wiring harness through the trunk cover. Reinstall nine plastic rivets, two trunk bumpers and the latch cover.



15. Clean the RTR Decklid Panel with a soft microfiber cloth to remove any fingerprints to complete the installation.



THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK