





Part number 1898-7009-01 (403277)

2018 -19 Ford Mustang


RTR Front Lip Spoiler

Component Identification


- | | |
|-----------------------------|---|
| 1. RTR Front Lip Spoiler | 1 |
| 2. Screw, Short (not shown) | 8 |

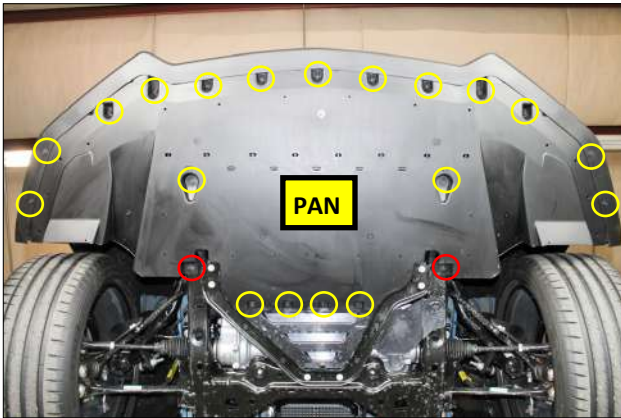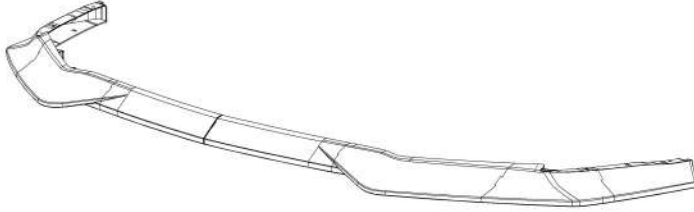


1. From underneath the vehicle remove the 19, 7mm head screws from the pan, marked in yellow and the two plastic rivets marked in red.

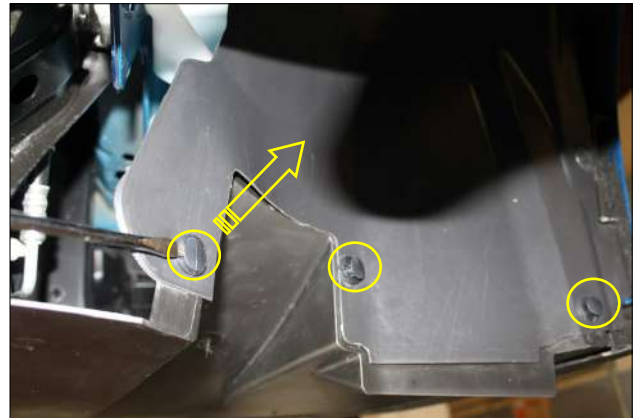

2. Remove the three remaining plastic rivets inside each wheel well. The pan can now be removed from the vehicle.

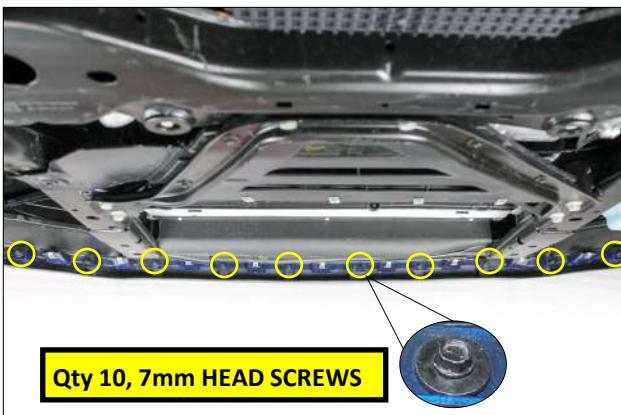


3. Remove the 10, 7mm head screws securing the OEM front lip.

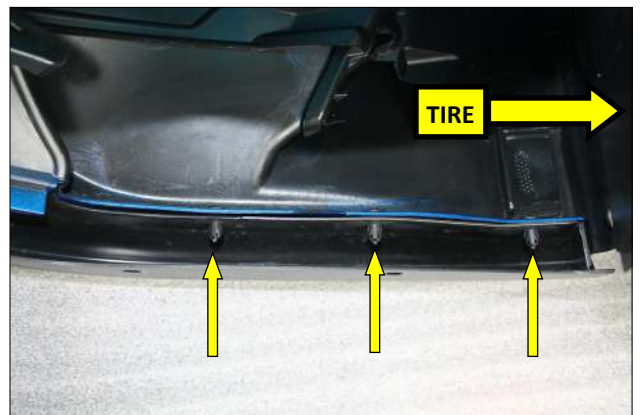


4. From the inside, remove the three small diameter plastic rivets at each side of the OEM front lip. Remove the OEM front lip and set it aside.




5. Transfer the speed clips from the OEM front lip onto the RTR Front Lip Spoiler. A small screwdriver or pick can ease removal of the speed clips.

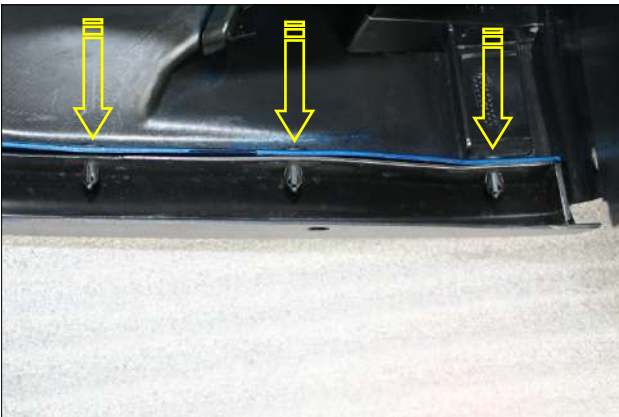


7. Reinstall the three small diameter plastic rivets on each side.

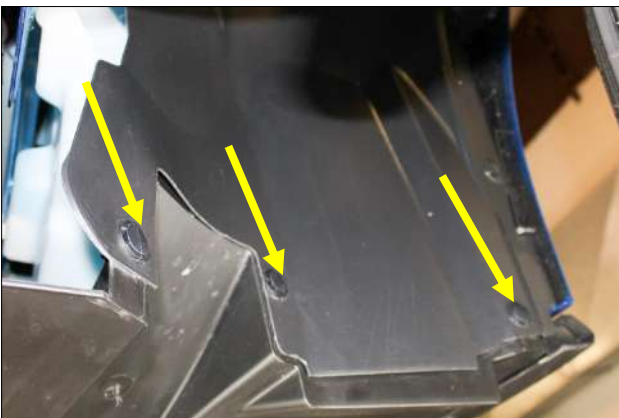


9. With the fender liner on the outside of the pan, reinstall the three rivets on both sides of the vehicle.

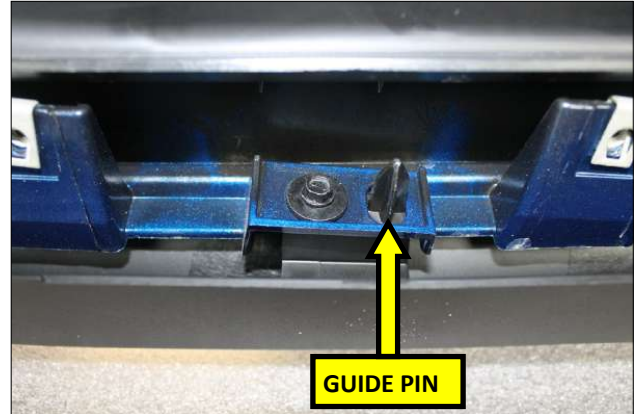

6. Slide the RTR Front Lip Spoiler onto the bumper using the three guide pins to locate. Starting from the edges and working towards the center, reinstall the 10 OEM screws to secure the RTR Front Lip Spoiler.

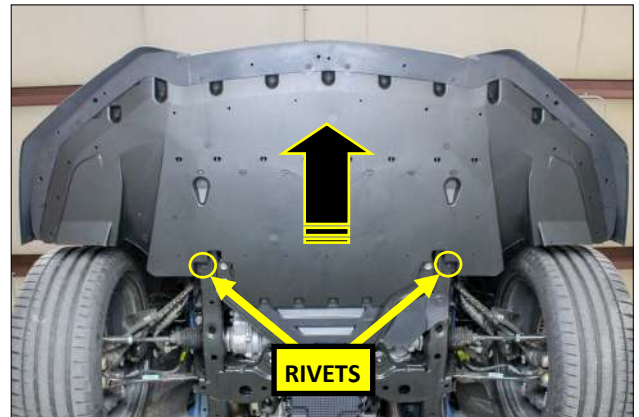

8. Reinstall the pan back onto the vehicle, leading edge first, then secure it using two OEM rivets at the rear.

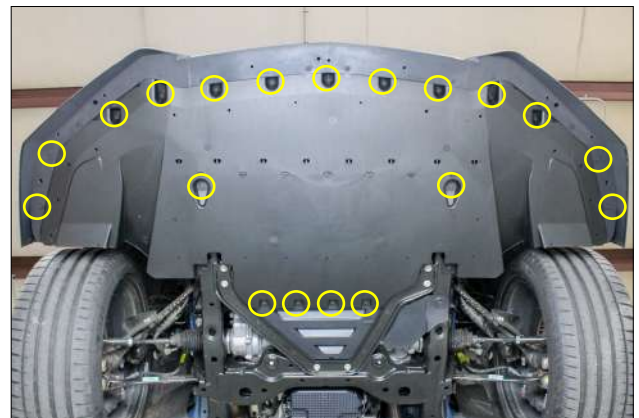

10. Reinstall the 19 OEM screws in the locations marked in yellow.



11. Install the eight Short RTR screws into the remaining eight open holes in the RTR Front Lip Spoiler.



12. Inspect the RTR Front Lip Spoiler for correct fitment. Your installation is now complete.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK