



# Installation Instructions

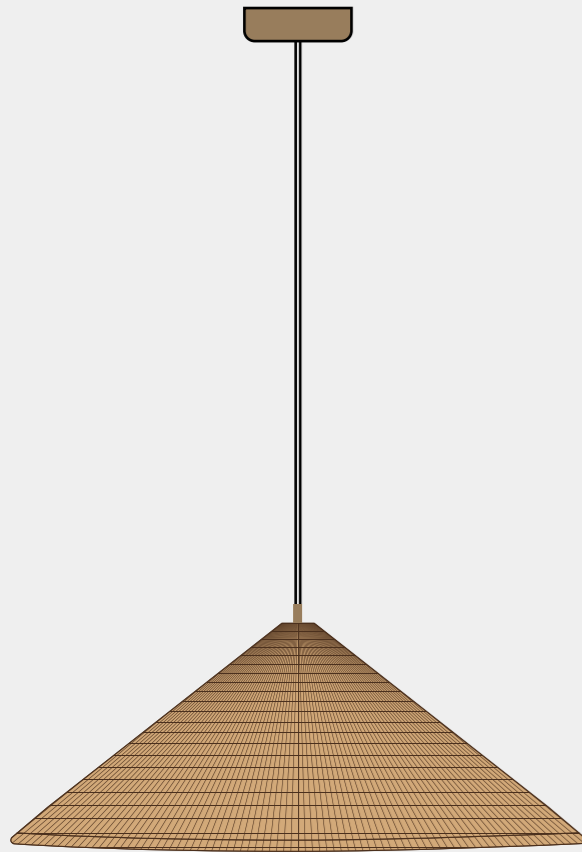

Retro Woven Rattan  
Cone Pendant Light


PL0040

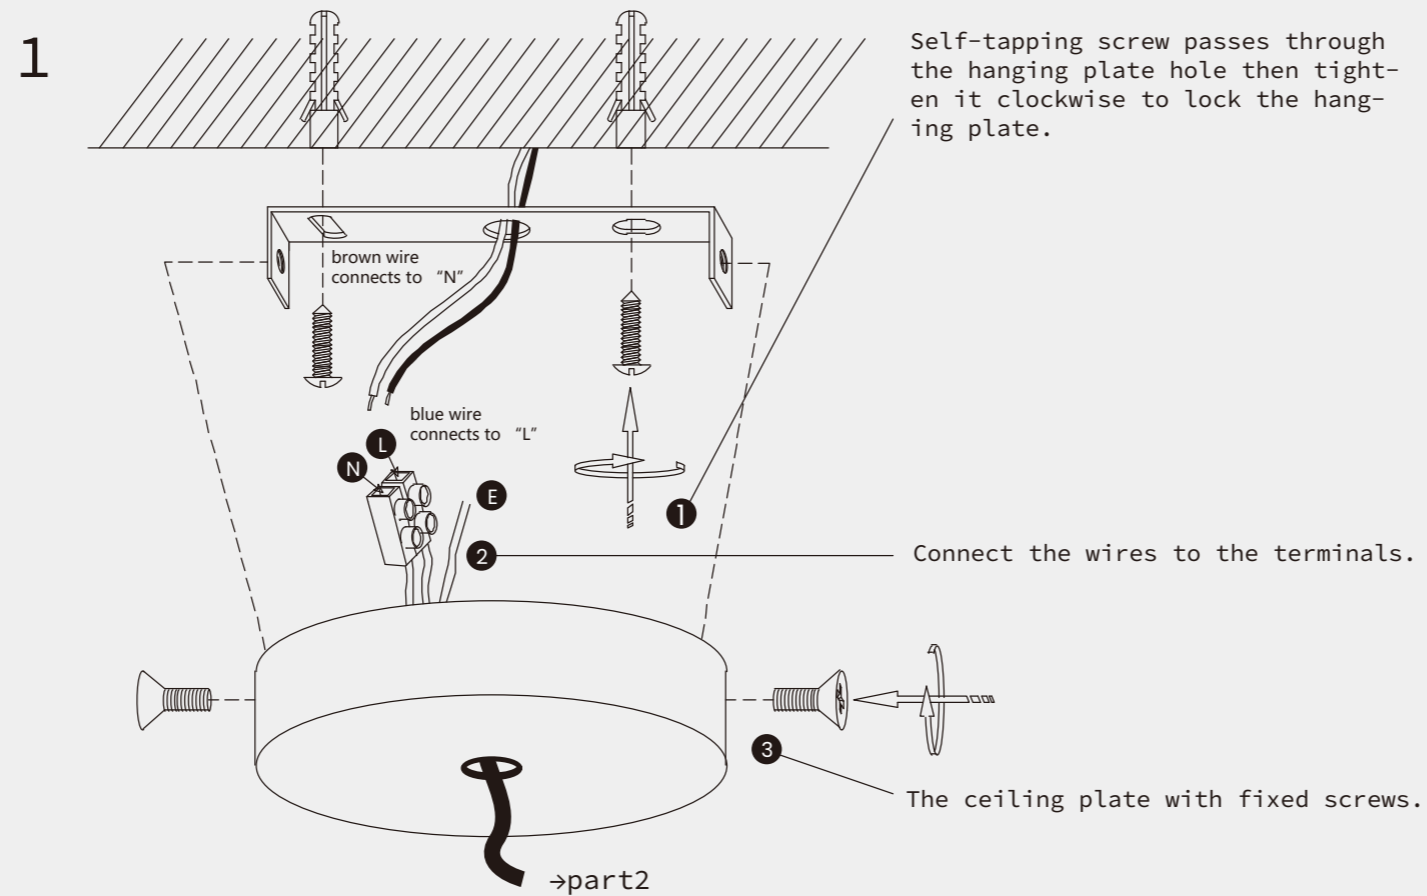


## THE LAMP INSTRUCTION





Nbjoufobodf	Qsfdbvujpot
2/Wpμubhf;221.351W	Lffq!uif!mjhijoh!bxbz!gspn!bdjemd!difjdbm!tpmwfout! up!bwpjelebnbhf/
3/Qmfbt!xfbs!hmpwft!xifo!jotubmm/	Ujq
4/Epo(u!jotubmm!ju!po!uif!npjt!dfjmjoh/	Qmfbt!gpmmpx!uif!jotusvdujpot!uifo!jotubmm!uif!qbsut!jo uif!dpssdu!psefs/
5/Uvso!pgg!uif!qpxfs!cfgps!dmfbojoh!pvu/	
6/Qmfbt!xbti!xjui!uif!tbojuj!fs!xjuipvu!dpssptjwjuz/	

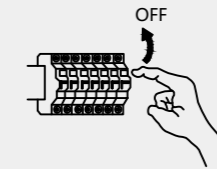

❶ Power off

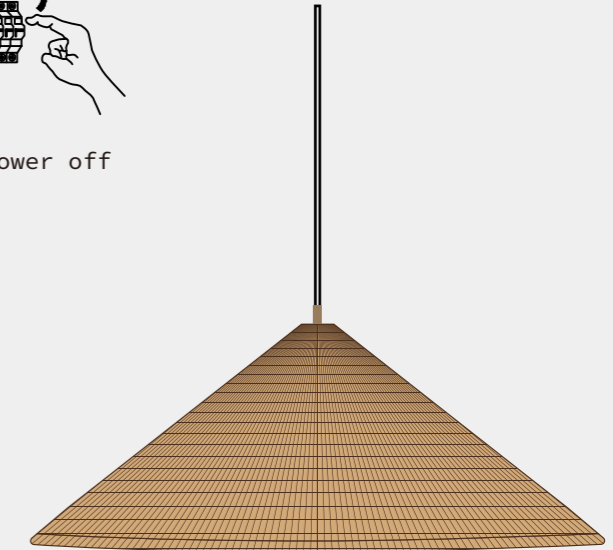

❷ Tighten the bulb

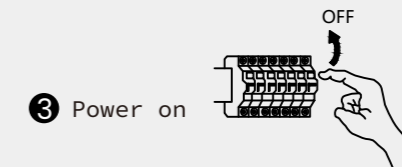

❸ Power on