



T-Nut Mounting Instructions

How To Videos available at www.youtube.com/sfdisplay


PARTS:

- Hanger(s)
- Sets of T-nuts & screws



Step 1: Test fit hanger with pistol/rife/guitar/item in place to find the most ideal location to mount in cabinet.

Step 2: Mark the 2 holes for drilling. Use a 3/16" drill bit and create the 2 holes for attaching the T-nuts. If you don't have a drill, you can use a screw that is a bit bigger than 3/16" to help make the hole. The center of the T-nut will need to be able to go inside from the back.

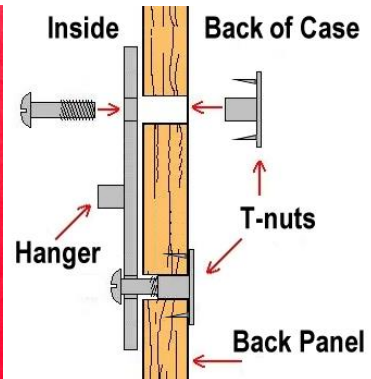

Step 3: From the back of the case, insert the T-Nuts with the prongs-side facing into the 2 holes as shown in the 1st photo below. Push the T-nut into the back panel as much as you can.

Step 4: Position the hanger from the inside to align with the 2 holes/T-nuts. Use 2 black screws to attach each hanger as shown in 2nd photo. You will need to screw very tightly, as this will force the T-nut prongs to press into the back panel. A power screwdriver is best for this. The attached hanger from the front should look like the 2nd photo and from the back should look like the 3rd photo.

Step 5: Test fit the hanger with item again, you can then mount the display case on to wall and use.

