


Ulti-Wah Wiring Diagram

for Arteffect Ulti-Wah PCB - Rev A

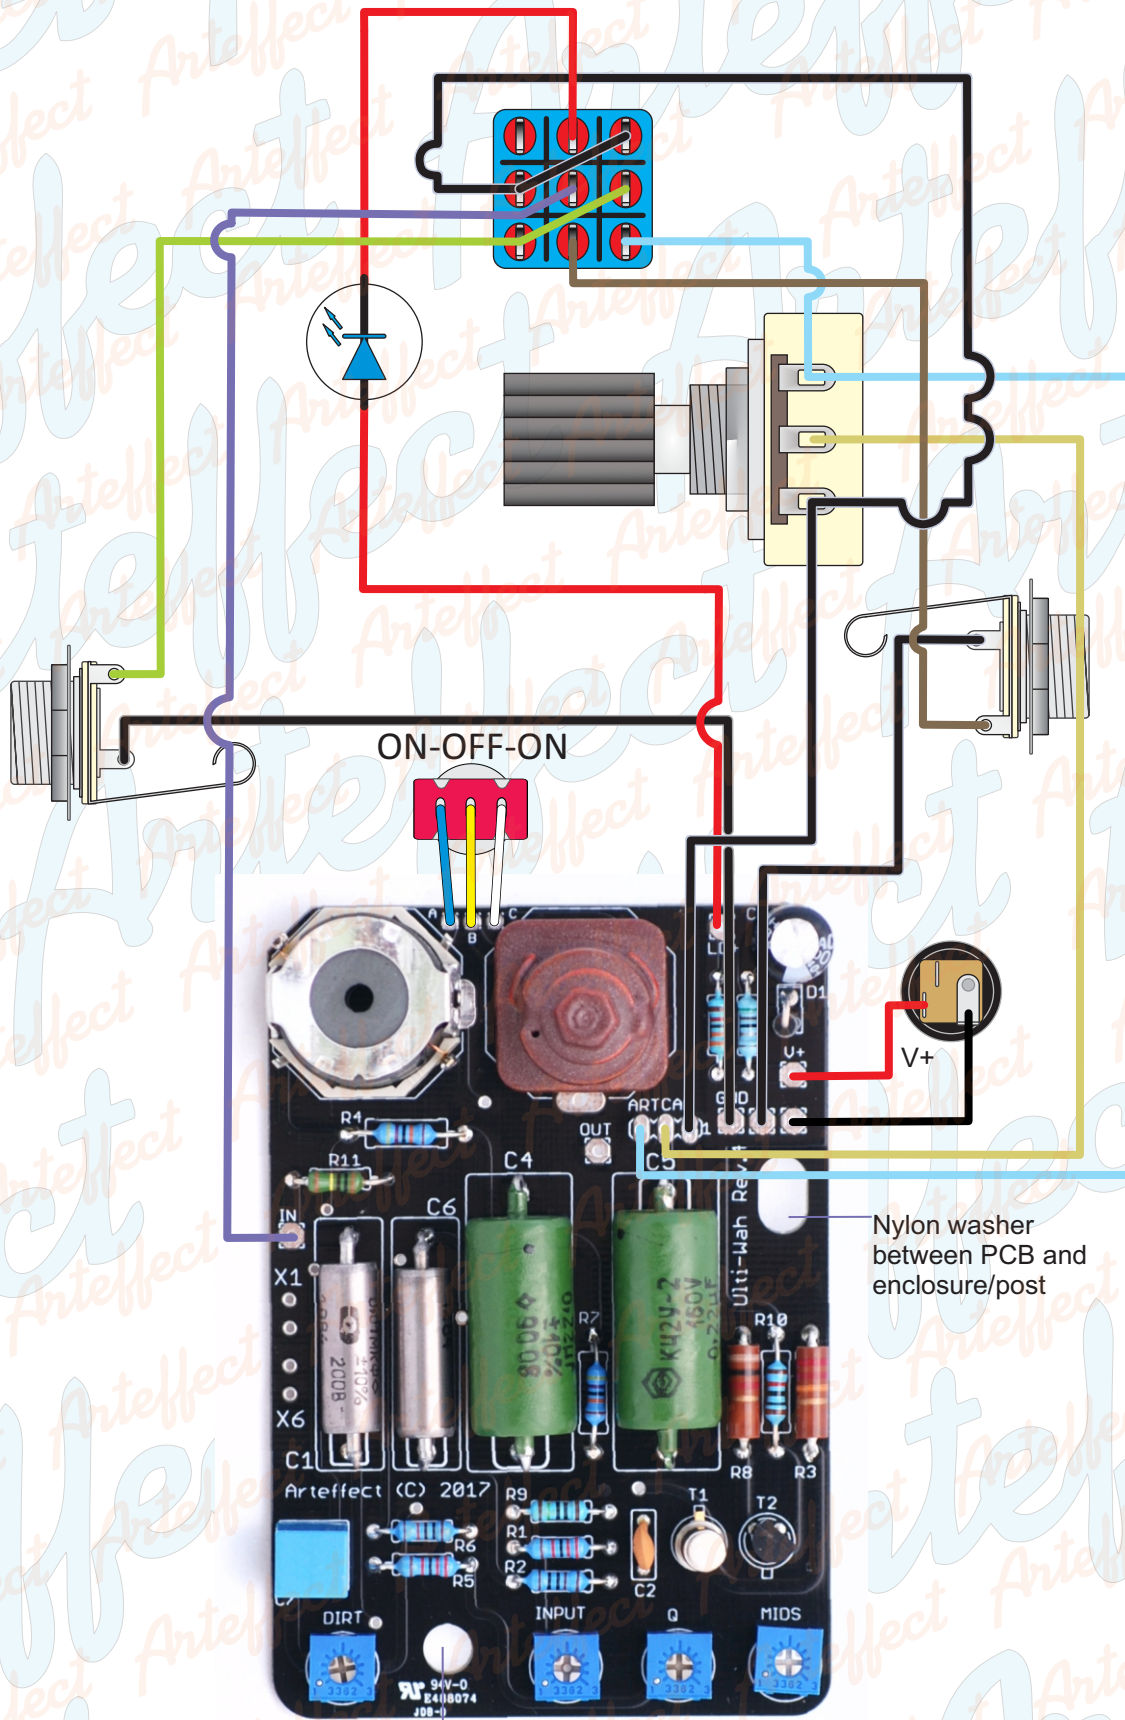

ON-OFF-ON


Nylon washer between PCB and enclosure/post

Nylon washer between PCB and enclosure/post

For more info visit us at www.arteffect.co

Vintage 'Italian' Wah Wiring

Diagram for Arteffect Vintage PCB with true-bypass and 9v adaptor socket.- Rev A

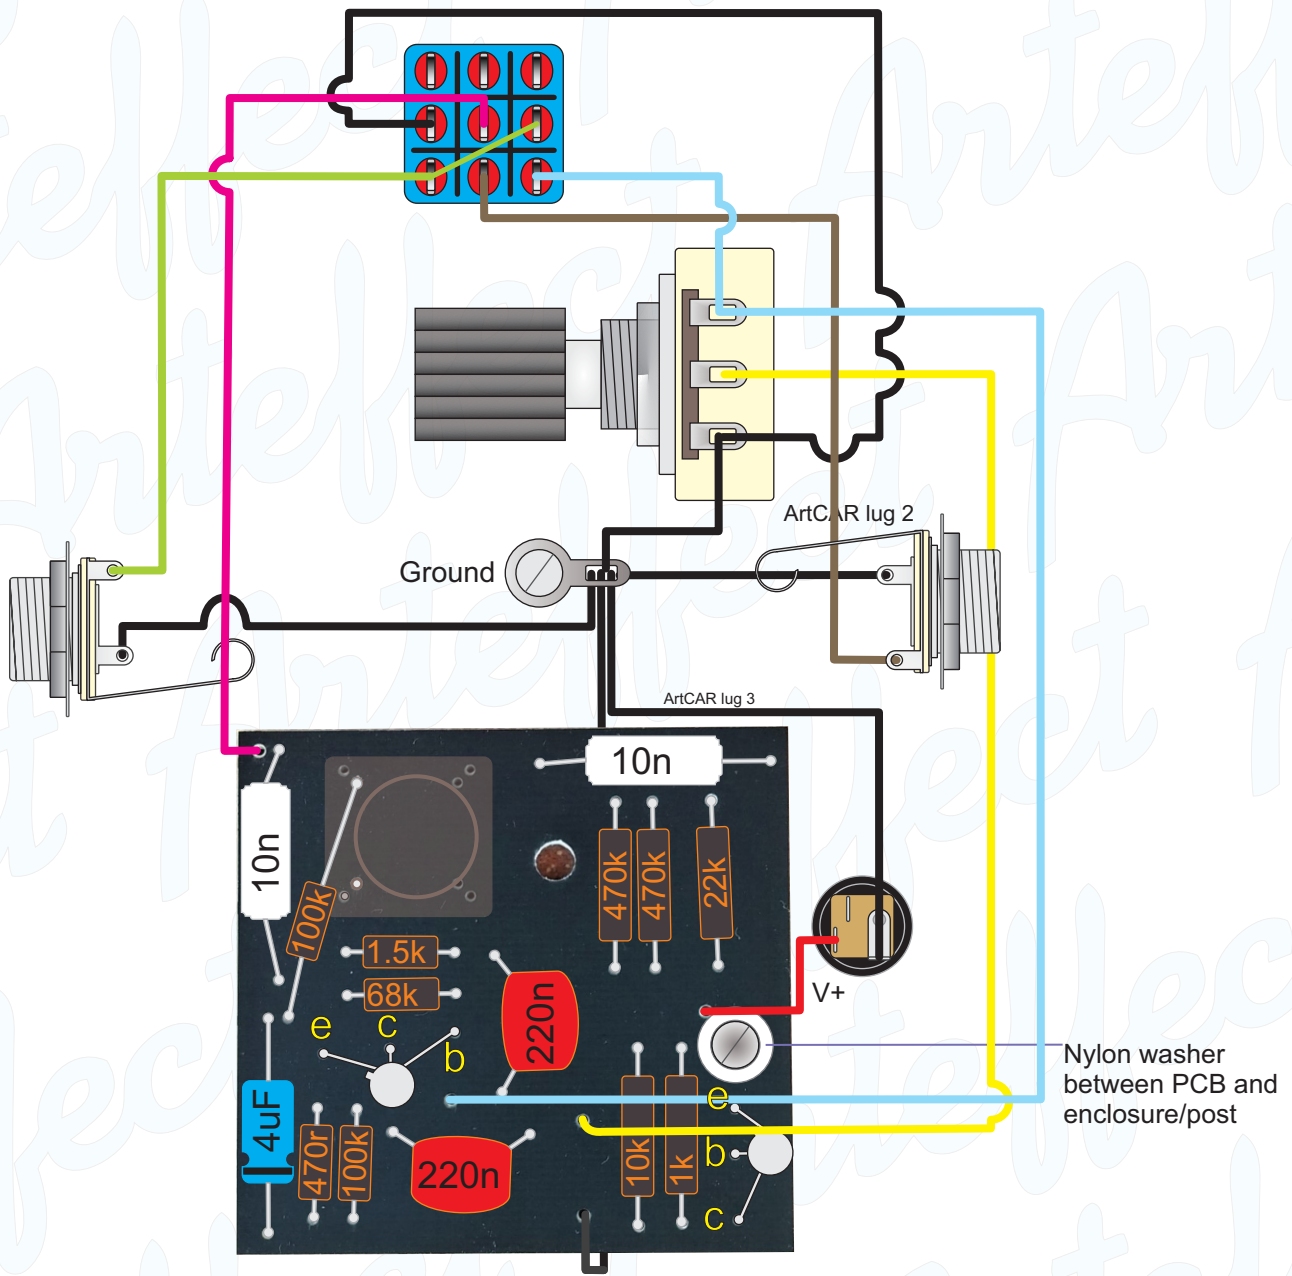

For more info visit us at www.arteffect.co