


Vintage 'Italian' Wah Wiring

Diagram for Arteffect Vintage PCB with true-bypass and 9v adaptor socket.- Rev A

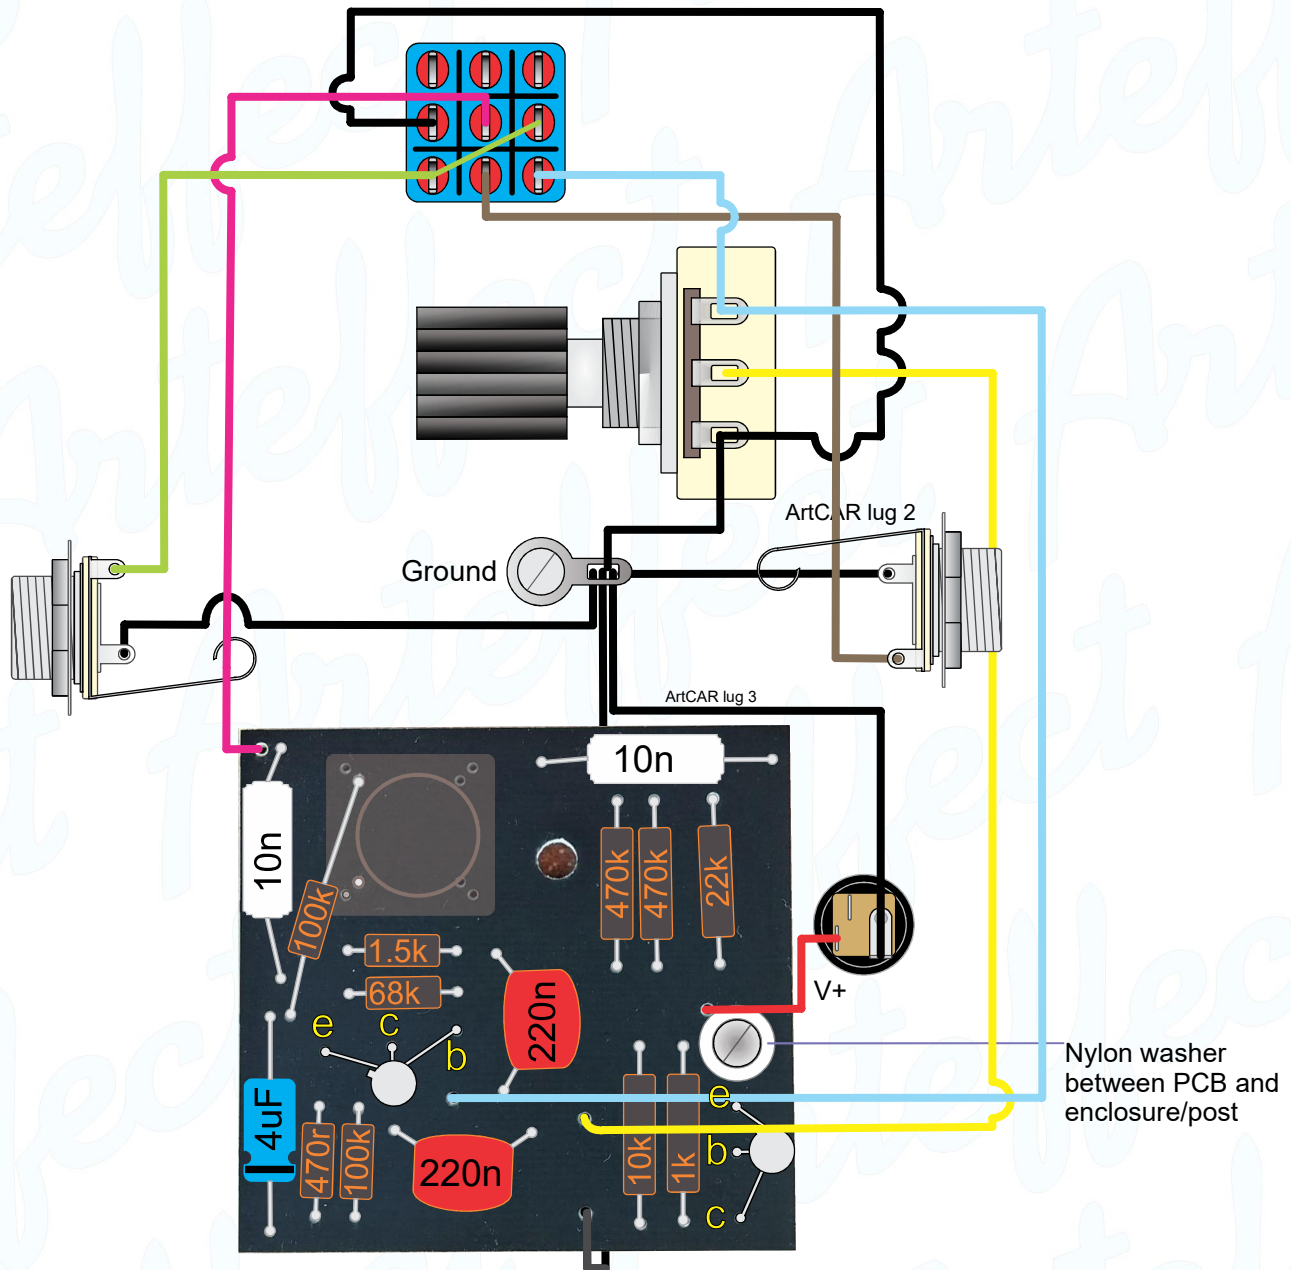

For more info visit us at www.arteffect.co