




SpOngE Bath®

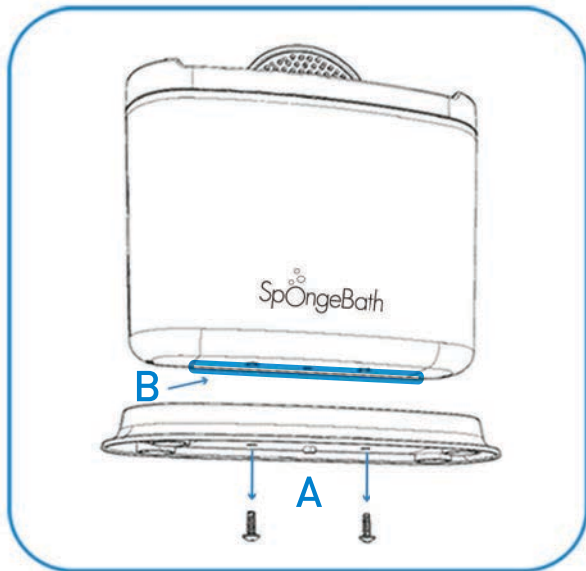


1. (A) Unscrew two Countertop Stand screws and remove Countertop Stand to (B) Reveal Slot on bottom of Tub.

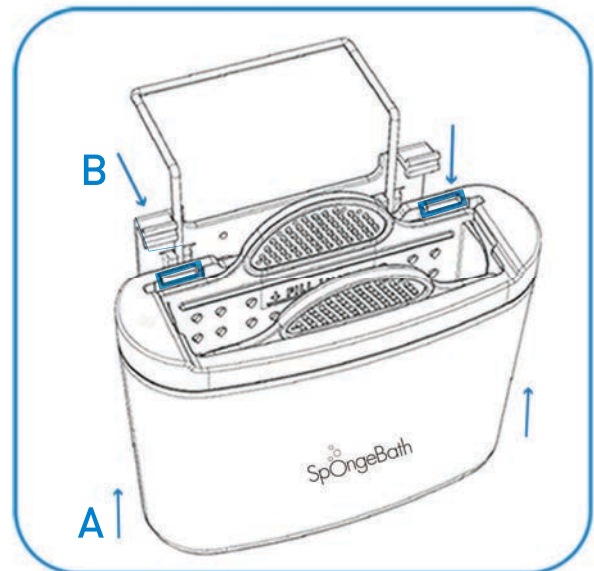

2. (A) Align the bottom hook on Mounting Bracket with Slot on bottom of Tub and insert. (B) Snap top Support Arms on Mounting Bracket into the indents on Cap.

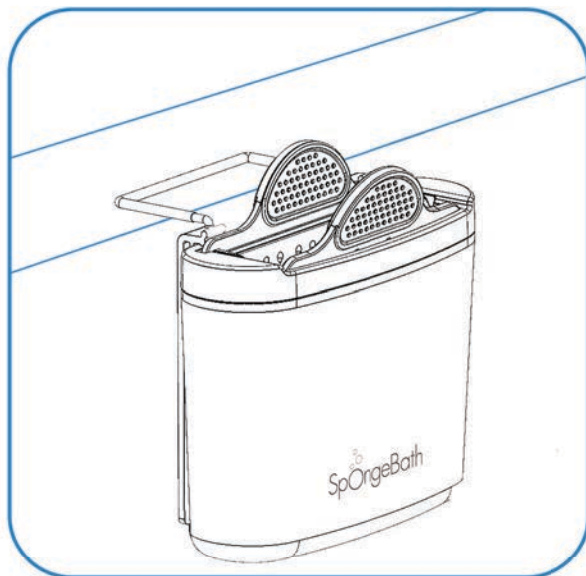

3. Moisten Suction Cups with water and press firmly to mount on sink.

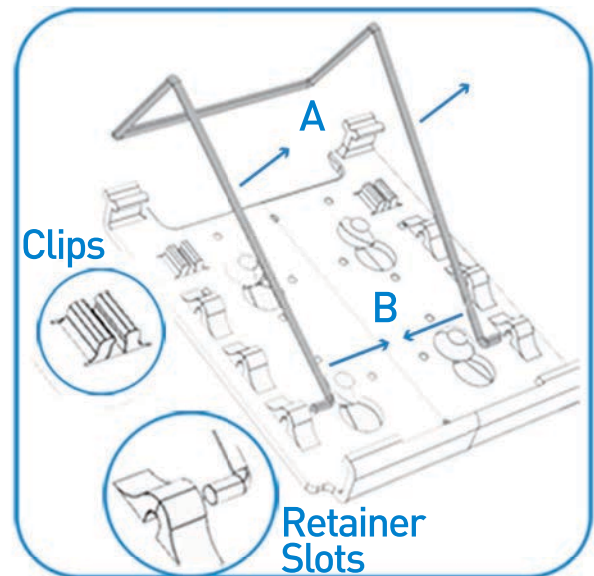

4. To adjust height for an overmount or undermount sink – (A) Unlatch steel Hanger Bar by pulling it out of Clips. (B) Squeeze lower part of Hanger Bar together to slide out of Retainer Slots, re-insert into desired slot height, and snap Hanger Bar into clips.

If you have any questions, email us at support@spongebath.com.

www.spongebath.com