


# E-Series Pro Strap Kit



## Installation Instructions:

1. Start by removing the  $\frac{1}{4}$  turn fasteners along with the clips that are in the plastic the side panels mate up to.

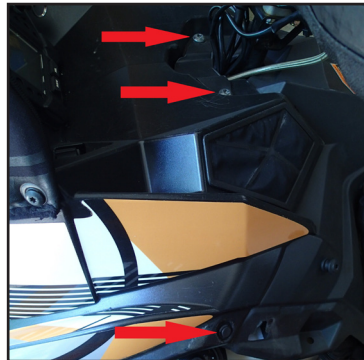

2. Remove the (2) #40 torx screws below the handlebars and pull the (2) push darts on the hood.

3. Install one of the short straps on the rear of the side panel using one "stud", nut and washer loosely in the existing hole. Close the side panel and lay strap onto the console. Using a pencil trace the inside of the "v" onto the console. Measure  $\frac{1}{2}$ " from the point of the "v" and make a mark, this is where you'll drill your first  $\frac{1}{4}$ " hole. Install one "catch" using a flat washer and nylon lock nut. Tighten all hardware to 30 in lbs or just past snug.



4. Now slide the hood forward enough that you can work behind the nose of the hood. Measure from the bend in the hood and make a mark at  $2\frac{1}{4}$ ". Measure down from the top of the hood  $\frac{7}{8}$ " and make a mark, drill a  $\frac{1}{4}$ " hole where the two lines cross. Install a long strap using the tri-stud, flat washer and nylon lock nut.



5. Install the last "catch" in the existing hole at the front of the side panel. Once you've completed this step you can reattach the hood and put both side panels in place. Attach your straps and enjoy!



For questions, please contact us at:  
586-215-6849  
[paul@sledsolutions.com](mailto:paul@sledsolutions.com)