





Pacific Round Shower Door Installation Instructions

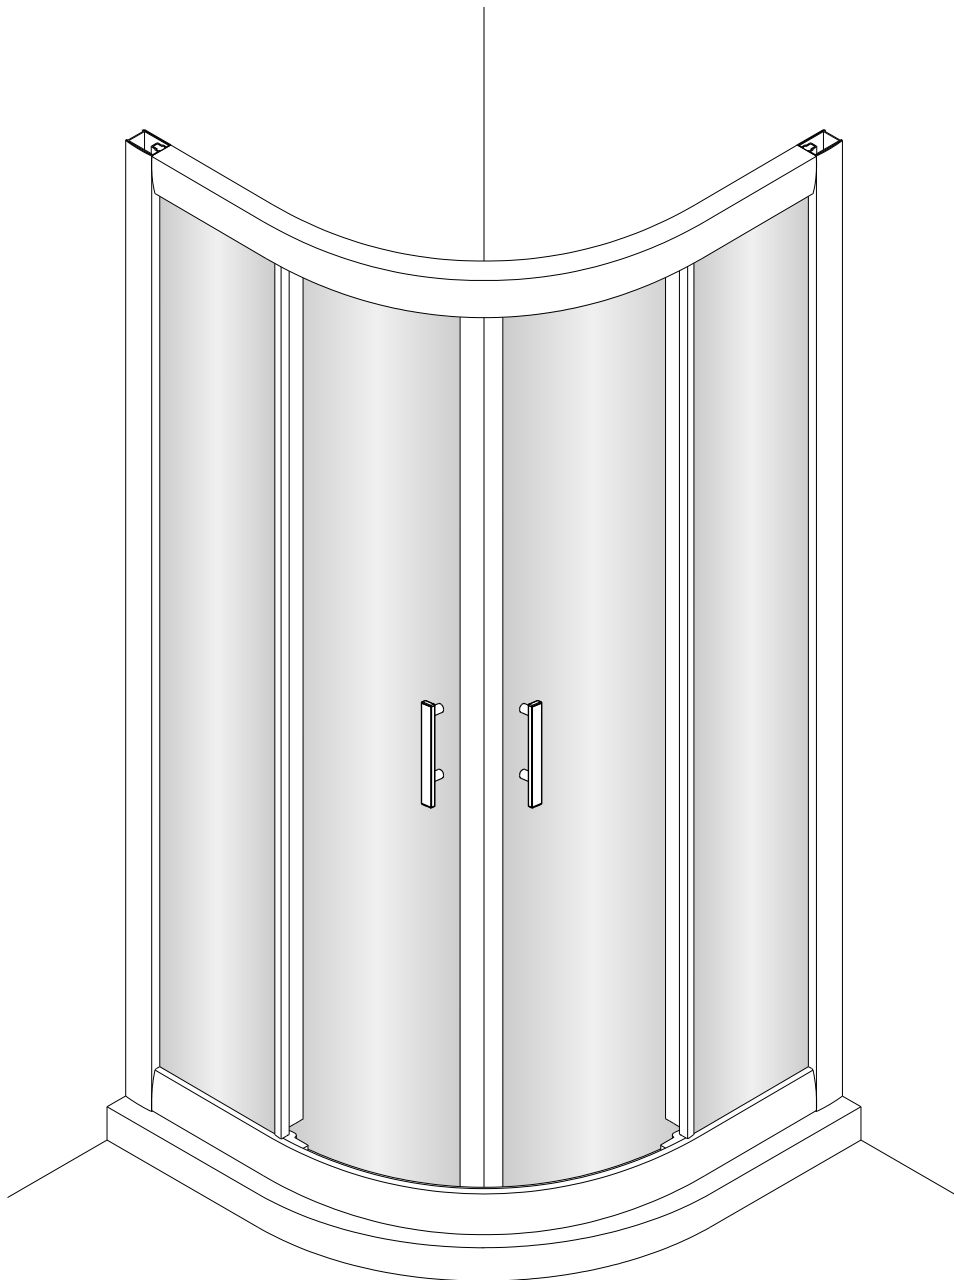



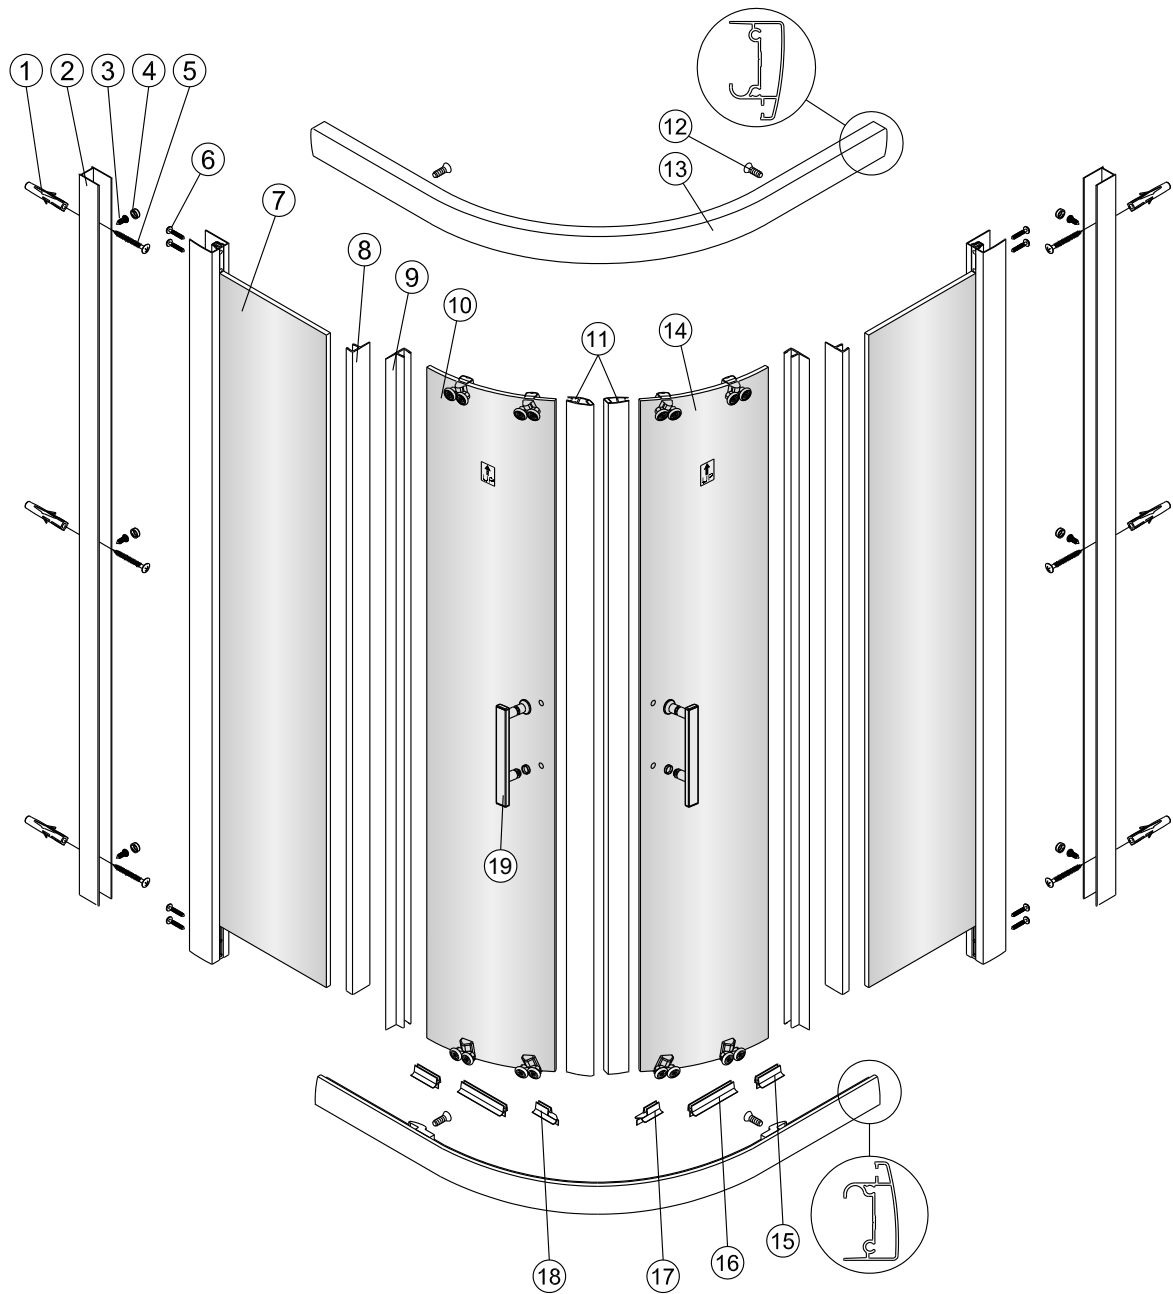


1 x6 	2 x2 	3 x6 ST3.5X10 	4 x6 	5 x6 ST4X40 	6 x8 ST4X30 	7 x2 	8 Short x2 	9 Long x2
10 x1 	11 1 Set 	12 x4 ST4X10 	13 x2 	14 x1 	15 x2 	16 x2 	17 x1 	18 x1
19 x2 								





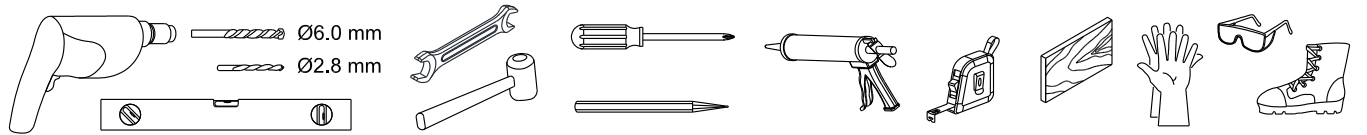


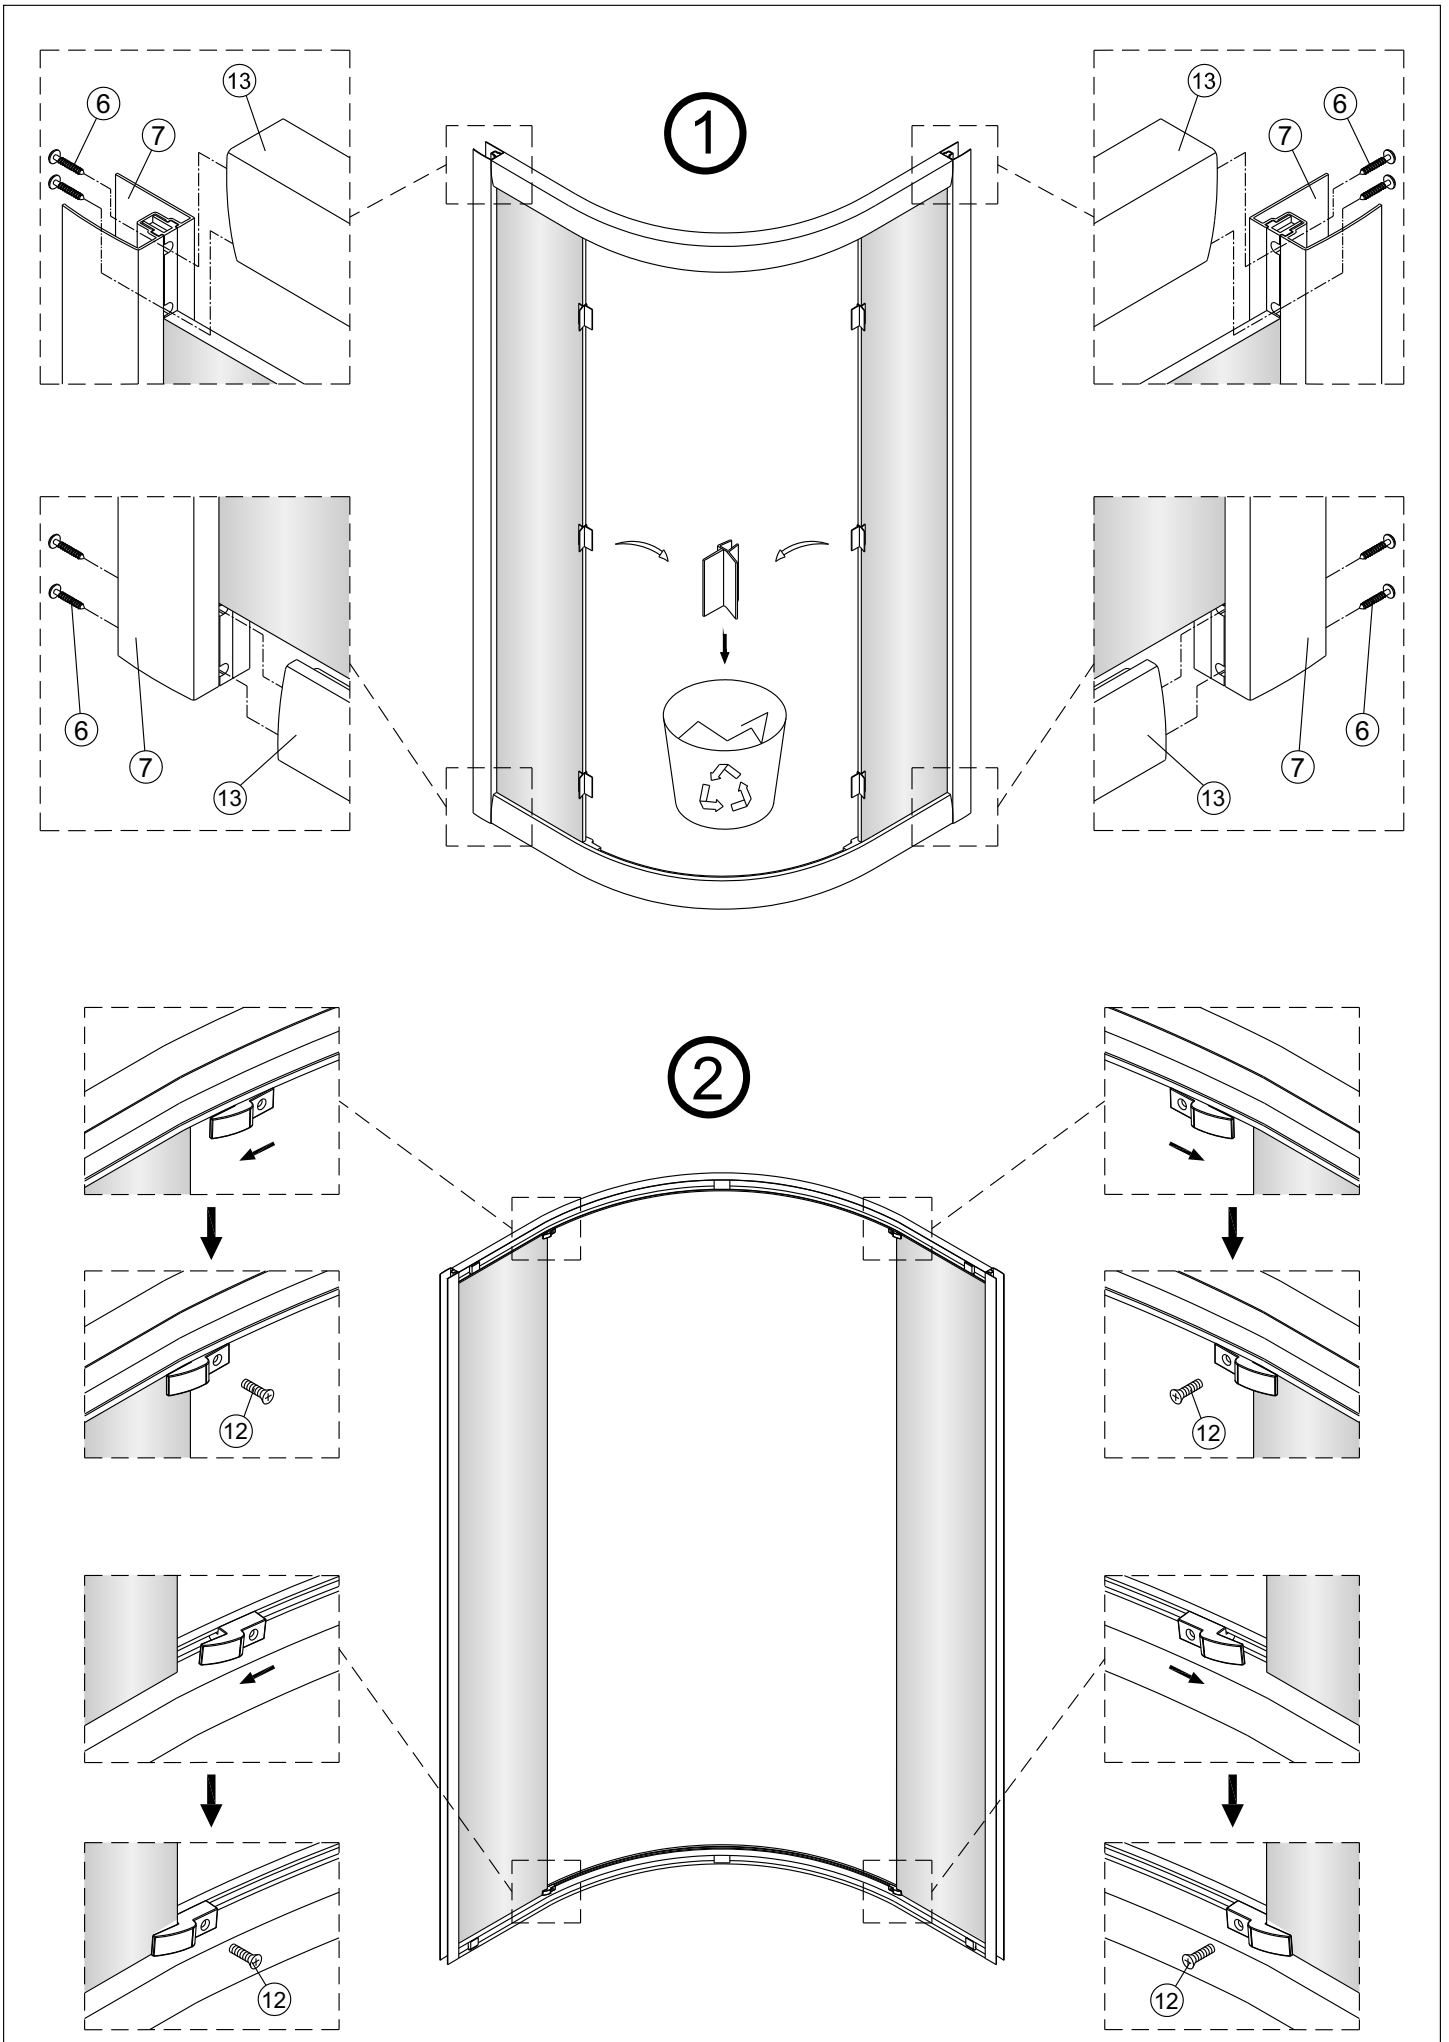


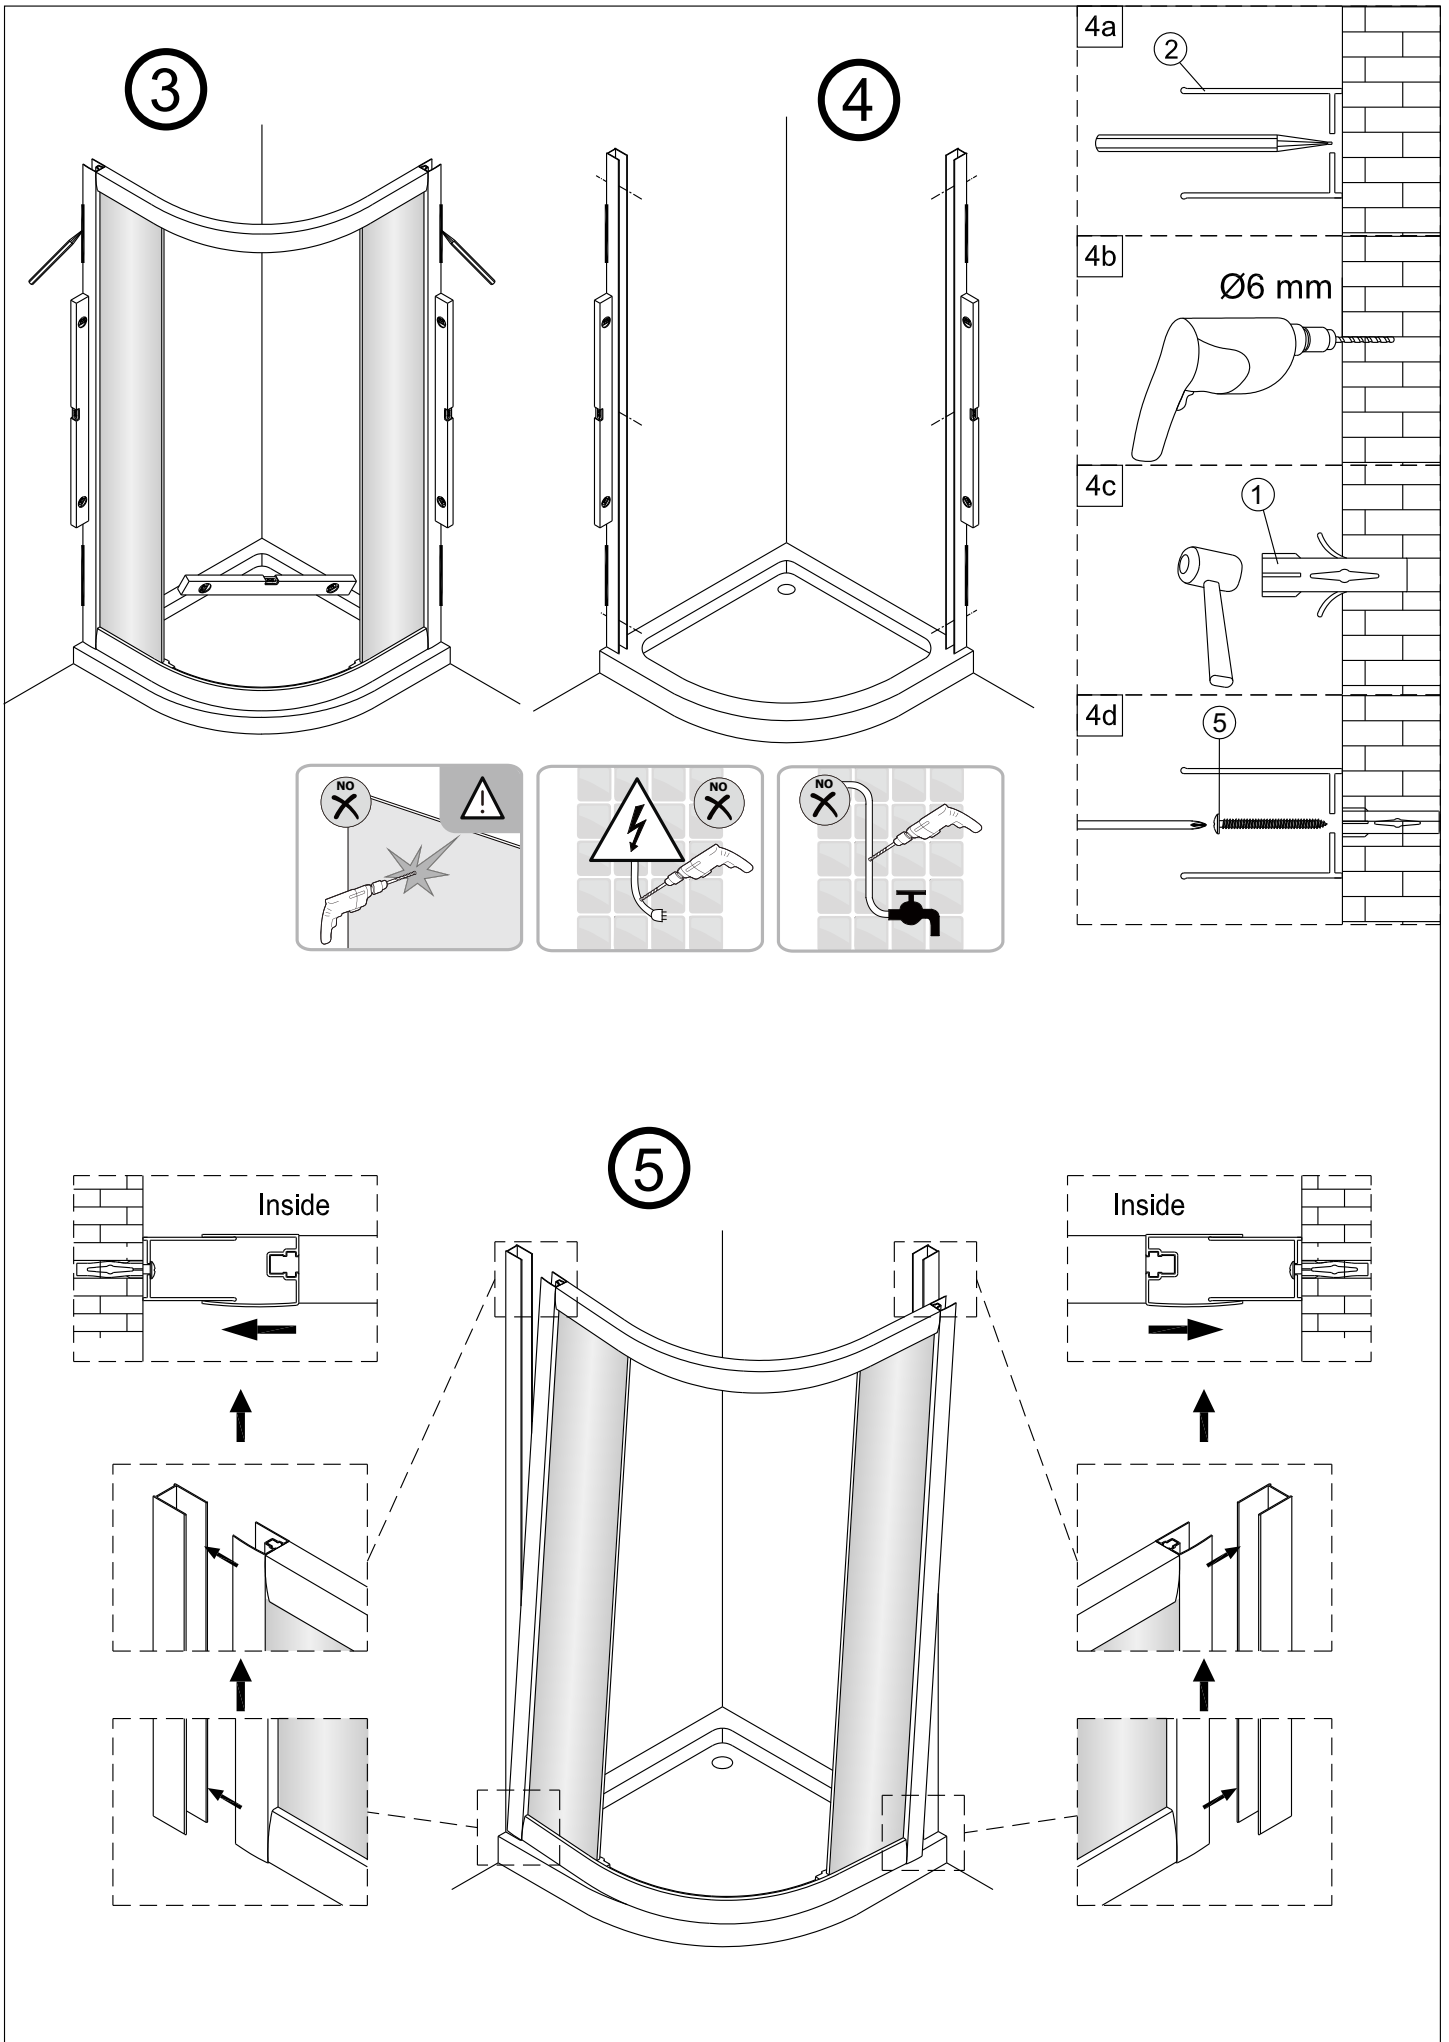


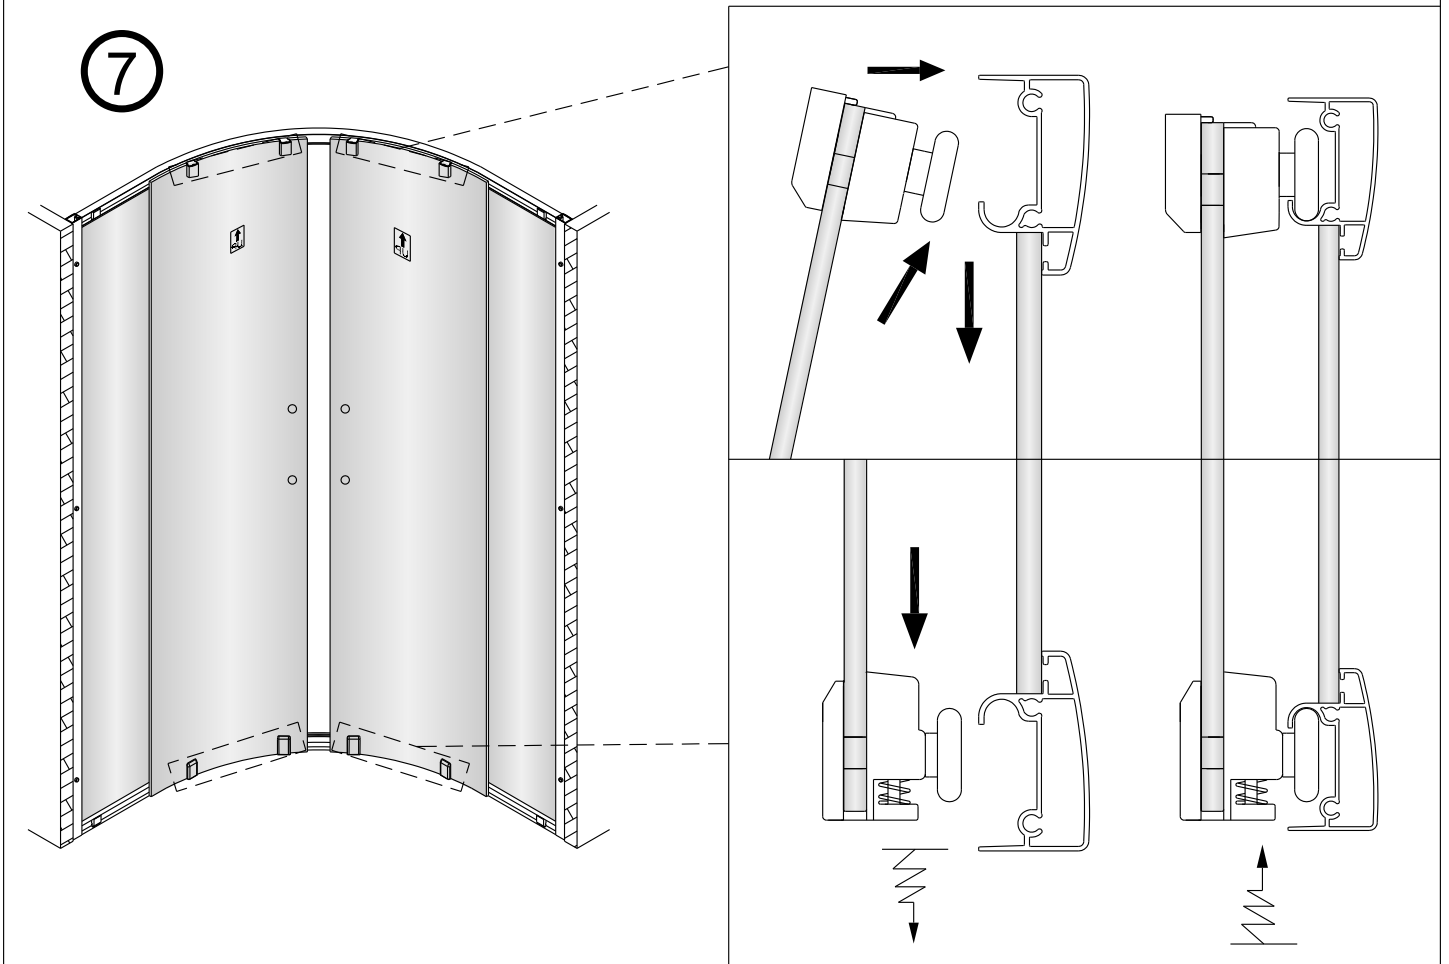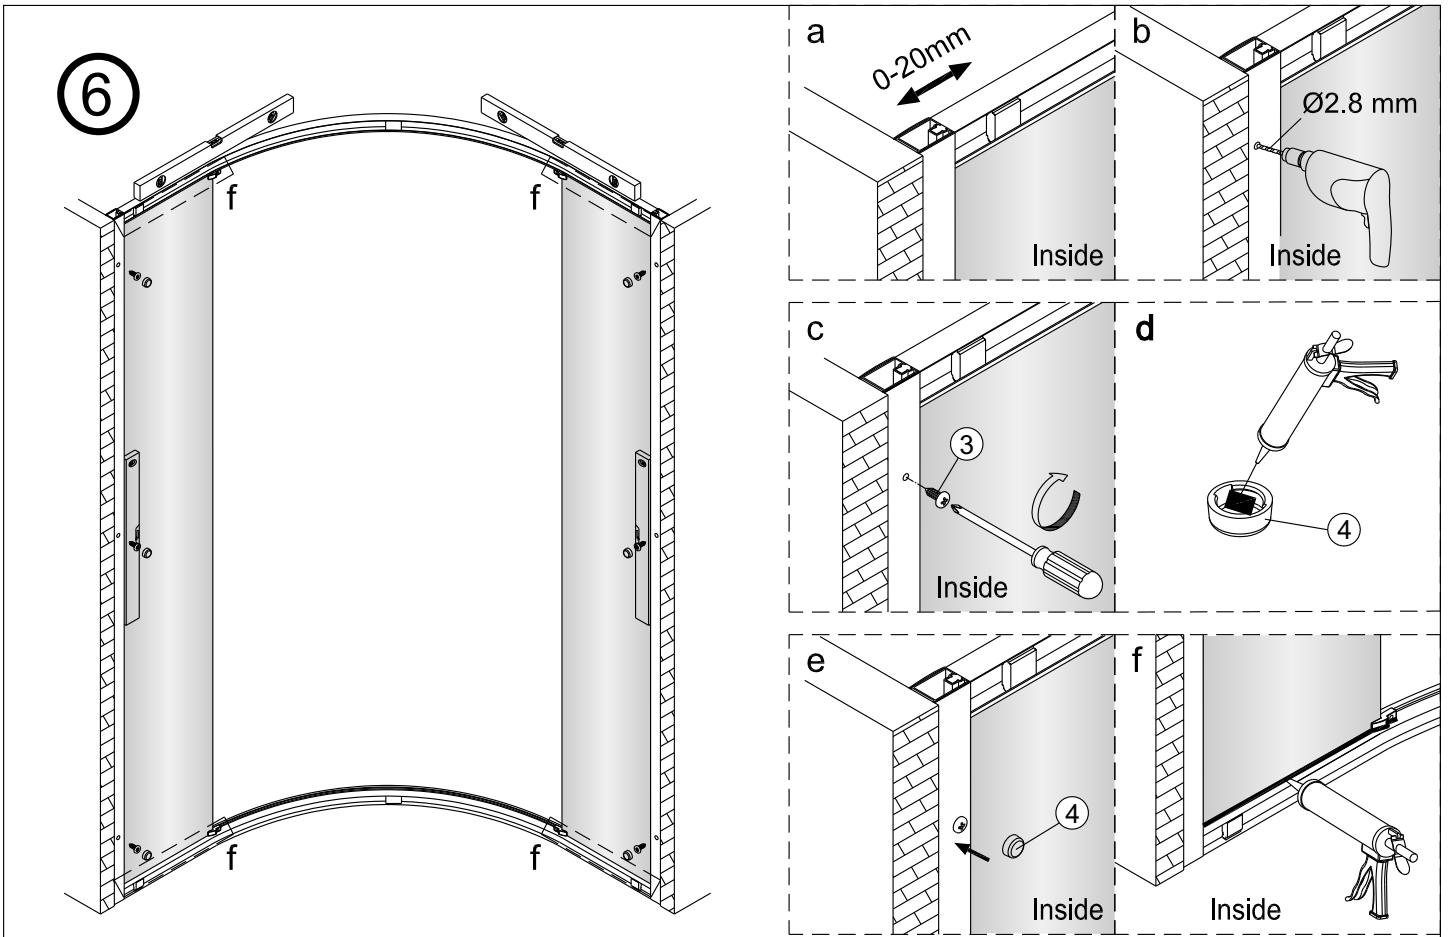


8



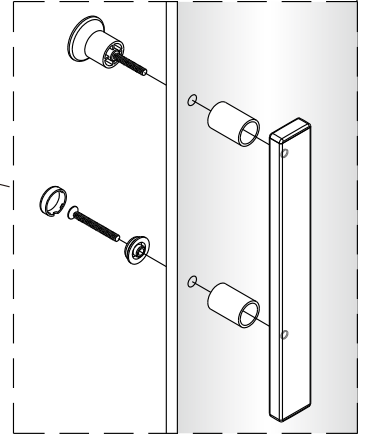
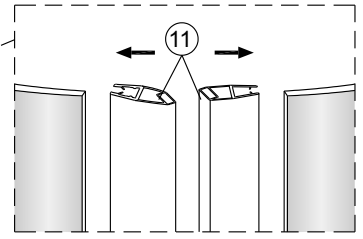
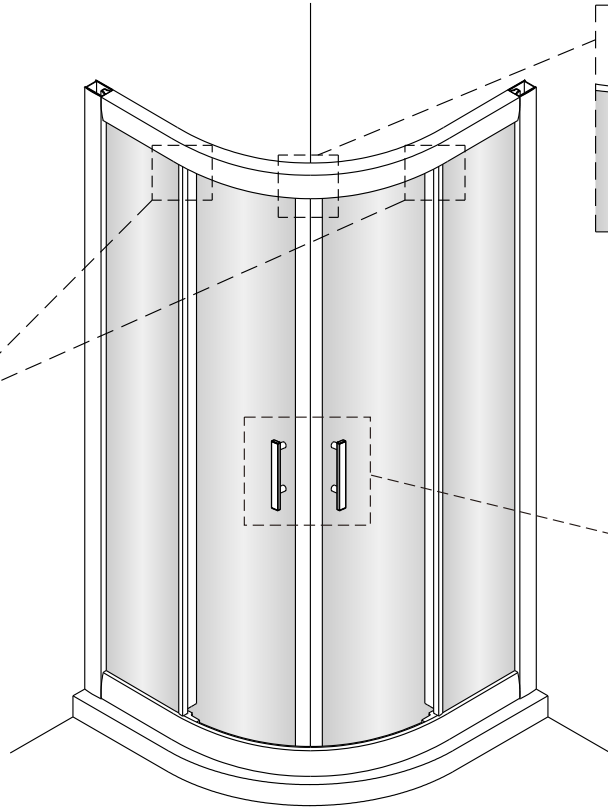
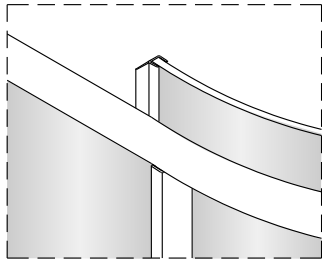
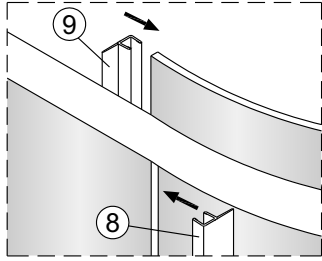



9

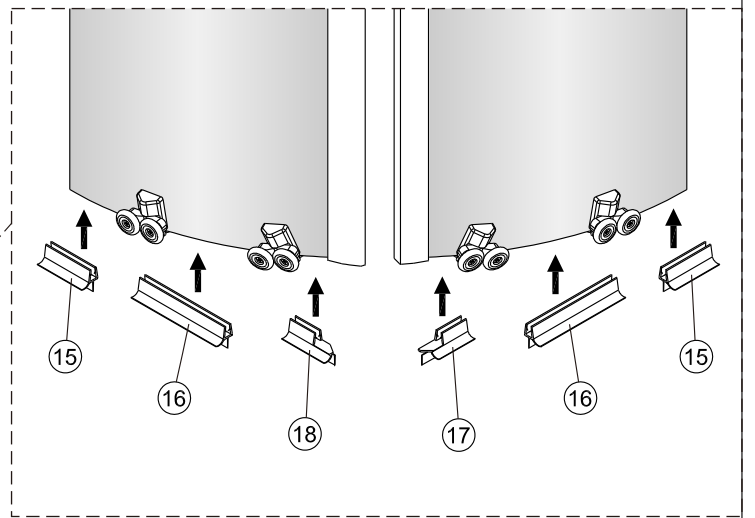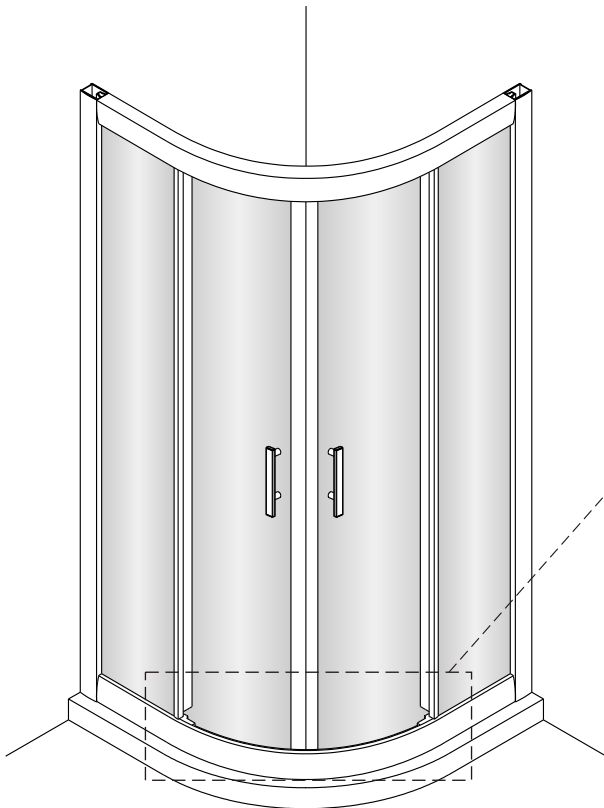

10

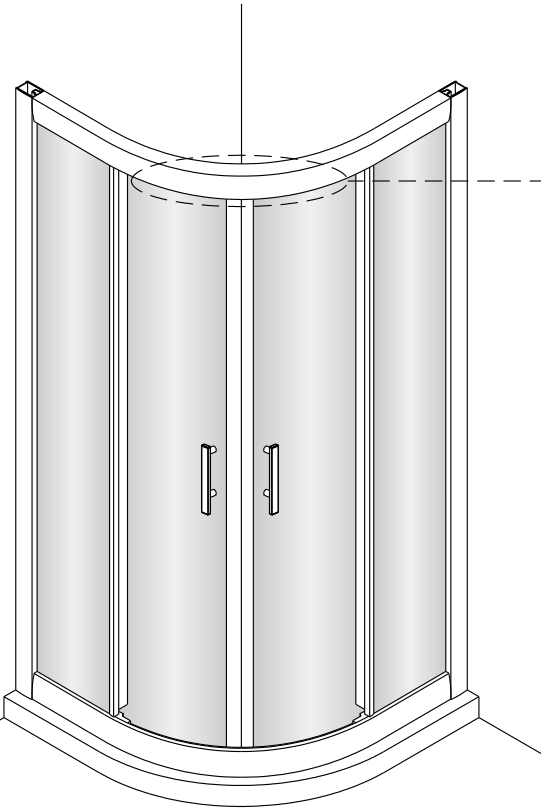

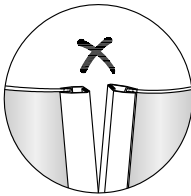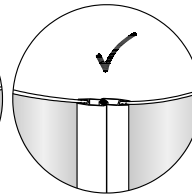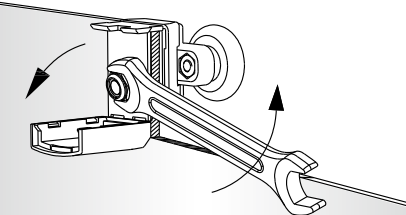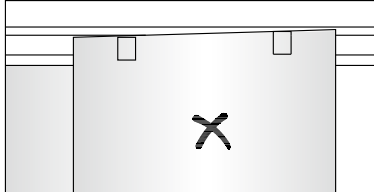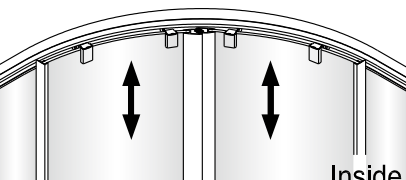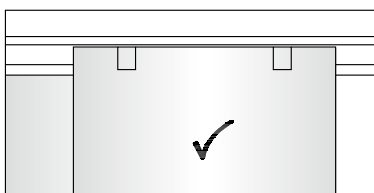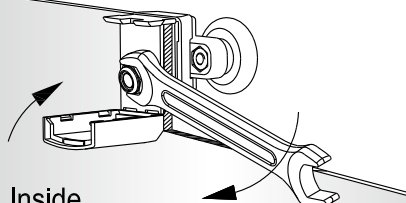Problem	Resolution
 	 <p>Inside</p>
	 <p>Inside</p>
	 <p>Inside</p>

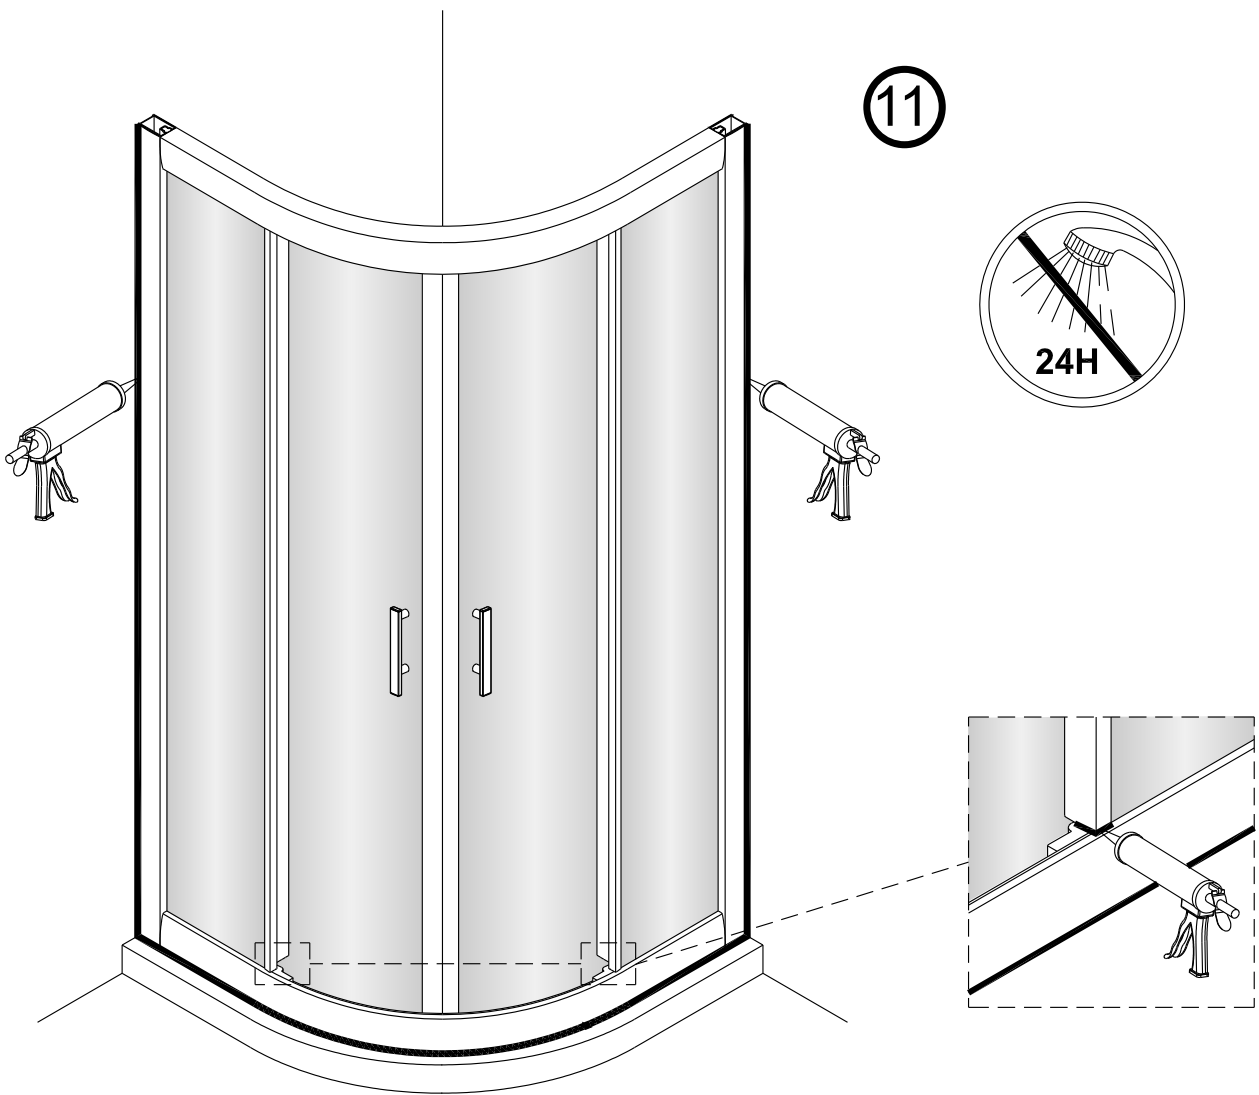

For further information contact:

OPR Ltd, 54-58 Hillside Rd, Private Bag 40902 Glenfield, Auckland 0747, New Zealand
Telephone (09) 444 3780, Email info@clearlite.co.nz.

December 2022