


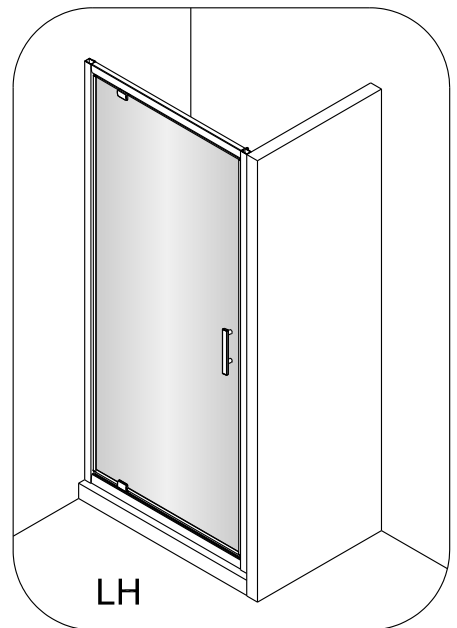
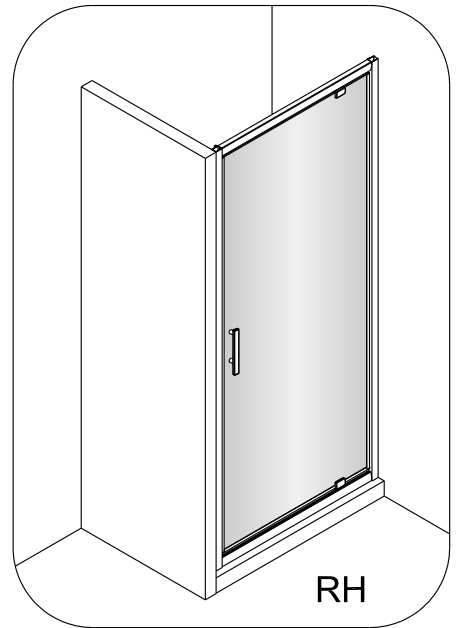





Pacific Square Alcove Shower Installation Instructions

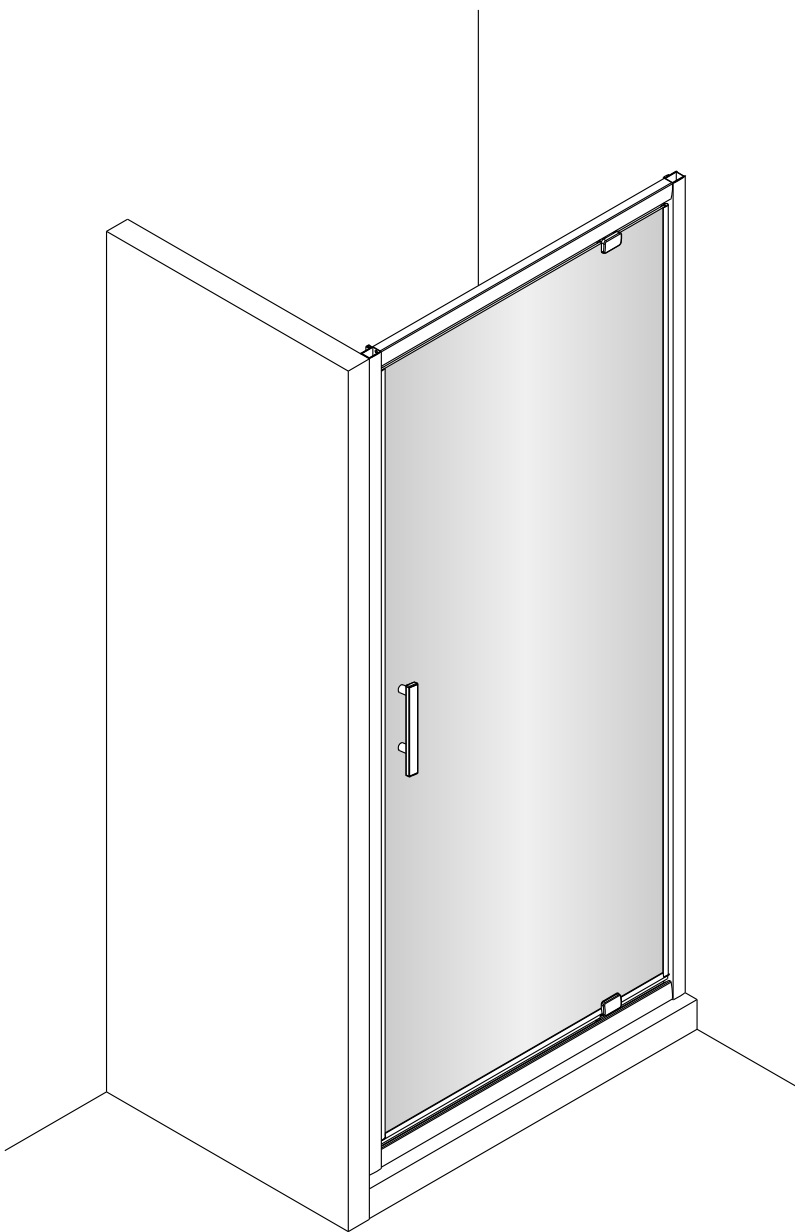


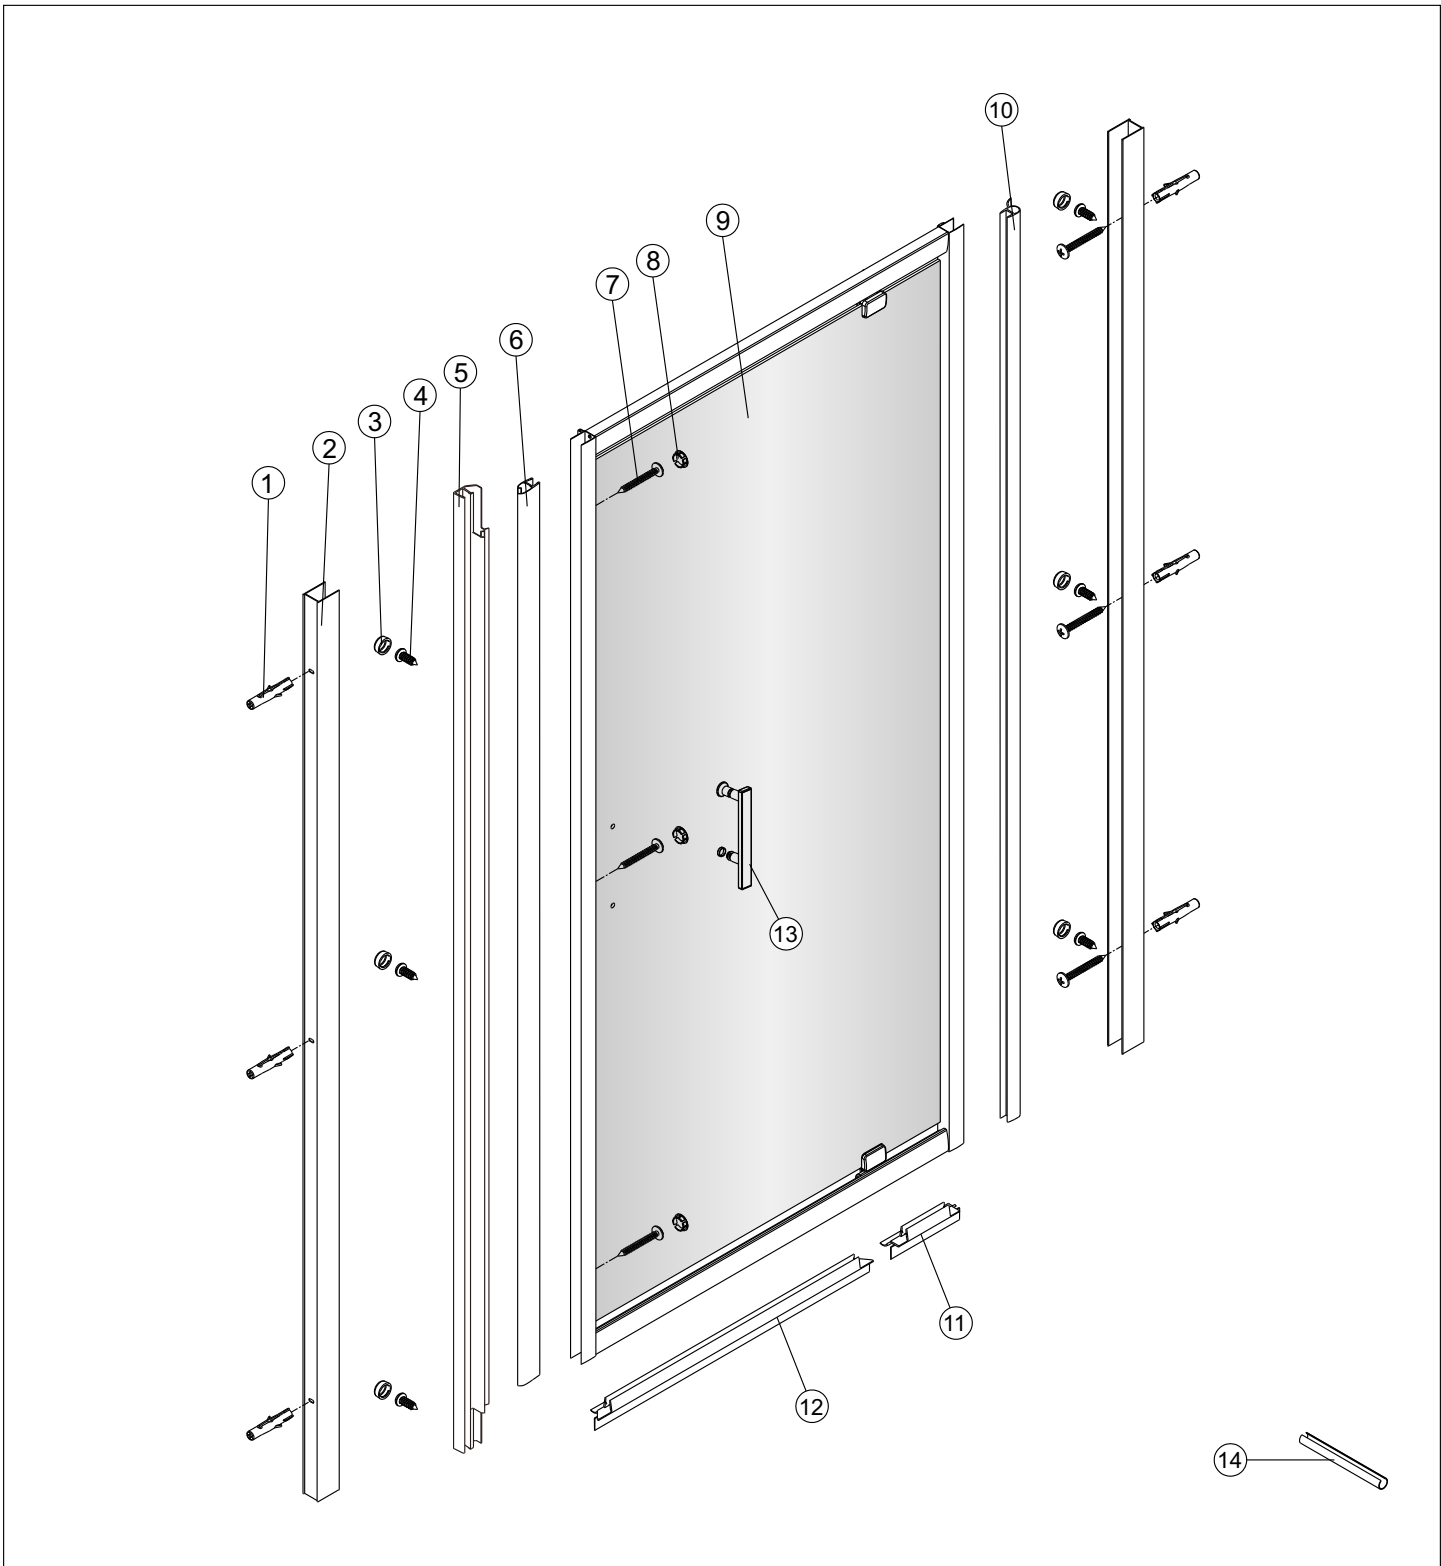


1 x6	2 x2	3 x6	4 x6 ST3.5X10	5 x1	6 x1	7 x6 ST4X40	8 x3	9 x1
10 x1	11 x1	12 x1	13 x1	14 x1				


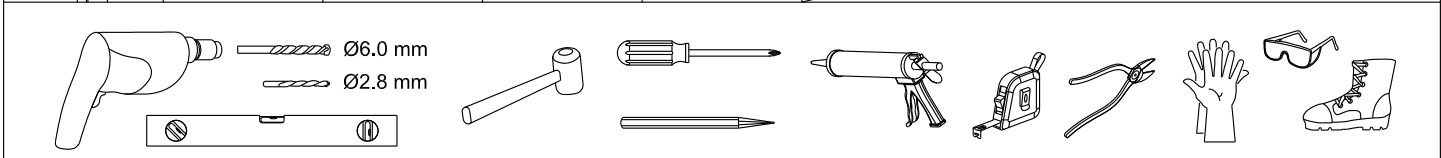


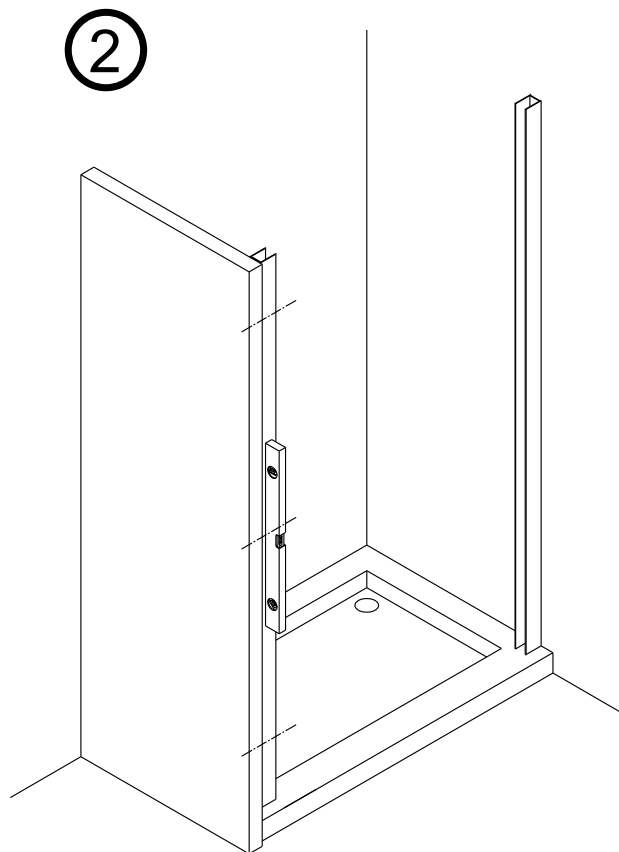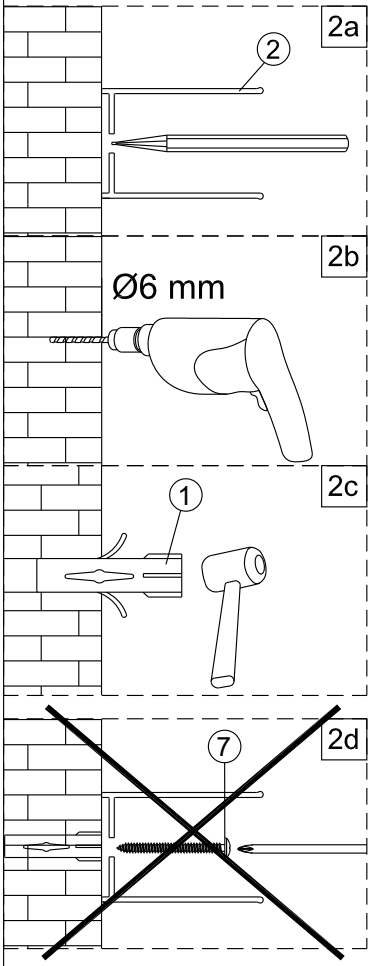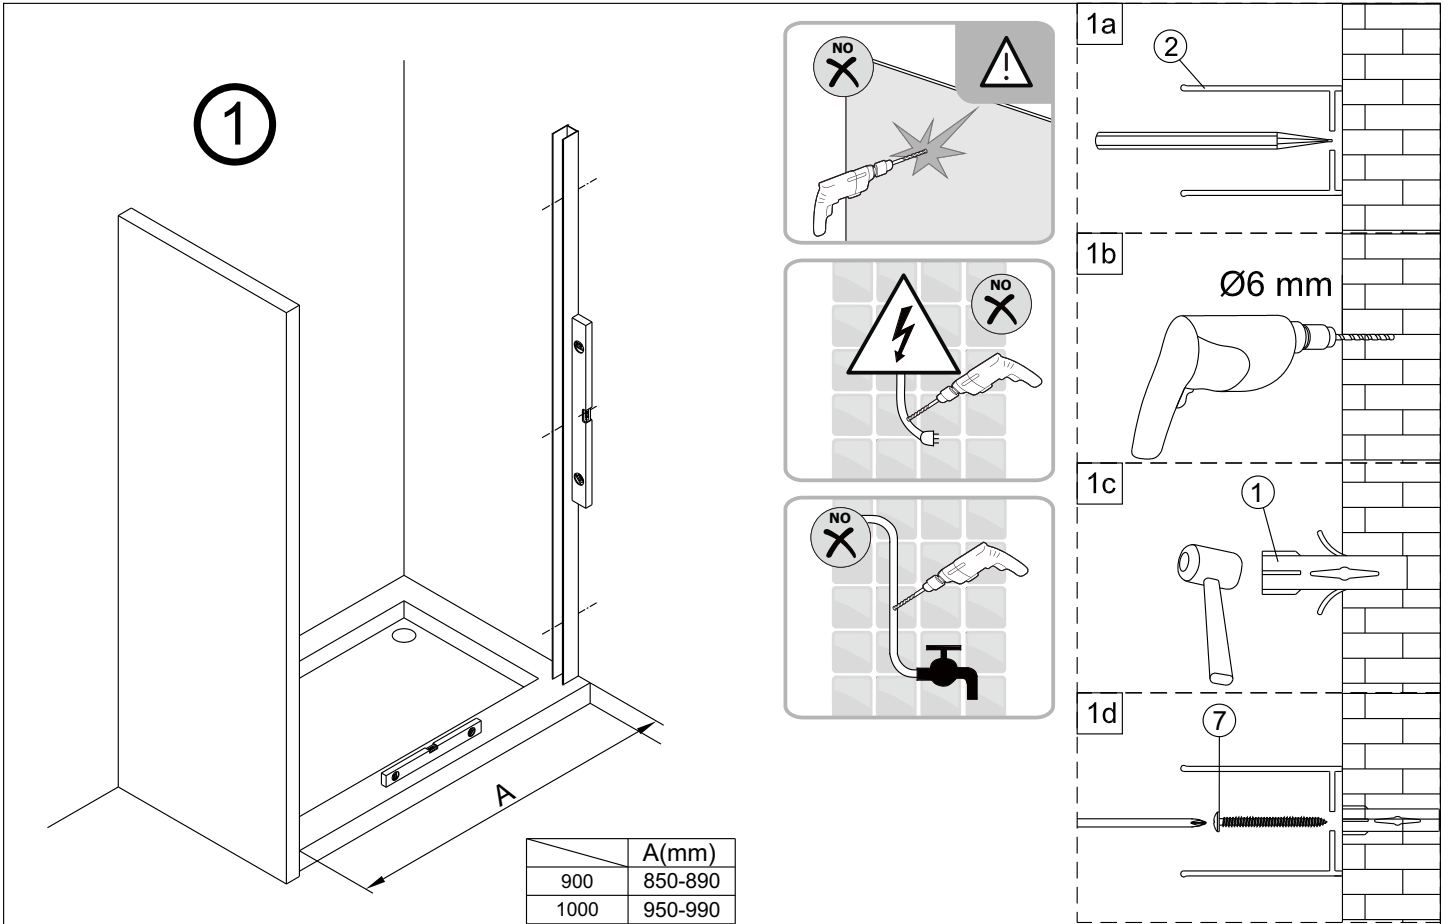



3

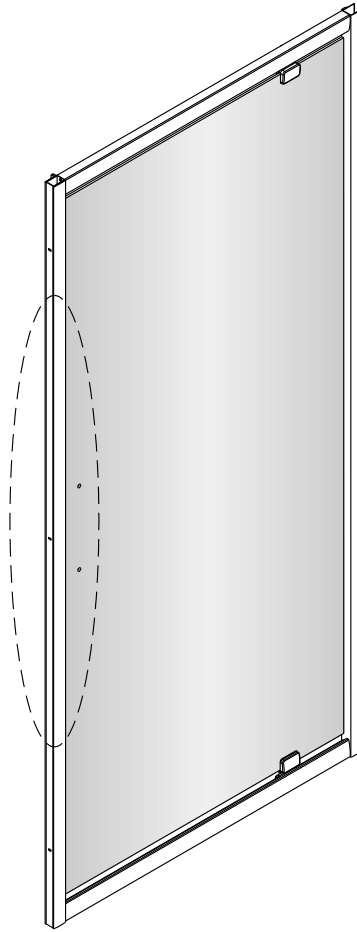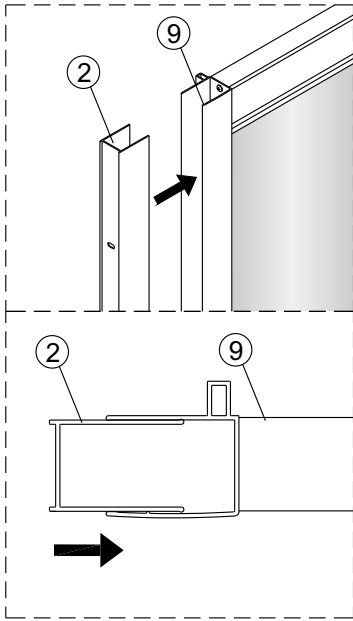




4

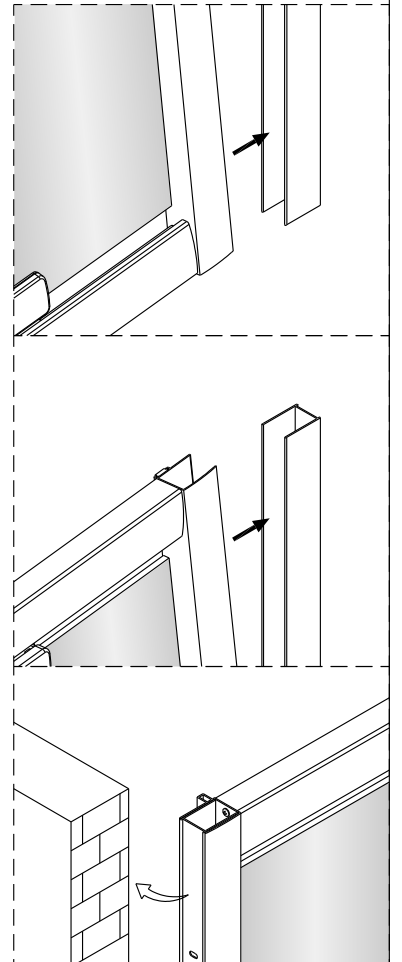
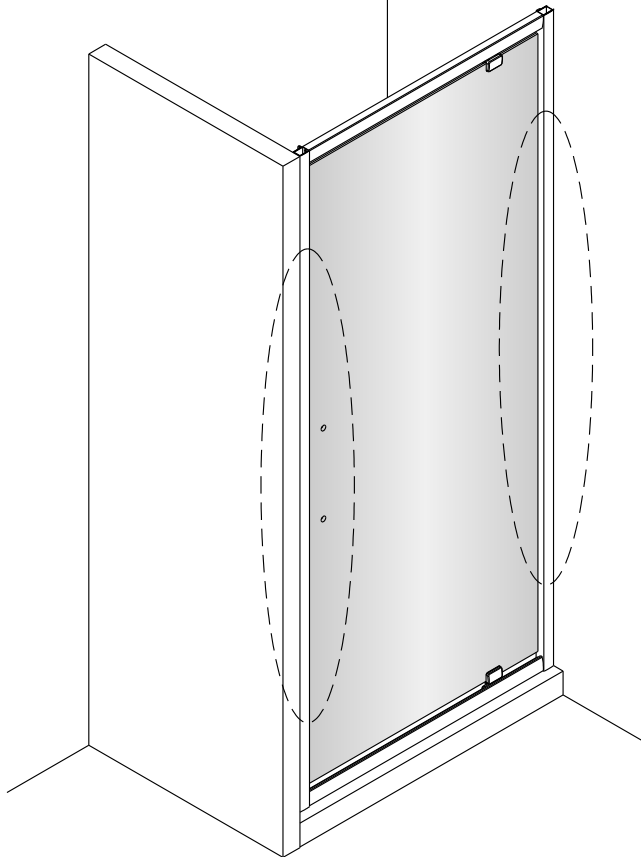





5

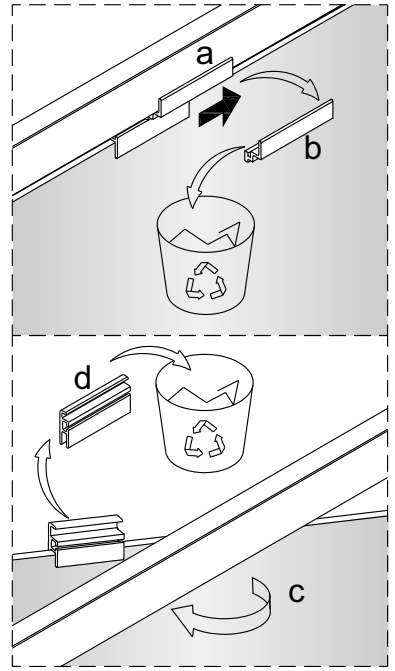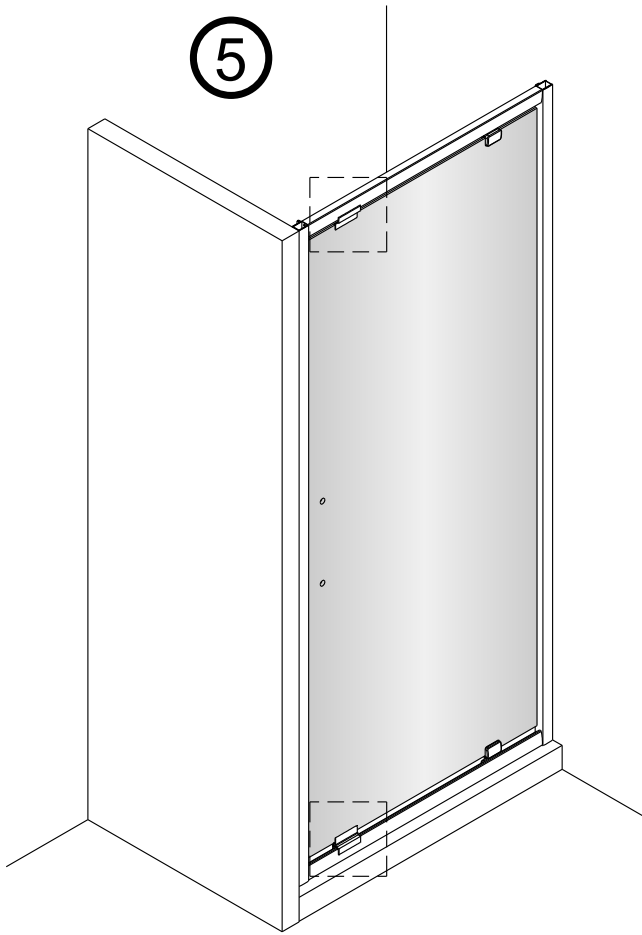


6

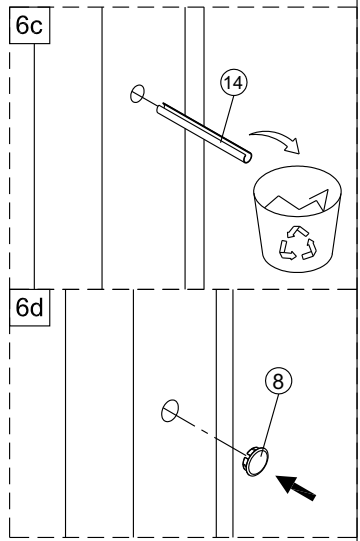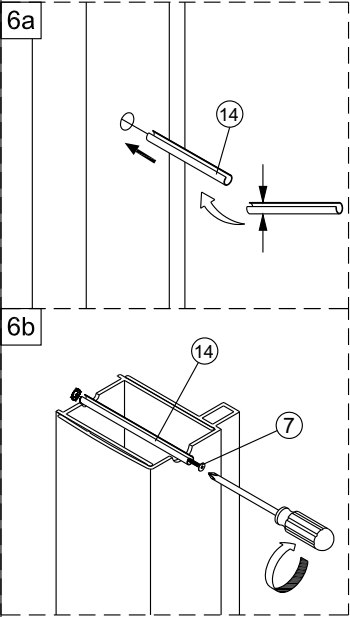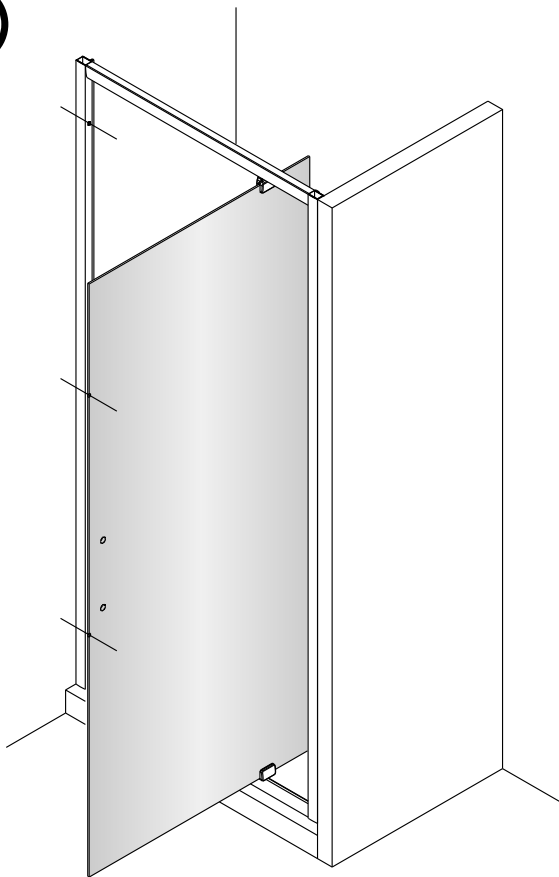


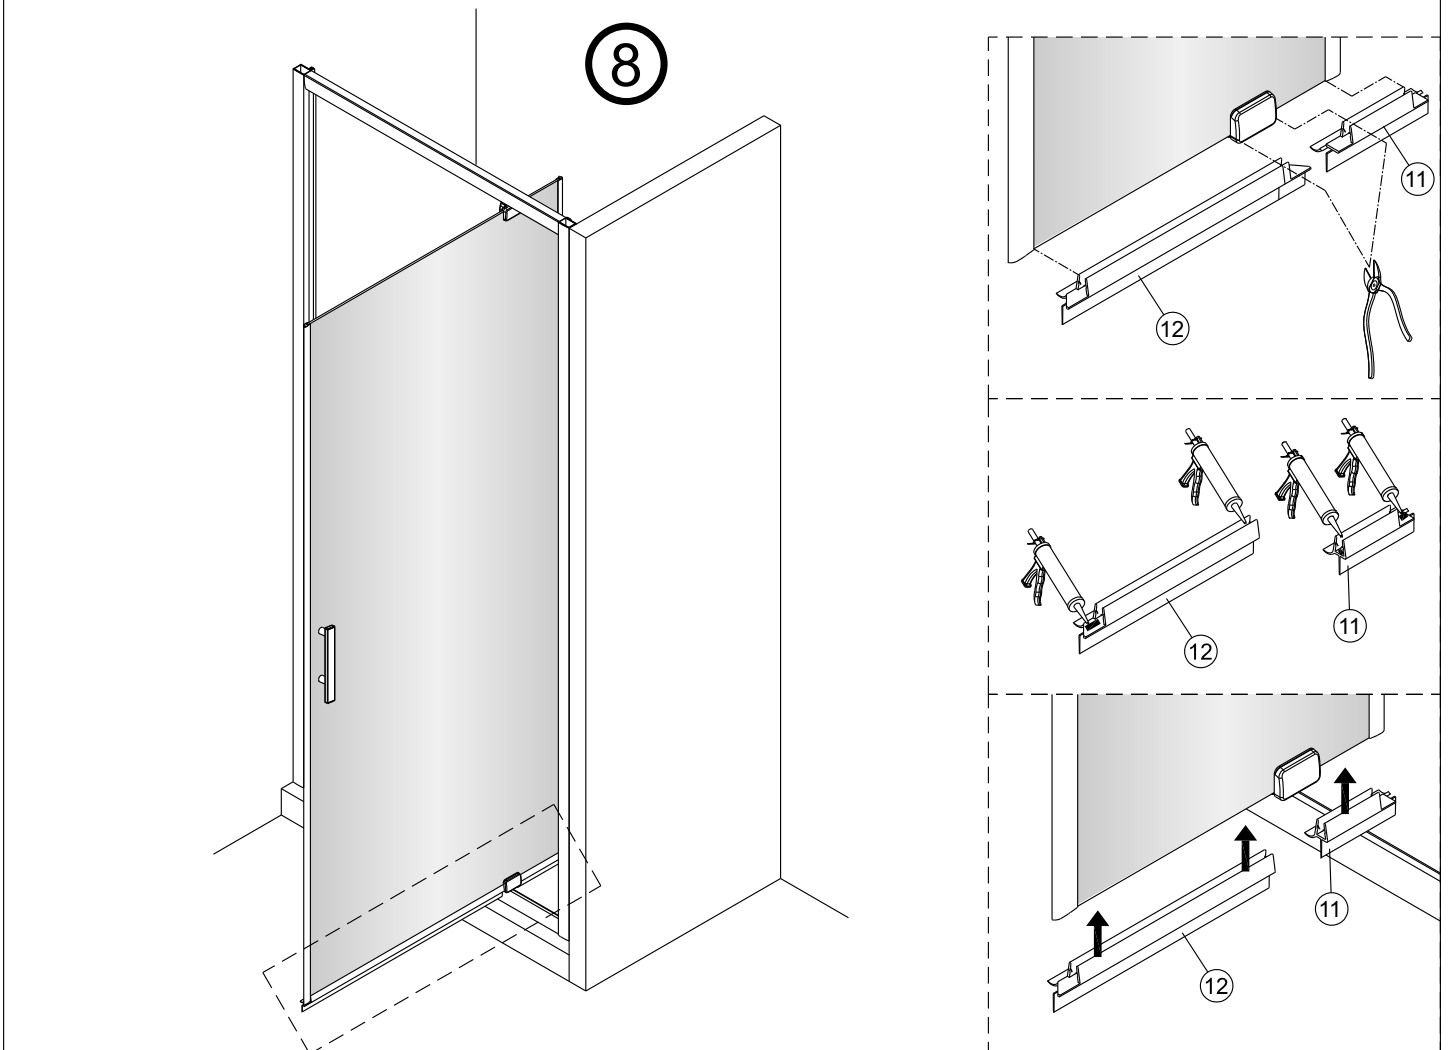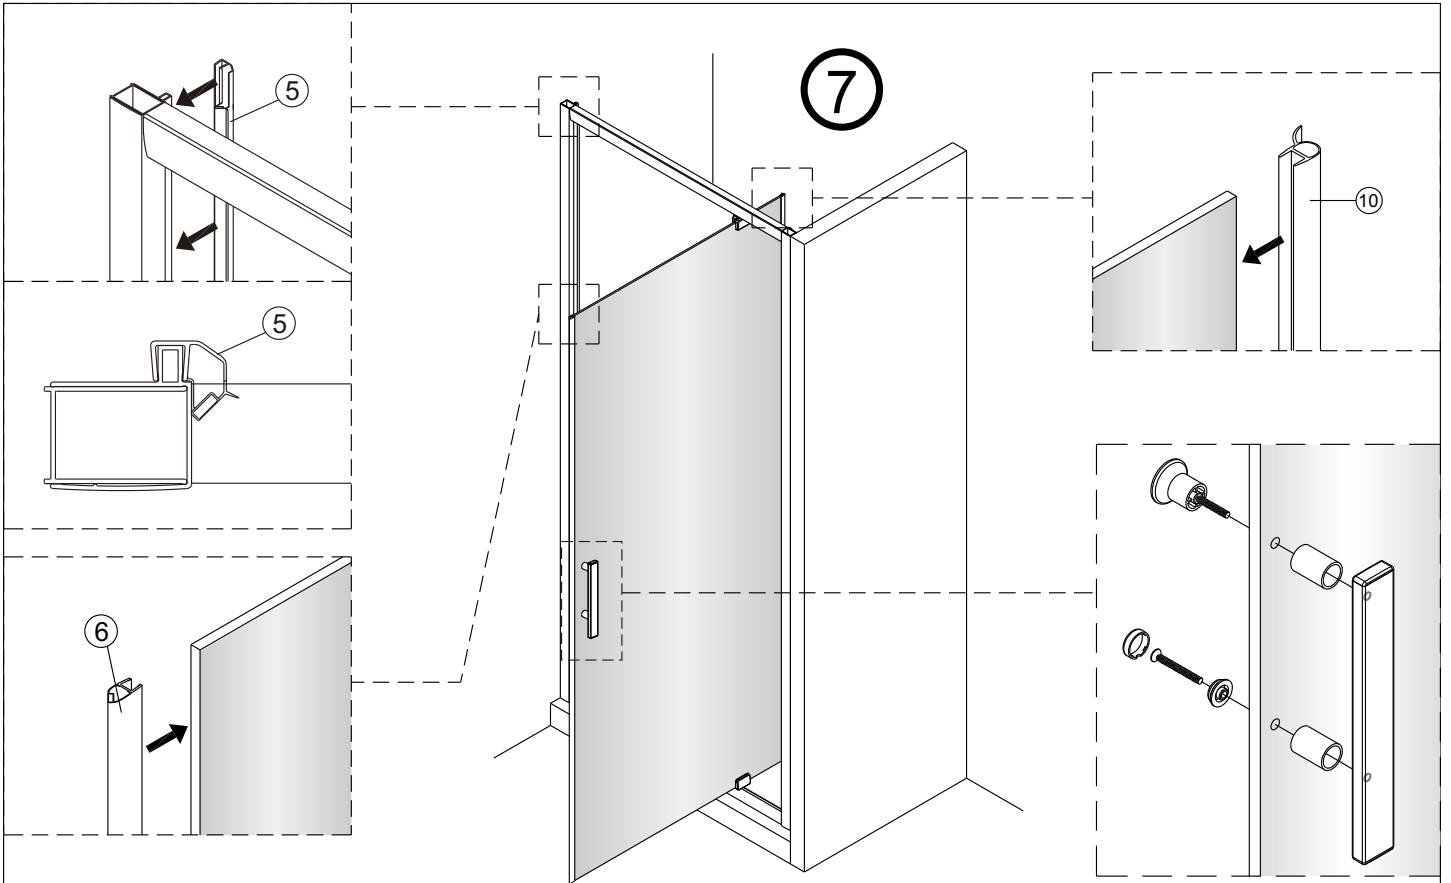

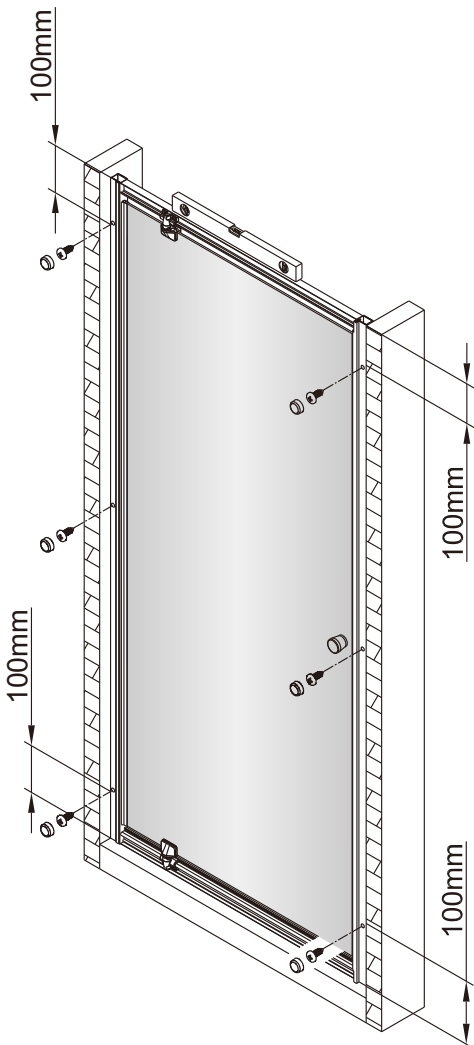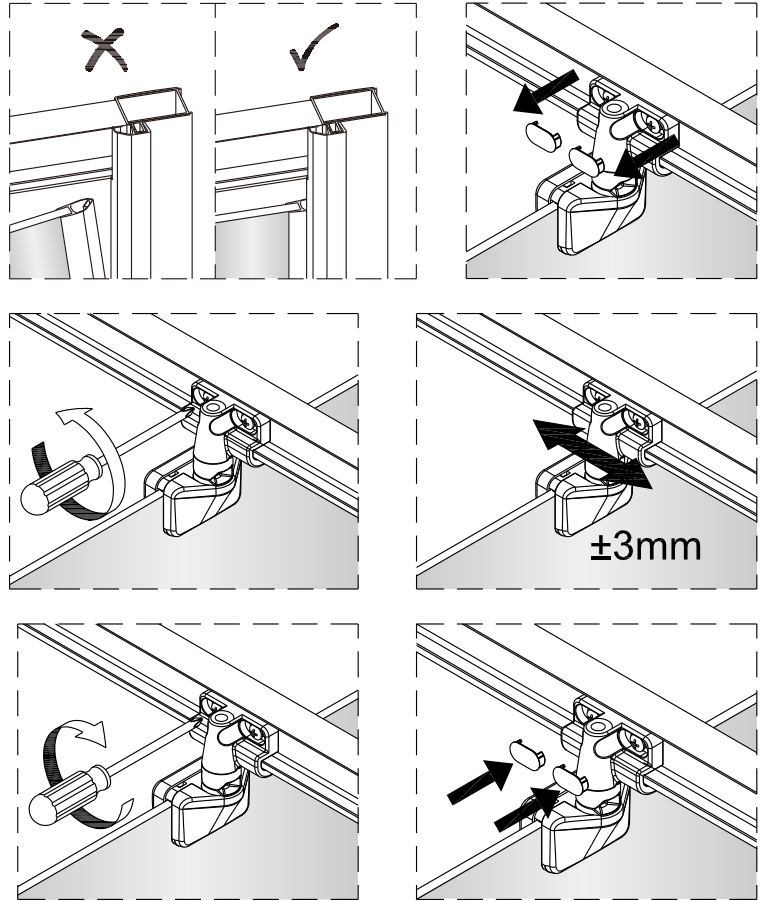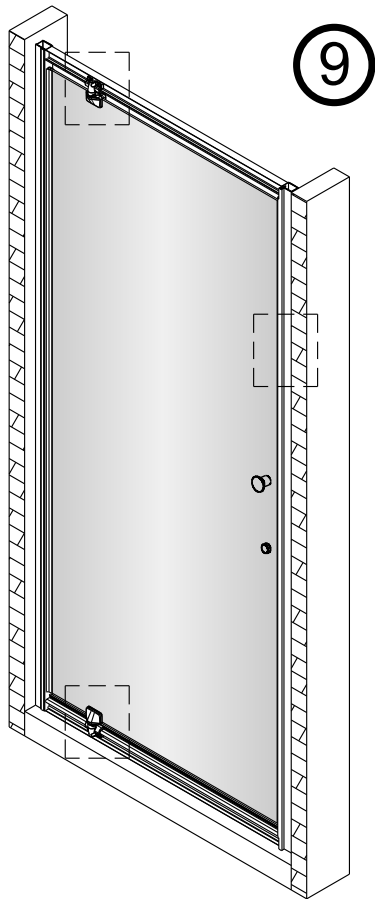

10

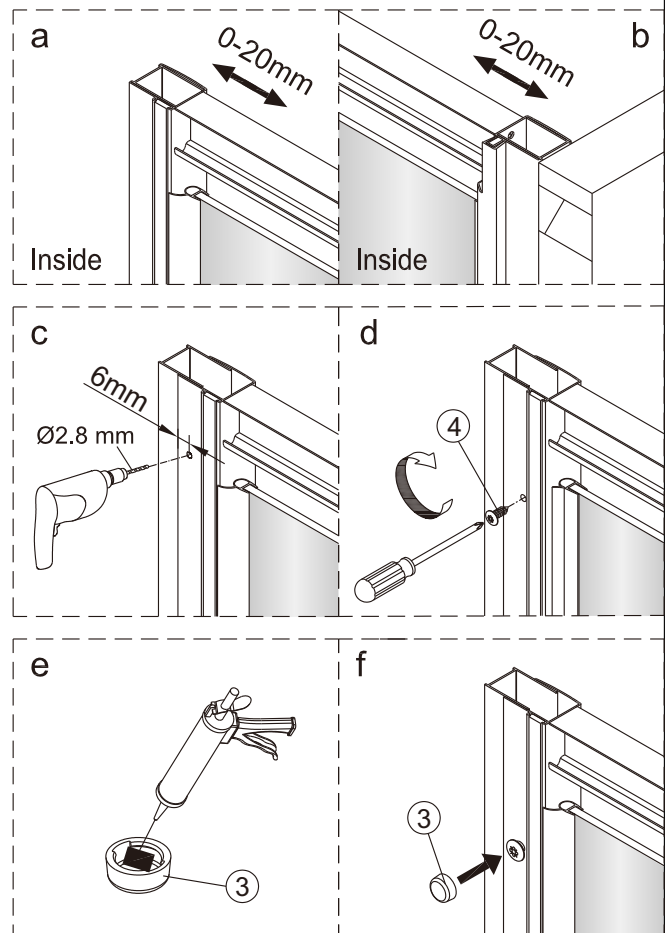

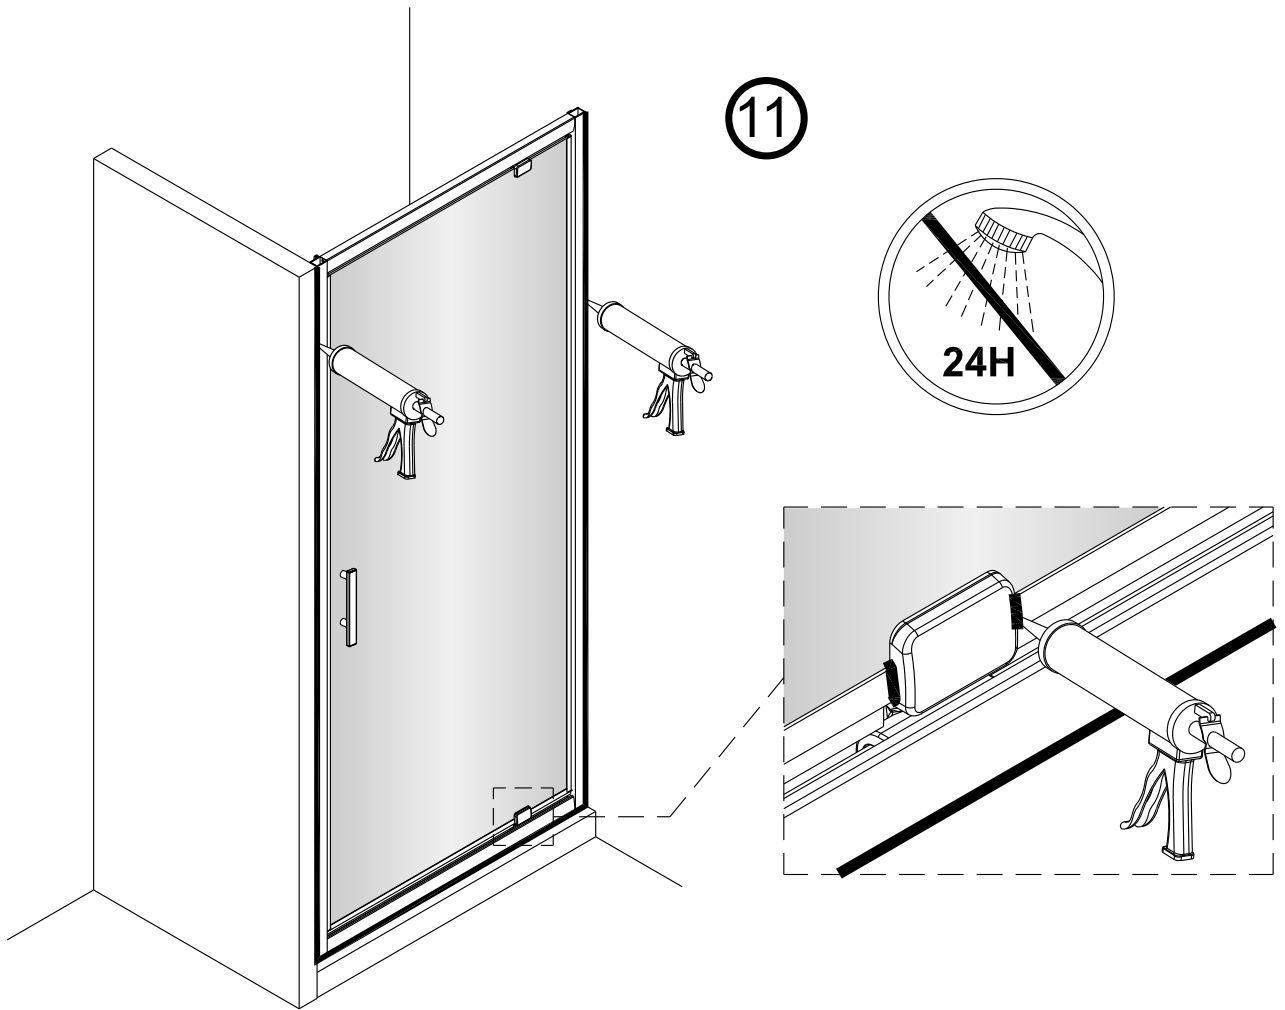

For further information contact:

OPR Ltd, 54-58 Hillside Rd, Private Bag 40902 Glenfield, Auckland 0747, New Zealand
Telephone (09) 444 3780, Email info@clearlite.co.nz.

December 2022