


Leiter's Sukkahs


DIAGRAM

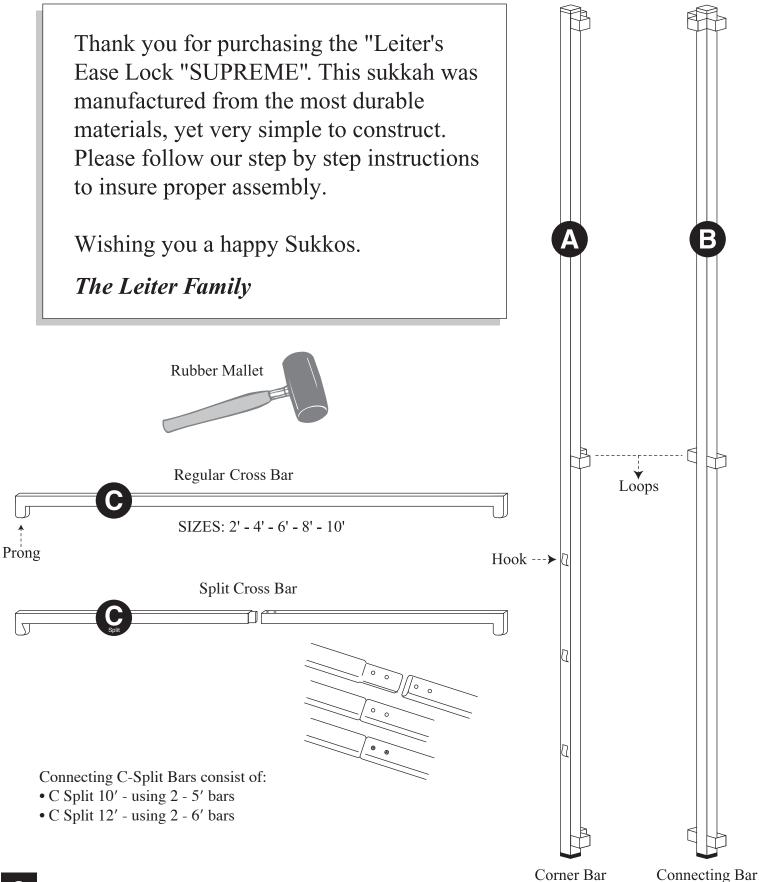


LIST OF CONTENTS


Fabric Bag	Box A	Box B	Box C	Mats (Optional)
4' x 6'	4-A	5-C4'	6-C6'	1-4'x6'
6' x 8'	4-A	5-C6'	6-C8'	1-6'x8'
8' x 8'	4-A	5-C8'	6-C8'	1-8'x8'
8' x 10'	4-A	5-C8'	6-C10'	1-8'x10'
8' x 10'*	4-A	5-C8'	6-C split 10'	2-5'x8'
8' x 12'	4-A + 2-B	6-C8'	12-C6'	2-6'x8'
8' x 16'	4-A + 2-B	9-C8'	9-C8'	2-8'x8'
10' x 12'	4-A + 2-B	6-C10'	12-C6'	2-6'x10'
10' x 12'*	4-A + 2-B	6-C split 10'	12-C6'	2-5'x12'
10' x 16'	4-A + 2-B	6-C10'	12-C8'	2-8'x10'
10' x 16'*	4-A + 2-B	6-C split 10'	12-C8'	4-5'x8'
10' x 20'	4-A + 2-B	9-C10'	9-C10'	1-8'x10' + 2-6'x10'
12' x 16'	4-A+4-B+1-C split	12-C8'	11-C6'	2-8'x12'
12' x 20'	4-A+4-B+1-C split	12-C10'	11-C6'	2-6'x12' + 1-8'x12'
12' x 24'	4-A+6-B+1-C split	18-C8'	11-C6'	3-8'x12'

^{*} These 3 sizes may come in these configurations.

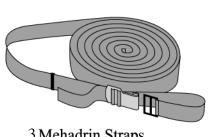





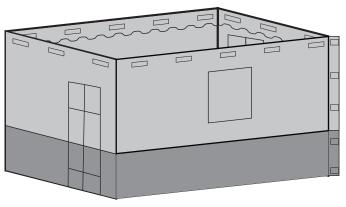

Please take in consideration that our Sukkah is designed with the door on the right side of the short wall.

ASSEMBLY INSTRUCTIONS

FRAME ASSEMBLY: 4' x 6' thru 8' x 10'

NOTE:

To prevent DAMAGE to your new EASE LOCK SUKKAH, we highly recommend:

- 1. Ensure that the prongs on the ends of the bars are fully inserted into their sockets
- 2. Complete steps 1 through 4, (building the entire frame all at once,) without leaving the frame standing incomplete.

Please connect C-split bars before starting to build your Sukkah.


- 1. Lay out the base of your Sukkah using (C) crossbars, prongs facing upwards. A 4', 6', 8', and 10' wall use 1 (C) crossbar of that size length for each wall base as shown in step #1.
- 2. Insert loop of corner bars (A) into prongs of crossbars (C) to connect the base of you Sukkah as shown in Step #2. Be sure to push sockets down fully.


NOTE: White tips should be on top of the (A) bar; black tips should be on bottom of the (A) bar. The hooks for the straps should be on the bottom half.

3. Insert top crossbars on width and length into top loops of corner (a) bar, prongs facing downwards as shown in Step #3. Tap with mallet to make sure its firmly in till the end.

NOTE: Door side (width) does not get center crossbar.

- **4.** Insert center crossbars on width and length into center loops of corner (a) bar, prongs facing downwards as shown in Step #4.
- **5.** Once the frame is up, proceed with the Mehadrin straps as shown on page 6.

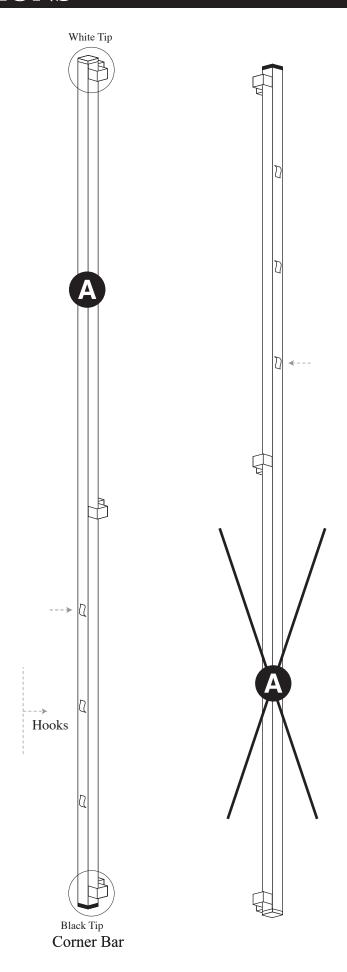

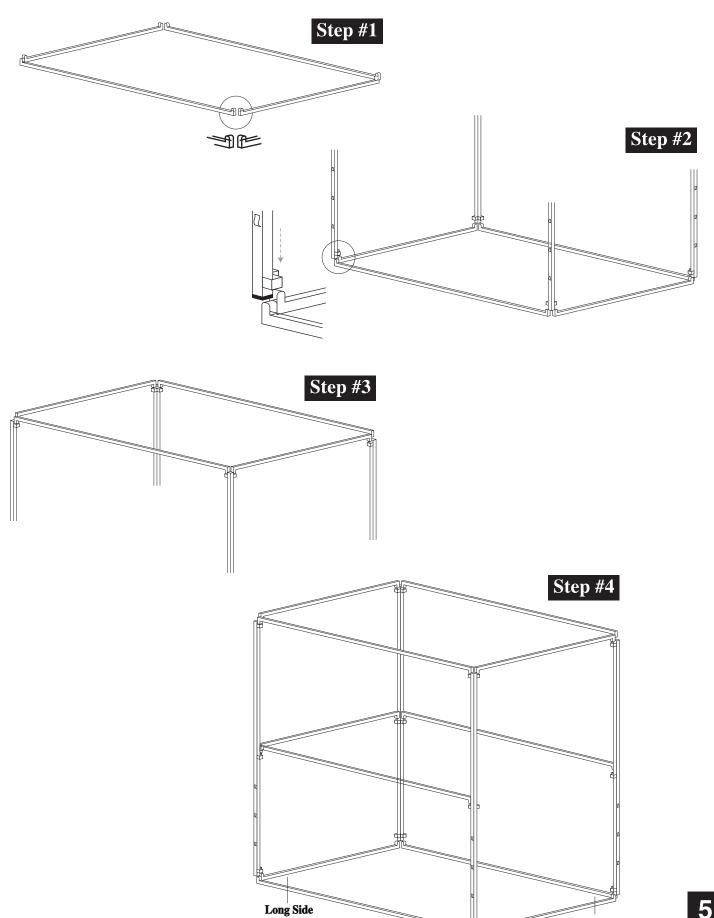

Short Side with Door

ASSEMBLY INSTRUCTIONS

FRAME ASSEMBLY:

8' x 12' through 12' x 32'

To prevent DAMAGE to your new EASE LOCK SUKKAH, we highly recommend:

Ensure that the prongs on the ends of the bars are fully inserted into their sockets

Complete steps 1 through 4, (building the entire frame all at once,) without leaving the frame standing incomplete.

Connect C-split bars before starting to build your Sukkah.

Lay out the base of your Sukkah using (C) crossbars, prongs facing upwards (see chart for bar sizes needed)

Insert loop of corner bars (A) into prongs of crossbars (C) to connect the base of you Sukkah see Step #2. Be sure to push sockets down fully.


Continue by inserting loops of (B) bar into prongs of (C) bars see step #3 – make sure the third socket on top of bar faces inside of the sukkah see step #4 Insert the connecting bar on top of the Sukkah to connect the two (B) bars see step #4

Note: For (A) & (B) bars white tips should be on top of bar; black tips should be on bottom of bar. The hooks for the straps should be on the bottom half.

Insert top crossbars on width and length into top loops of upright bars, prongs facing downwards see step #4. Tap with mallet to make sure its firmly in till the end


NOTE: Door side (width-short side) does not get center crossbar.

Insert center crossbars into center loops of upright bars, prongs facing downwards see step #5

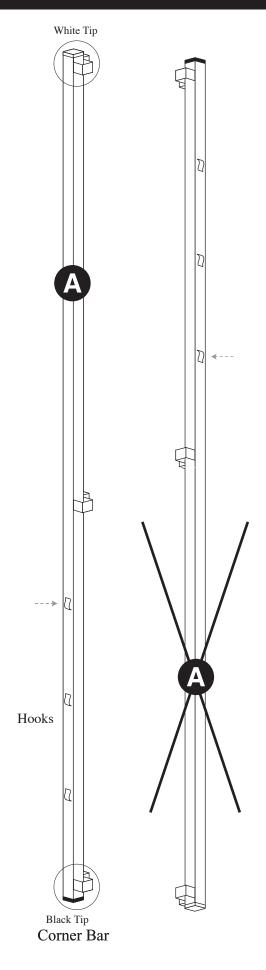

FRAME ASSEMBLY:

8' x 12' thru 12' x 24'

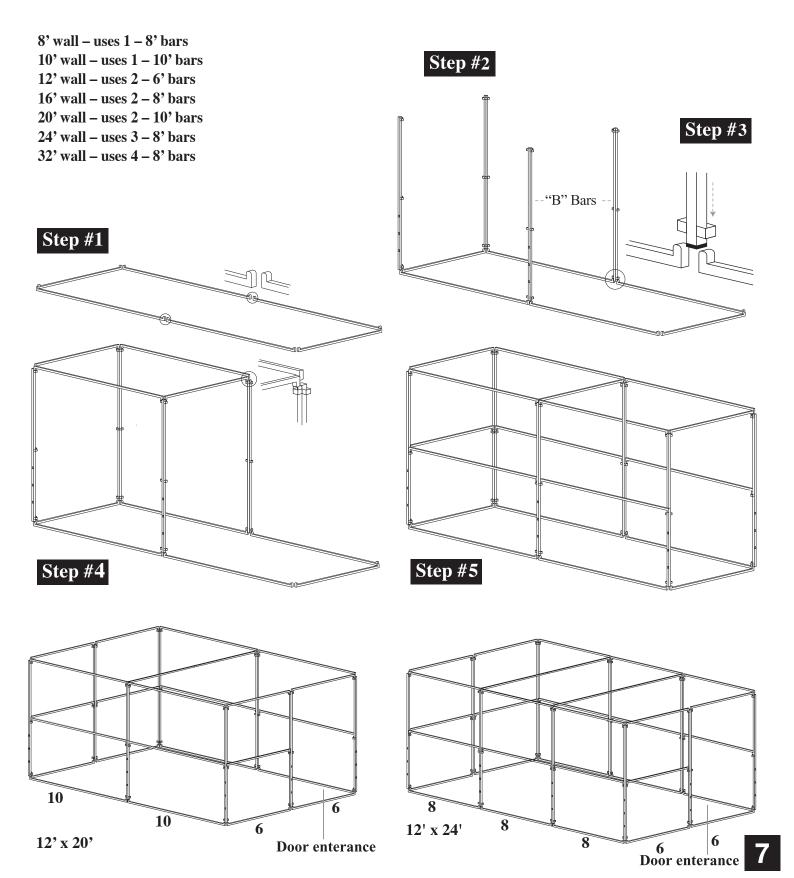


ASSEMBLY INSTRUCTIONS

(OPTIONAL DOOR SET SOLD SEPERATLY)


DOOR INSTALLMENT:


- 1. Place Door Bar (D) diagonally between top & bottom bars, loop facing left side of outside the Sukkah (See diagram).
- 2. Straighten Door Bar until it snaps into place.
- **3.** Connect the Crossbar from Door Set into Door & Corner Bar loops.

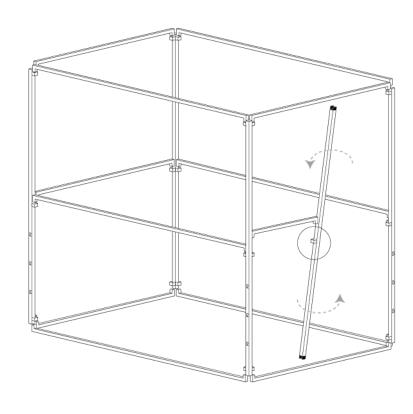


MEHADRIN STRAPS ATTACHMENT:

- 1. Insert Straps into Hooks (on Corner Bars) starting on door side Corner Bar, continue around the 3 walls of Sukkah. (Door wall remains clear).
- **2.** Stretch straps securely around the sukkah's three walls (for Halachic standards).
- 3. Repeat for all 3 Straps.

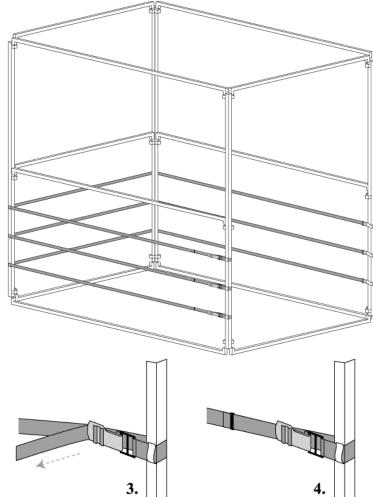

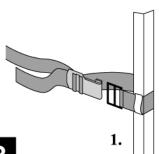

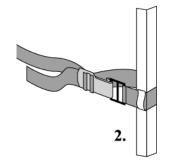

FABRIC ATTACHMENT

WORK FORM INSIDE SUKKAH. BEGIN VELCRO AT SIDE OF DOOR, DARKER PART OF FABRIC ON BOTTOM.

- **1.** Make sure cloth door is in position next to door area of sukkah frame.
- **2.** Tie velcro which are closest to the cloth door to the left corner bar.
- **3.** Attach fabric along the width s & lengths of the Sukkah, using the upper Velcro fasteners.
- **4.** Stretch cloth & fasten the lower and center Velcro fasteners

Wood beams assembly:

Adding your own wooden beams **not included in sukkah package**


We have added Velcro on top of the sukkah walls to mark for you where we recommend you place your wood supports, and to tie it down.

MATS AND BOOMBOO SCHACH INFORMATION

If you are using schach mat, lay it perpendicular to the supports and unroll it on the supports. We strongly recommend that you place additional pieces of wood on top of the mats to hold the schach mat down in the wind. These woods are not included in your Sukkah package. (You may purchase special mehadrin string to tie you mats down but please consult your Rabbi first).

If you are using bamboo poles for schach, place it perpendicular to the supports over the top of the Sukkah.

Do not hang any decorations from the mats. They are not designed to hold any weight. Decorations can be hung from the wooden supports or from bamboo poles.

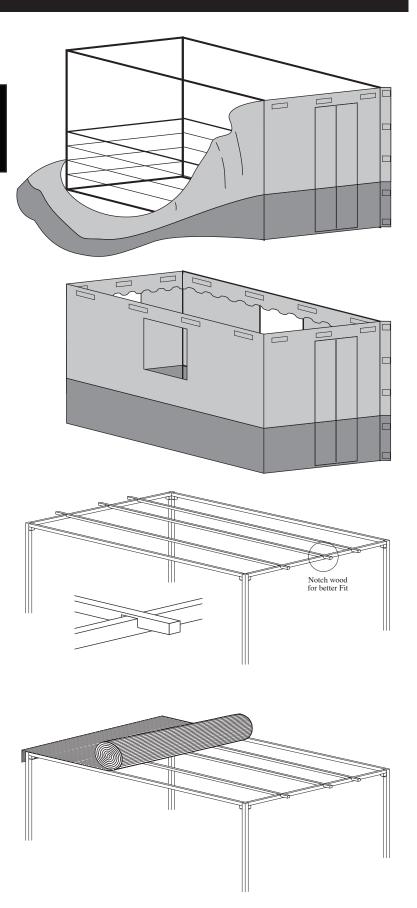





(888)6-SUKKAH