2008+ LED Strip Install Guide

This install guide is for 08+ Subaru Chassis installing the iWire LED Light Strip for their DCCDPro Spiider. If you have any questions during installation, please contact us. The finished product will look similar to the image below. The Grey insert is a template to help modify the bezel to fit the LED. The left is the 08-14 style, and the right is 15+ WRX.





The first step is to remove the blank roller.



Using a small screwdriver push the tabs in.



It will come out of the back. This may take a touch of force to get it to come free.




The next step is to mark where the opening will be slightly enlarged to fit the LED. Place the holder in the opening and the then mark the spot where you the trim panel is still seen.





With a basic file sand the opening to make it larger. You could do this with a Dremel, but the plastic is fairly soft and doesn't require much force.

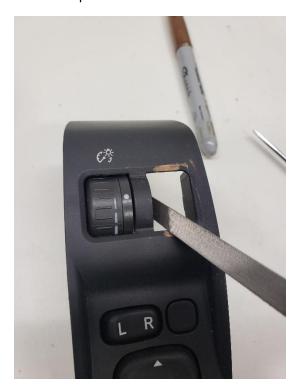

This is approximately what it'll look like when enlarged once you've filed it.



Insert the faceplate with the larger rib on the outside.



Then slot in the LED into the back. You can use a dab of glue to secure it to the mount.

