



















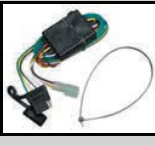
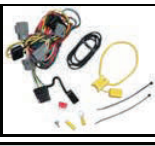


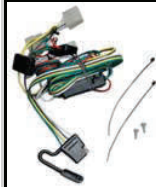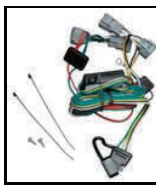



T-ONE® CONNECTOR & OEM REPLACEMENT HARNESS APPLICATION NUMERICAL

Part No.	Years	Make/Model	PC	Install Time	Amp. Rating
118367	00	Toyota Tundra	E15	10	7.5
					
118368	99-00	Dodge Van, Ram	E1	5	7.5
					
118369	99-04	Jeep Grand Cherokee	E10	10	2.1,4.2
					
118371	98-02	KIA Sportage	E12	20	2.1,5
					
118372	98-04 96-97 99-05 89-98 99-05 01-06	Chevrolet Tracker GEO Tracker Suzuki Grand Vitara Suzuki Sidekick Suzuki Vitara Suzuki XL-7	E5	5	2.1,5
					
118373	00-06	Lincoln LS	E17	20	2.1,4.2
					
118375	00-03 00-03	Ford Taurus Mercury Sable	E4	10	7.5 10
					
118376	01-03 01-03 01-03 01-03	Chrysler Town & Country Chrysler Voyager Dodge Caravan Dodge Grand Caravan	E7	15	2.1,5 15 15 15
					

Part No.	Years	Make/Model	PC	Install Time	Amp. Rating
118377	00-02 00-02	Chevrolet Express Van GMC Savana Van	E8	10	2.1,5 10
					
118378	01-02	Toyota Tundra	E17	10	7.5
					
118379	89-95 95-04	Toyota Pickup Toyota Tacoma Pickup	E14	10	2.1,5 10
					
118380	01-06	Mitsubishi Montero	E12	20	2.1,5
					
118381	07-08 04-08 00-09 00-08 00-09 03-09 01-03 03-09 06-10 00-10 05-08 06-09	Chrysler Aspen Chrysler Pacifica Dodge Dakota Pickup Dodge Durango Dodge Pickup, Ram, Full Size Dodge Sprinter Dodge Van, Ram Freightliner Sprinter Jeep Commander Jeep Grand Cherokee Jeep Liberty Mitsubishi Raider	E3	5	7.5 5 5 5 5 5 5 5 5 5 5 5
					
118383	02-07 01-05	Buick Rendezvous Pontiac Aztek	E10	20	7.5 20
					
118384	08-12 04-07 02-11 03-11 02-11 02-11 99-01 04-12 99-14 00-11 00-11	Buick Enclave Buick Rainier Cadillac Escalade Cadillac Escalade ESV Cadillac Escalade EXT Chevrolet Avalanche Chevrolet Blazer Chevrolet Colorado Chevrolet Pickup, Silverado Chevrolet Suburban Chevrolet Tahoe	E8	5	7.5 5 5 5 5 5 5 5 5 5 5
					

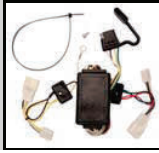T-ONE® CONNECTOR & OEM REPLACEMENT HARNESS APPLICATION NUMERICAL

Part No.	Years	Make/Model	PC	Install Time	Amp. Rating
	99-10	Chevrolet TrailBlazer	E8	5	7.5
	09-12	Chevrolet Traverse		5	
	09	Chrysler Aspen		5	
	09	Dodge Durango		5	
	09-10	Dodge Pickup, Ram, Full Size		5	
	07-12	GMC Acadia		5	
	04-12	GMC Canyon		5	
	99-10	GMC Envoy		5	
	99-01	GMC Jimmy		5	
	99-14	GMC Pickup, Sierra		5	
	00-11	GMC Yukon		5	
	01-11	GMC Yukon Denali		5	
	00-11	GMC Yukon XL		5	
	01-11	GMC Yukon XL Denali		5	
	03-09	Hummer H2		5	
	05-09	Hummer H2 SUT		5	
	06-10	Hummer H3		5	
	09-10	Hummer H3T		5	
	04-12	Infiniti QX56		5	
	03-08	Isuzu Ascender		5	
	11-12	Jeep Grand Cherokee		5	
	09-12	Jeep Liberty		5	
	09-11	KIA Borrego		5	
	10-11	Lexus GX 460		5	
	04-13	Nissan Armada		5	
	04-13	Nissan Titan Pickup		5	
	99-04	Oldsmobile Bravada		5	
	11-14	RAM 1500		5	
	11-13	RAM 2500 HD		5	
	11-13	RAM 3500 HD		5	
	05-09	Saab 9-7X		5	
	07-09	Saturn Outlook		5	
	10-11	Toyota 4Runner		5	
	09-12	Toyota Tacoma Pickup		5	
	10-13	Toyota Tundra		5	
118385	04-07	Ford Freestar	E17	45	2.1,5,6
	04-07	Mercury Monterey Van		45	
118386	00-02	Toyota Echo	E12	20	2.1,5
	03-08	Toyota Matrix		20	
118387	03	Toyota Corolla	E13	15	2.1,5
					

Part No.	Years	Make/Model	PC	Install Time	Amp. Rating
118388	96-00	Toyota RAV4	E12	20	2.1,5
					
118389	01-05	Toyota RAV4	E12	20	2.1,5
					
118390	07-09	Chrysler Aspen	E15	45	2.1,5,6
	04-09	Dodge Durango		45	
118391	05-06	Chevrolet Equinox	E8	10	2.1,5
	06	Pontiac Torrent		10	
118392	03-14	Chevrolet Express Van	E5	20	7.5
	03-14	GMC Savana Van		20	
118394	05-06	Jeep Grand Cherokee	E17	20	2.1,5
					
118395	05-07	Ford Five Hundred	E5	10	7.5
	05-07	Ford Freestyle		10	
118396	05-07	Buick Terraza	E10	15	7.5
	05-09	Chevrolet Uplander		15	
	05-09	Pontiac Montana SV6		15	
	05-07	Saturn Relay		15	
118397	05-09	Hyundai Tucson	E16	30	2.1,5
